7-6 SCOREKEEPER

QUICK SETUP

PI SETUP & DOWNLOADS

Scan for Pi setup instructions.

http://petesimple.github.io/airhockey-score-system/scorekeeper/

A ONE CYD + TABLET

Direct table scoreboard

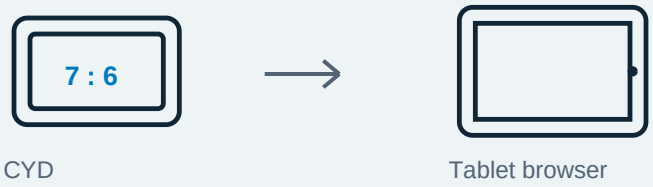

READY: Scorekeeper v1.7 or newer on your CYD.

1 POWER ON

Connect the USB-C battery. Set the CYD table number, from 1 to 30.

2 JOIN THE SAME WI-FI

On the CYD, tap WIFI and join your network. Connect the tablet to that same network.

3 OPEN THE SCOREBOARD

In the tablet browser, open your table address. Table 1: http://scorekeeper-t1.local

4 PLAY

Start a manual match on the CYD. Tap scores on the CYD; watch them update on the tablet.

B PI SERVER + CYDs

One shared scoreboard for many tables

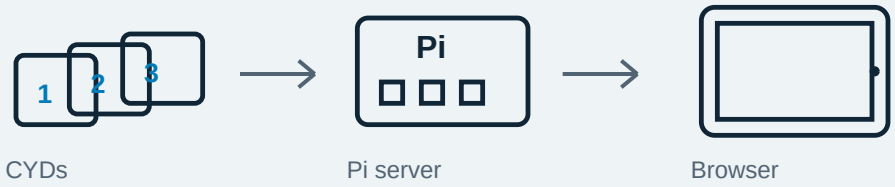

READY: Scorekeeper v1.7 or newer on Pi + CYDs.

1 POWER ON

Start the Pi with Scorekeeper Hub installed. Power each CYD from its USB-C battery.

2 JOIN THE SAME NETWORK

Connect the Pi, CYDs and viewing tablet or computer to the same router.

3 NUMBER EACH TABLE

Give every CYD a unique table number, 1 to 30. Each CYD finds the Pi automatically.

4 OPEN & PLAY

Browse to http://PI-IP:8081. Start matches on the CYDs. Tap Jumbotron for one table.

TABLE URL: http://scorekeeper-t1.local through http://scorekeeper-t30.local - match your table number.

BOTH AT ONCE: Direct table URLs keep working while the same CYDs report to the Pi server.

PI-IP = your Pi address. Not connecting? Check power + same Wi-Fi. Avoid guest Wi-Fi that blocks devices.