


LAN Mode Connection

1. LAN Mode Introduction


LAN Mode is used to connect the wireless router, which is complicated and not compatible with the "Direct Connection Mode". To back to the "Direct Connection Mode", press KEY1 on the expansion board until LED2 flashes.

2. Connect Method


1) Turn on ArmPi. Disconnect the hotspot which was connected under the "Direct Connect Mode". Then click the "+" button to choose the "LAN Mode". Please connect Wi-Fi according to the pop-up information.

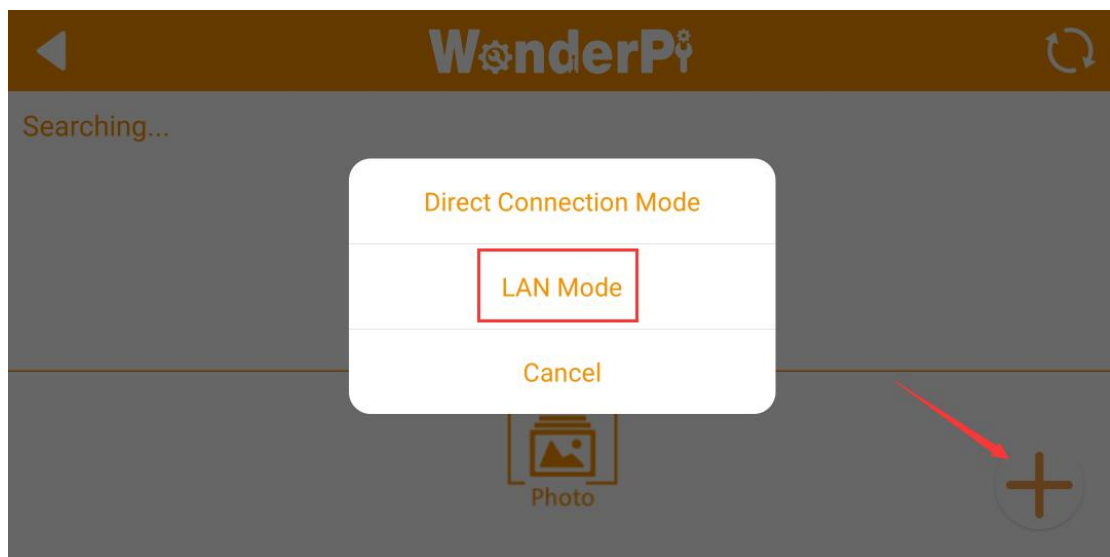

2) Click to connect Wi-Fi. (Take "LH" as example)

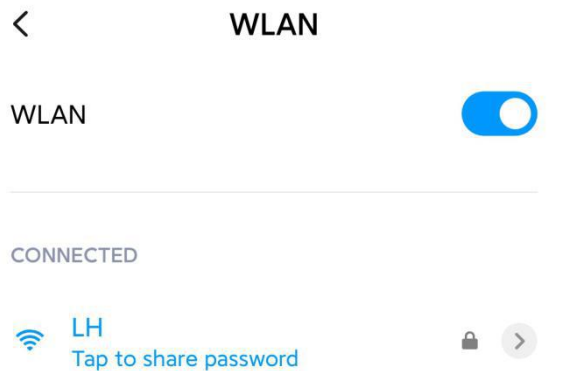

3) After completing the connection, return to the APP and input the password of the Wi-Fi. If the window does not pop up, click “LAN Mode” again. And then click “Next”. (Please confirm the Wi-Fi password is entered correctly.)

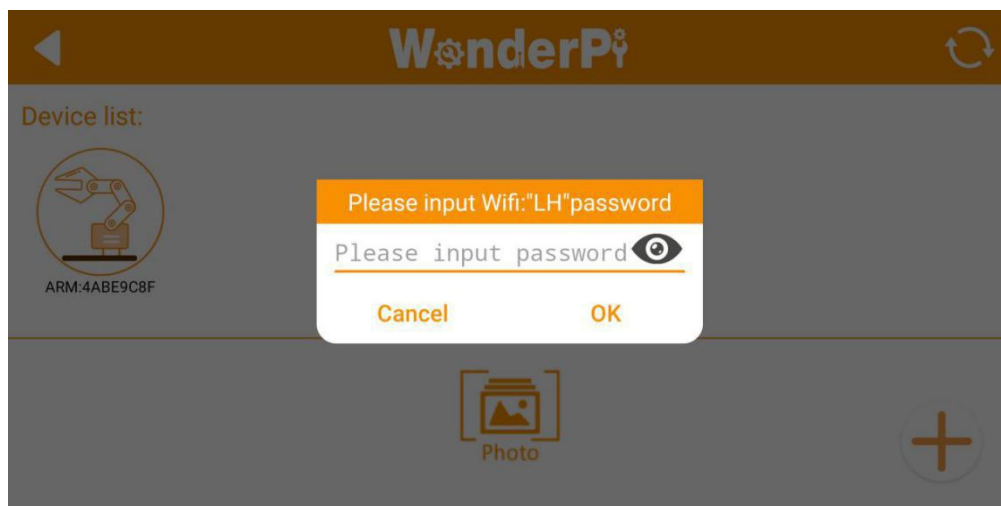


4) Go to “Settings” again according to the pop-up window to connect the hotspot with the first letters “HW”.



Connect your phone/iPad to Device hotspot:
"HW-xxxxxxx", and return to app.

[Go to connect device hotspots](#)

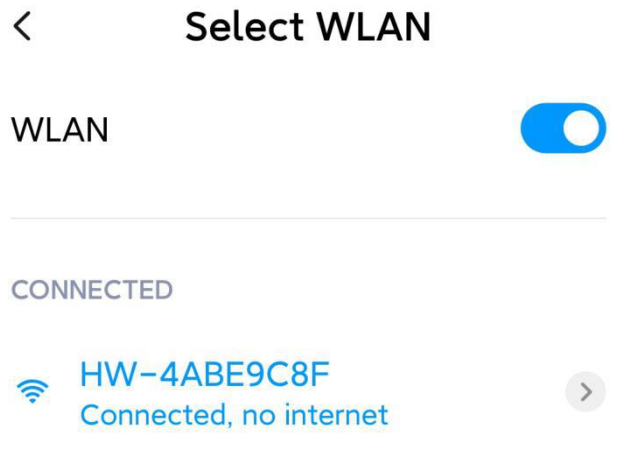

5) Connect the hotspot then return to APP. You can find that the APP is connected automatically. During the connection process, if there is a prompt about whether to join or not, click "join".



6) After a moment, it will automatically switch back to the app interface. At the same time, LED1 on the Raspberry Pi expansion board will stop flashing. LED1 and LED2 will remain on which means that Raspberry Pi networking is successful.



7) Long press the icon in the APP to check the Device IP and ID.

