
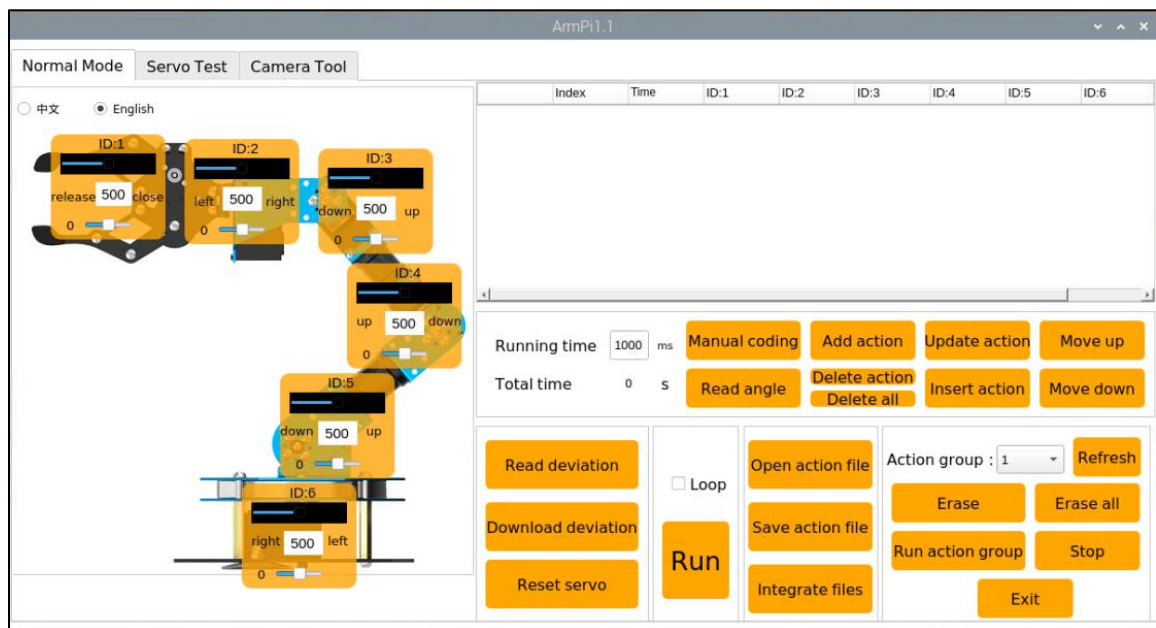


Lesson 1 PC Software Introduction

1. PC Software

Open LX terminal and double-click “ArmPi” to start it. (Click “Run” in the pop-up window)

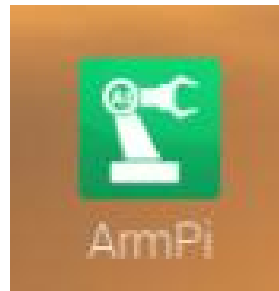

2. Function Introduction

Choose “Normal Mode” in the interface.



①: Servo operation area

Drag the corresponding servo to adjust the servo position.

Icon	Function
	ID number. Take NO.2 servo as example.
	Adjust the servo position from 0 to 1000.
	Adjust servo deviation from -125 to 125.


②: Detailed data of action


Action list display the running time and servo data of the current action.

No.	Time	ID:1	ID:2	ID:3	ID:4	ID:5	ID:6
1	1000	500	1000	500	500	500	500
2	1000	500	500	500	500	500	500
3	1000	500	500	500	500	500	500

Icon	Function
	Action group No.
	Running time of the action
	Action data of the corresponding servo. Double click the figure  to revise.

③: Action group setting

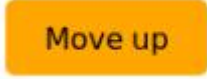Icon	Function
	Click to add the new action
 	Delete action is to delete the selected action in the list. Delete all is to delete all the actions in the list
	Update the selected action
	Insert the new action on the action list. Action time (ms)
	Move up the selected action

	Move down the selected action
	Click to open and select the provided action groups. (path:5.Appendix/2.Source Code/ArmPi/ActionGroups)
	Save the current actions in the action list into the computer.
	Click to integrate provided action groups. Choose one action group, click Integrate and then choose another one.
Action group : 	Display the saved action groups.
	Click to refresh the action groups.
	Delete the current action group file.
	(Be careful!) Delete all the action group files.
	Run the selected action group once.
	Stop running the action group.

	Exit the PC software.
---	-----------------------

④: Servo deviation setting area

Icon	Function
	Click to read the save the servo deviation.
	Click to download the deviation adjusted in the PC software.
	Click to return all the servos the middle position (500).
☐ Loop 	Click to run all the actions on the edited list once. If "Loop" is ticked, ArmPi will repeat the actions.