


Lesson 2 Read Bus Servo Status

1. Preparation

1.1 Hardware wiring

Connect bus servo to Raspberry Pi board any bus servo port Separately. Here we take LX-15D as an example.

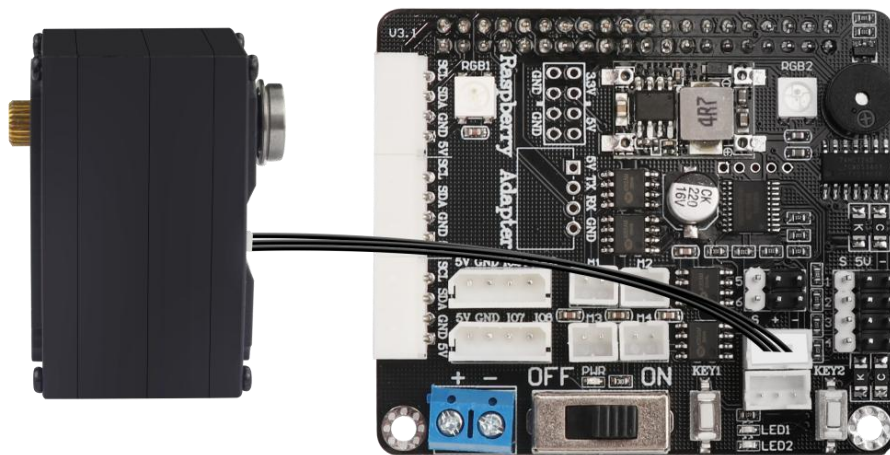


Note: the bus servo wire adopts anti-reverse plug design, please insert carefully.


1.2 ID Set

The sample program default reads the ID 2 servo status information (position, temperature, voltage). It can be set through the "Servo Test" in the ArmPi PC computer.


- 1) Open Armpi PC software in Raspberry Pi desktop

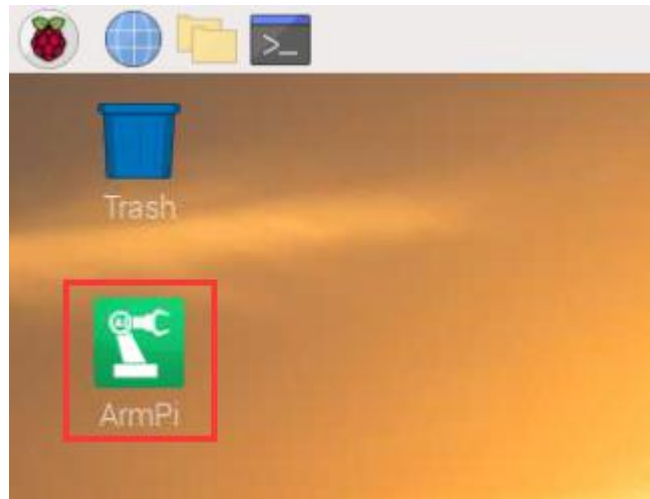

2) Click and switch to the "Servo Test" menu bar, click "Read" button, and wait for the prompt "success".

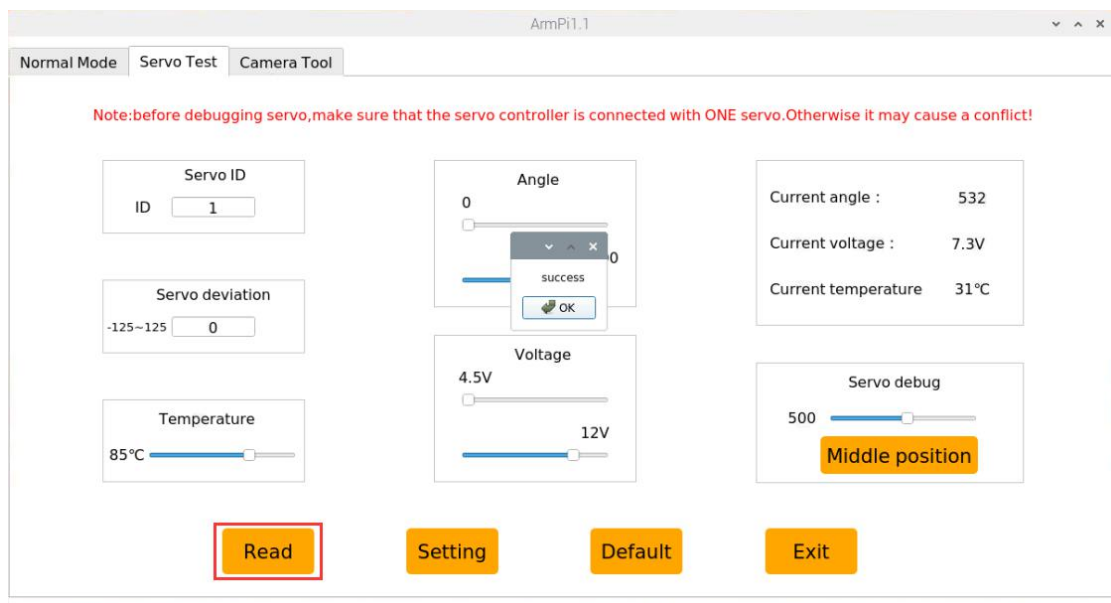

3) In the "Servo ID" area, select the ID, input servo number 2, click "Set" button, and wait for the prompt "success" to complete.

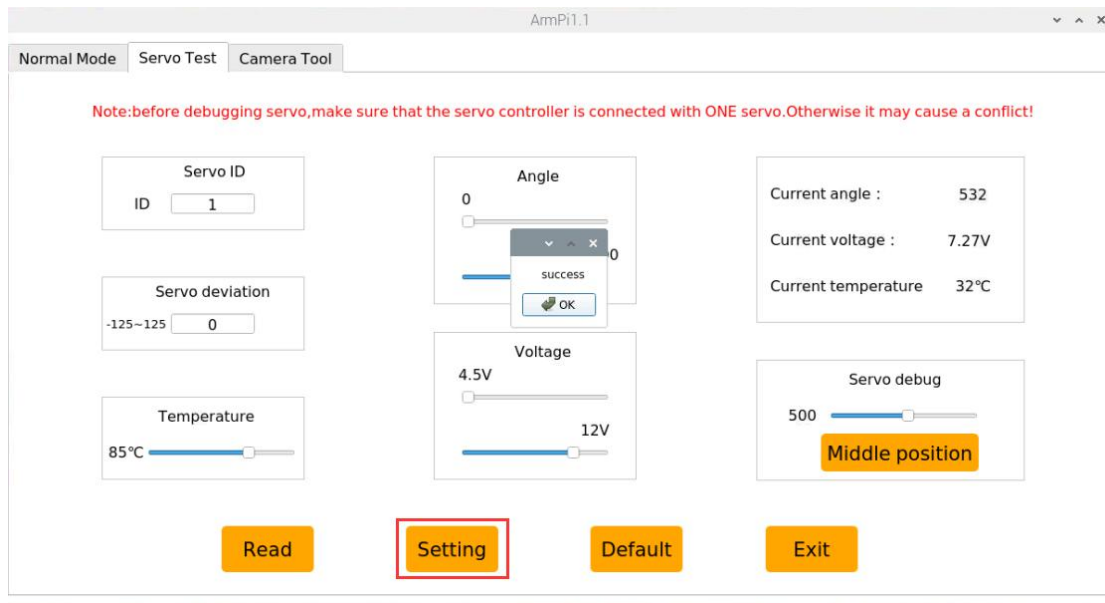


2. Have a Try


1) Click the icon shown below to enter the LX terminal command line



2) In the opened interface, first enter the command "cd ArmPi/HiwonderSDK/" and press Enter and switch to the directory where the routine is located.

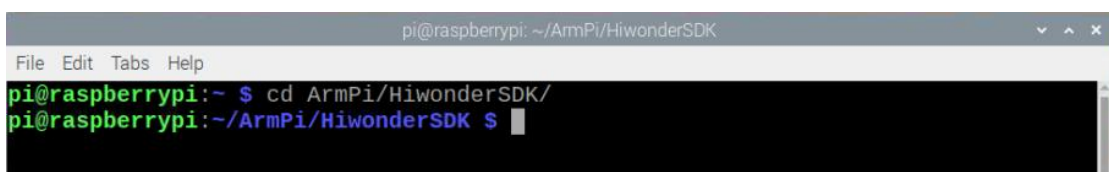

1) Input servo read status command "sudo python3 BusServoReadStatus.py" and press "Enter" key

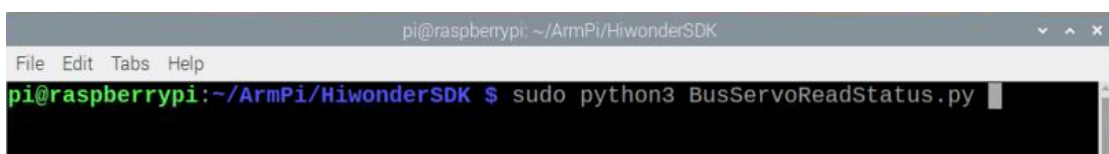

2) Close this program, press "Ctrl+C".

3. Project Outcome

The servo will slowly rotate, and its current position, temperature and voltage information will be cyclically printed on the terminal interface.

```
Online mall:https://lobot-zone.taobao.com/
-----
The following commands need to be used in the LX terminal, which can be opened
by ctrl+alt+t, or click
Click the black LX terminal icon in the upper bar.
-----
Usage:
    sudo python3 BusServoReadStatus.py
-----
Version: --V1.0  2020/08/12
-----
Tips:
    * Press Ctrl+C to close the program, if it fails, please try multiple times!
-----

Pulse: 500
Temp:  34
Vin:   7317

Pulse: 312
Temp:  34
Vin:   7243
```

And Pulse is: position information; Temp: temperature information; Vin: voltage information;