


Lesson 3 Start ArmPi FPV

1. Check USB camera connection


Before booting up, please check whether the camera connection is secured. You can connect the camera to any 4 of the USB on the Raspberry Pi controller.

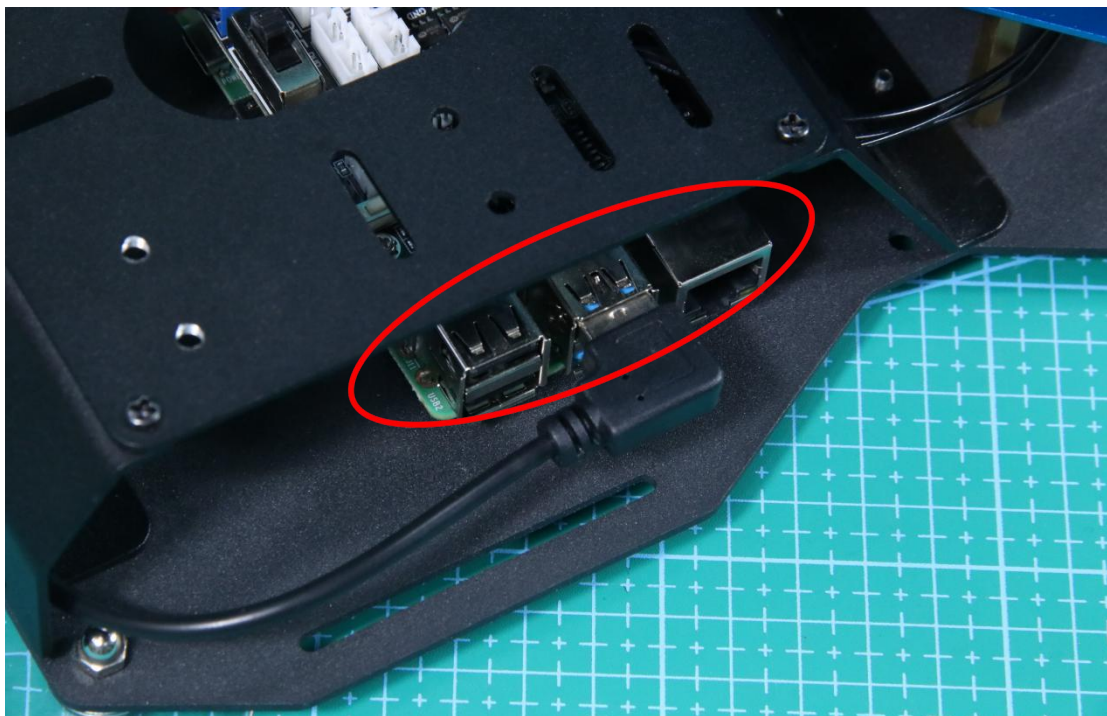

2. Connect Power Supply

Note: If the DC power cable is not connected to the expansion board, do not directly connect the adapter interface to prevent the danger of short circuit caused by the contact between the positive and negative poles.

1) Connect the butted line into the Raspberry Pi expansion board. Red line to positive pole and black to negative pole.

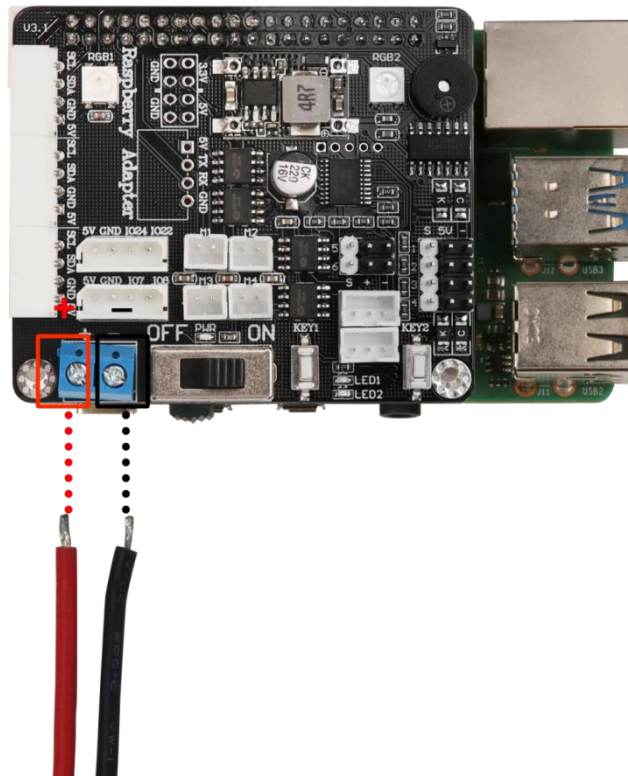


2) Take out the adapter, connect the male connector of the adapter to the female connector, and connect to power supplies.

3. Turn on ArmPi FPV

1) Switch on Raspberry Pi expansion board. The LED1 and LED2 of the Raspberry Pi will be on firstly and then the LED2 will flash every 2 seconds, which means the robot is turned on successfully.

The Raspberry Pi is a small minicomputer, hence it takes a while to boot up. And please be patient.

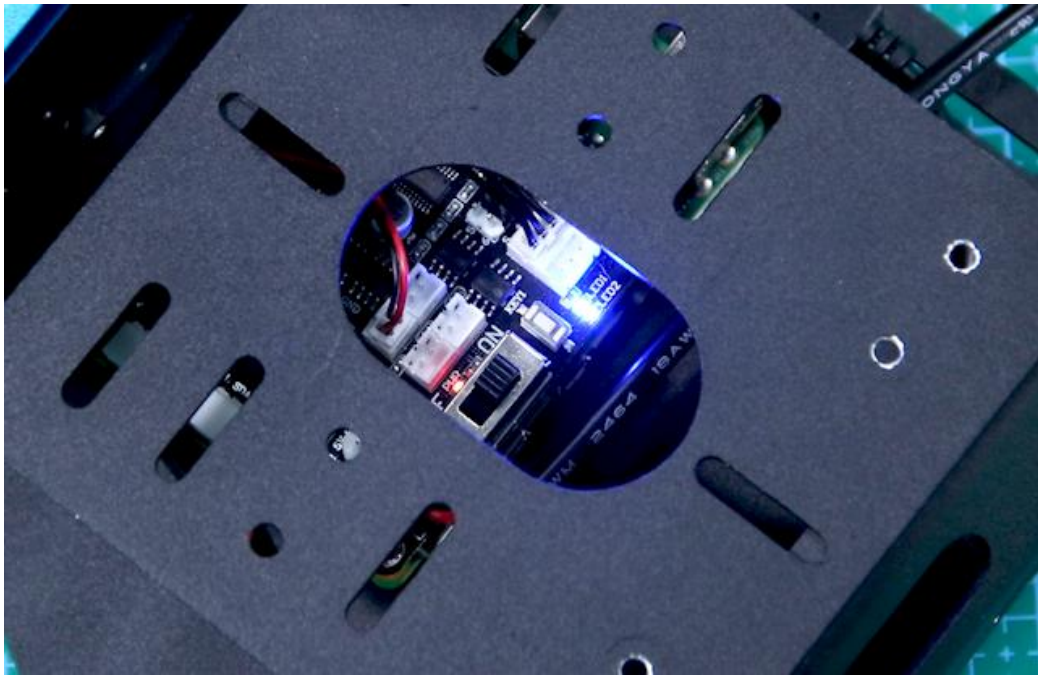

2) After turning on, Raspberry Pi will be in a AP hotspot mode and launch a Wi-Fi hotspot with a network named with the first letters “HW”.

HW-CB1C69E5	 
KR1	  
KR5	  
LH_5G	  

Next, you can move the chapter 2. Quick User Experience for the further learning.