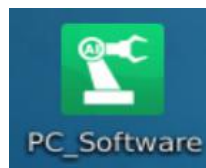


Lesson 1 PC Software Introduction

1. Open the PC software

1.1 Start by clicking the icon

Click the PC software icon to start it.



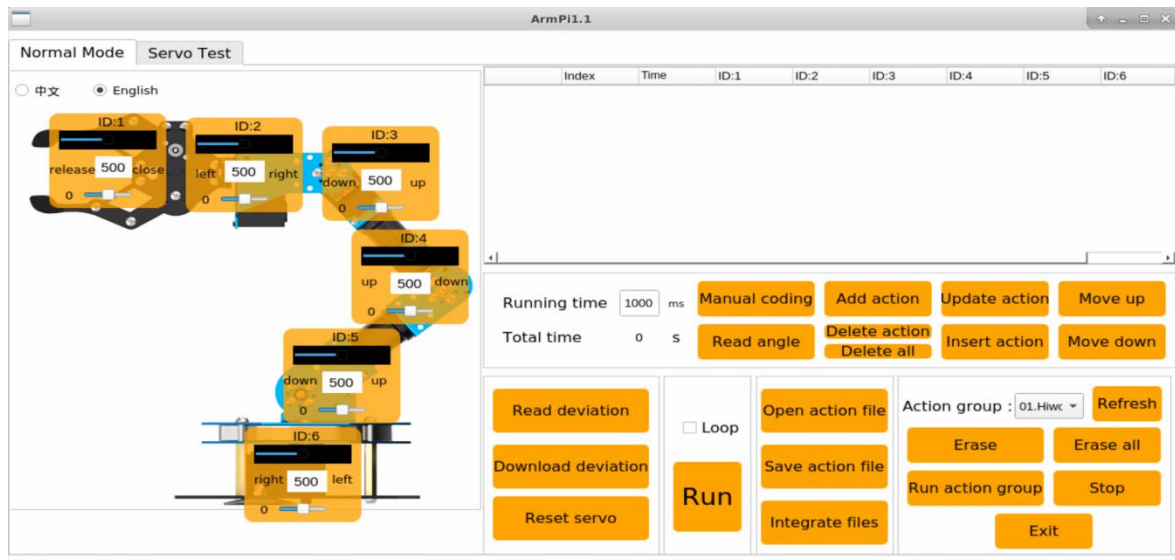
1.2 Start by entering command

1) Click  Applications and select  Terminal Emulator to open command line terminal of Ubuntu.

2) Then enter the command line "**sudo ArmPi_PC_Software/ArmPi.py**" in the terminal window to open the PC software.

2. Interface Layout

The interface of the PC software is shown in the figure below.



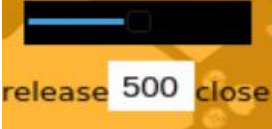
In “Normal Mode”, the interface looks like this.



①: Servo operation area

Drag the corresponding servo to adjust the servo position.


Icon	Function
	ID number. Take NO.1 servo as example.

	Adjust the servo position from 0 to 1000.
	Adjust servo deviation from -125 to 125.

②Detailed data of action

Action list displays the running time and servo data of the current action.

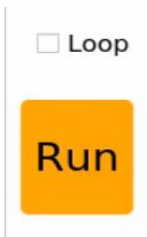
	Index	Time	ID:1	ID:2	ID:3	ID:4	ID:5	ID:6
	1	1000	500	500	500	500	500	500
	2	1000	500	500	500	500	500	500
▶	3	1000	500	500	500	500	500	500

Icon	Function
	Action group No.
	Running time of the action
	Action data of the corresponding servo. Double click the figure  to revise.

③: Action group setting

Icon	Function
Running time 	Running time of one action. Click  to modify.

Total time 0 s	Total running time of action group.
Manual coding	When you click this icon, the joints of robot will become loose and you can twist it and design the action.
Read angle	Read the angle of twisted action.
Add action	Make the current servo value of servo operation area an action and add it to the last line of the action list.
Delete action Delete all	Click “delete action” to delete the selected action in the action list. Click “Delete all” to delete all the action in the action list.
Update action	Replace the selected value of the action list. The servo value is replaced by the current servo value of the servo operation area. And the running time is replaced with the time set in “Action Time”.
Insert action	Insert action above the selected action. The action time corresponds to Action time (ms), and the angle value is the servo value.
Move up	Exchange the selected action with the action on the previous line.

	Exchange the selected action with the action on the next line.
	Click to run the action of the action list. If you select “Loop”, the robot will repeat the action.
	Click and select the action group to be opened to load its data into the action list. Path: ArmPi_PC_Software->ActionGroups
	Save the current actions in the action list into the computer. (ArmPi_PC_Software->ActionGroups)
	Click to integrate provided action groups. Choose one action group, click Integrate and then choose another one.
Action group : 	Display the saved action groups.
	Click to refresh the action groups.
	Delete the current action group file.
	(Be careful!) Delete all the action group files.

	Run the selected action group once.
	Stop running the action group.
	Exit the PC software.

④: **Servo deviation setting area**

Icon	Function
	Click to read the save the servo deviation.
	Click to download the deviation adjusted in the PC software.
	Click to return all the servos the middle position (500).