

Enter Command to Calibrate Position

1. Caution

In the folder “2. Quick User Experience/Lesson 1 Position Calibration”, we have learned how to calibrate the position of camera with smart phone APP. In this lesson, we are going to learn how to calibrate via entering command. The results of these two methods are the same so that you can choose the way you like.


2. Operation Steps

1) Connect ArmPi to the Raspberry Pi desktop with graphical desktop-sharing system. For more details please go to the folder “3.AI Vision Games Lesson/1. Set Development Environment/1. Installation(Must-read)”.

2) Click  or press “Ctrl+Alt+T” to open the LX terminal.



3) Enter “cd ArmPi/Functions/” command, and then press “Enter” to come to the category of games programmings.

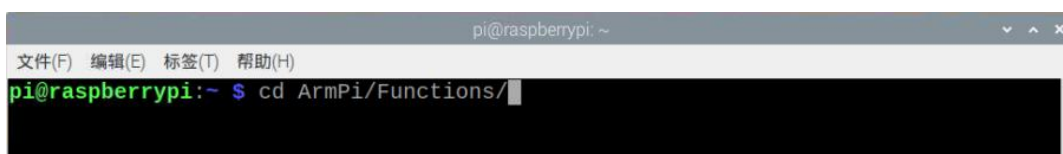

4) Enter “sudo python3 Calibrating.py” command and press “Enter” to run the

programming of camera position calibration. After starting program, a camera will pop up to send back the image in real time.

```
pi@raspberrypi: ~/ArmPi/Functions
文件(F) 编辑(E) 标签(T) 帮助(H)
pi@raspberrypi:~/ArmPi/Functions $ sudo python3 Calibrating.py
```

5) Move the base of the camera stand to adjust the camera's field of view. In this step, the red cross on the camera screen needs to completely overlap the black cross on the map.

