Settings and help.

Open Settings

Hold **BOOT** for Settings. Hold volume for **Sound**: Speech/Interface. **Agent → Voice**: modes and native voice models. Set Hermes Classic models in Hermes. **Guide** replays the tour. Short BOOT goes back.

Add a Wi-Fi network

Open **Settings → Status → Network → Wi-Fi**, then scan both codes again. Known networks are remembered.

Setup page will not open

Stay on KUBIK-XXXX and open **http://192.168.4.1/** in your browser.

No pairing code or reply


Keep the agent computer and Kubik service running. **Settings → Status** shows IP, MAC and server address. See the GitHub setup guide.

---

https://github.com/pfrankov/kubik
Help, downloads and updates

KUBIK

Set up your agent.
Connect. Start talking.

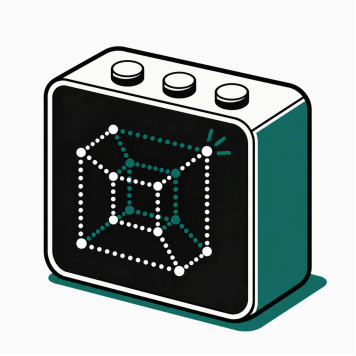


Have USB-C power, a phone and your **2.4 GHz Wi-Fi** password ready. Prepare OpenClaw on page 3.

Open the setup guide on GitHub
https://github.com/pfrankov/kubik
Download the kit for the detailed setup guide.

Know the buttons.


C6 2.16: diagram and controls below.

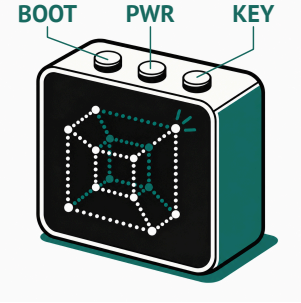

BOOT Left	**Press:** go back one screen. **Hold:** open or close Settings.
PWR Middle	**Press:** screen off or on. **Hold ~2 s:** power off or on.
KEY Right	Start voice input. Ways to speak and send: page 7.

S3 1.8 V2: BOOT and PWR only. No KEY. Short BOOT talks on the connected home screen; elsewhere it goes back. Hold BOOT for Settings. PWR works as above.

Talk to Tess.

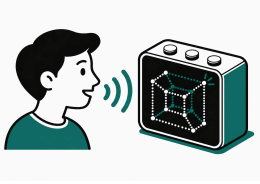

Say **“Hi Tessa”**, then your question. C6 buttons:

STT / Classic

Hold **KEY**, speak, release. Or press once to start, again to send.

Realtime

Press **KEY**, speak, then pause to send.

GPT Live

Start with KEY or “Hi Tessa”. Speak at **Listening**, even during replies. KEY ends it; pauses do not.

S3 1.8 V2: short BOOT replaces KEY. Classic: press, speak, press again or tap; 60 s maximum. No held recording: hold BOOT opens Settings.

Voice output + volume **20+**: spoken replies. Otherwise: text.

3 · Confirm the connection

Approve your Kubik.

If Kubik says Open Telegram, match the code in your agent bot chat and tap **Allow**. Otherwise, run this on your OpenClaw server:

```
openclaw pairing approve kubik CODE
```

Replace CODE with the current code on your device. No listing command is required.

You can also approve it in OpenClaw Web UI / Channels / Pairing requests.

Connected: follow Guide; BOOT returns home.

No match? Check the GitHub setup guide.

1 · Prepare OpenClaw

Prepare your agent.



Install OpenClaw on your computer or server. Check a text reply, then add the npm channel:

```
openclaw plugins install openclaw-kubik
```

```
openclaw channels add --channel kubik --enable
```

Configure speech using the GitHub guide. Keep OpenClaw running.

At home, use the same trusted network. For a remote server, prepare the connection using the GitHub guide first.

Ready: OpenClaw running with the Kubik channel.

Detailed installation and speech settings are on GitHub.

2 · On your phone

Scan both QR codes.

Connect USB-C power. Press PWR to wake the screen; if powered off, hold it for about two seconds.





First: join Kubik's Wi-Fi

Scan **Scan to join Wi-Fi** and join **KUBIK-XXXX**. Stay connected if your phone says "no internet".

Then: open setup

Wait for the gold title **Scan again for setup**. Scan the **new QR** to open the setup page.

Next: "Let's connect Kubik" opens on your phone.

Connect to your agent.

1. Select your **2.4 GHz Wi-Fi**, enter its password and tap **Continue to agent**.
2. Continue with **OpenClaw**.
3. **OpenClaw:** at home, leave **Server address** blank. Remote OpenClaw: enter **kubik://PUBLIC-IP:18790**.
4. Tap **Connect Kubik**.

Kubik saves the settings and restarts. Your phone may disconnect from KUBIK-XXXX. Watch Kubik now.

The address belongs to the Kubik integration, not your agent's dashboard or speech provider. The online guide shows where to find it.

Next: Kubik shows its OpenClaw pairing code.

No code? See page 8.