

Procédure : Préparation Routeur 4G Teltonika (TRB140)

Cette procédure détaille la mise en service, la mise à jour et la configuration avancée d'un routeur Teltonika pour une intégration réseau.

1. Informations de Connexion

- **IP par défaut** : 192.168.2.1
- **Identifiants par défaut** : admin / admin01

2. Mises à jour du Firmware (Étape Critique)

Avant toute configuration, il est impératif de mettre à jour le système.

- **Source** : https://wiki.teltonika-networks.com/view/TRB140_Firmware_Downloads (Choisir la version "**Mass Production**").


Attention : Si la version actuelle est TRB1400_R_00.01.06.1 ou plus ancienne, vous **devez** installer la mise à jour intermédiaire avant d'appliquer la dernière version.

https://wiki.teltonika-networks.com/view/TRB140_Legacy_FW_Upgrade_Instructions

3. Configuration via l'Assistant (Wizzard)

L'assistant s'ouvre à la première connexion. Suivez ces étapes :

- I. Modifier le mot de passe par défaut par Aqwzsx00.

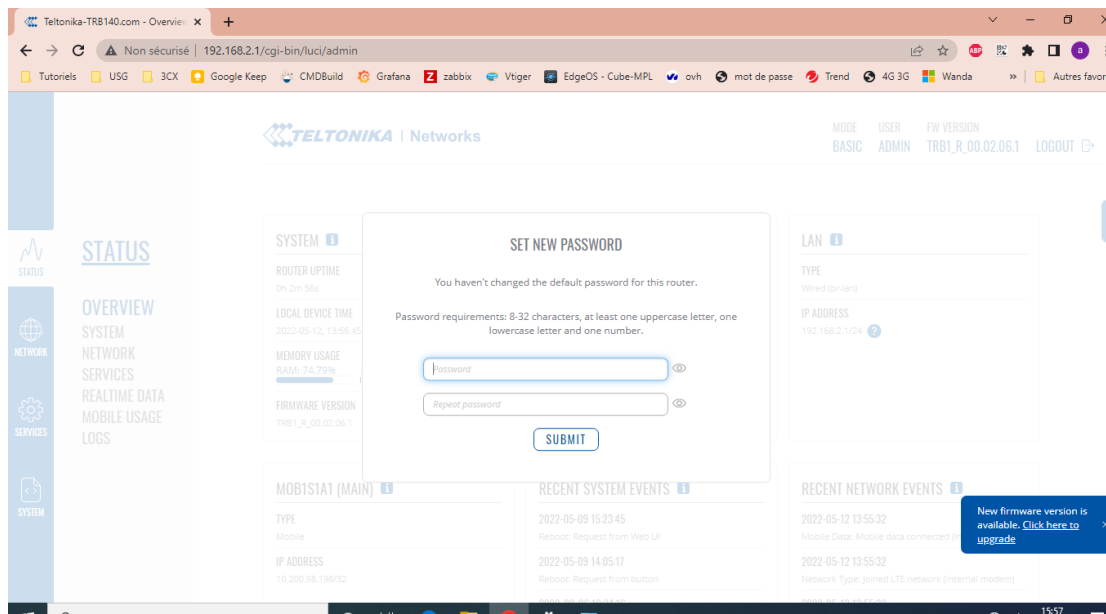

II. Régler le fuseau horaire sur **EUROPE/Paris** et passer le mode en **Advanced**.

^ GENERAL SETTINGS

Current system time Thu May 12 13:58:13 2022 [SYNC WITH BROWSER](#)

Time zone **Europe/Paris**

^ WEBUI MODE SETTINGS

Mode **Advanced**

[SKIP WIZARD](#) [NEXT](#)

New firmware version is available. [Click here to upgrade](#)

III. LAN & DHCP :

- Changer l'IP du routeur pour une adresse moins commune (éviter 192.168.1.1 ou .254).
- Activer ou désactiver le serveur DHCP selon le besoin du projet.

^ LAN CONFIGURATION

IP address

Netmask

^ DHCP CONFIGURATION

Enable DHCP ☒ off on

Start

Limit

Lease time

Units

You have unsaved changes. [Click here to them.](#)

New firmware version available. [Click here to upgrade](#)

< BACK

SKIP WIZARD

NEXT

IV. Connectivité Mobile :

- Décocher **"Auto APN"**.
- **PIN** : 0000 (pour les cartes SIM Unyc).
- **APN Unyc** : fnetnrj (à confirmer sur le Kiosque Unyc).

^ MOBILE CONFIGURATION | MOB1S1A1

Auto APN

☐

off on

APN

NRJ WEB (fnetnrj)

▼

PIN

0000

< BACK

SKIP WIZARD

V. RMS : Désactiver le service RMS (sauf besoin spécifique).

^ RMS SETTINGS

Connection type

Disabled

▼

Hostname

rms.teltonika-networks.com

Port

15009

^ STATUS

Management status	Enabled
Connection state	Failure (Error: Device is not registered in RMS. Please login to rms.teltonika.lt and add this device to your account device list.)
Serial number	1115916256 
IMEI	865546046883100 
Next Connection After	00:00:11

REFRESH 

CONNECT

< BACK

SKIP WIZARD

SAVE & APPLY

You have unsaved changes. [Click here to them.](#)

4. Validation de la connexion

Une fois les étapes du Wizard terminées :

- **Vérification** : Le routeur est désormais connecté à internet.

5. Configuration de la DMZ (Si nécessaire)

Pour rediriger tout le trafic vers un équipement interne (serveur, pare-feu) tout en gardant l'accès au routeur.

Aller dans : Network -> Firewall -> Port Forwards

Créer **deux règles distinctes** (nécessaire pour conserver le port d'administration 8443) :

- **Règle 1** : Ports 1 à 8442 vers l'IP fixe de destination.
- **Règle 2** : Ports 8444 à 65535 vers l'IP fixe de destination.

NAME	MATCH	FORWARD TO	STATUS
Enable_SSH_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at port 22	IP 127.0.0.1, port 22 in lan	off on
Enable_HTTP_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at port 80	IP 127.0.0.1, port 80 in lan	off on
dt_allow_remote_http_through_D...	IPv4-tcp From any host in wan Via any router IP at port 80	IP 192.168.21.1, port 80 in lan	off on
Enable_HTTPS_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at port 8443	IP 127.0.0.1, port 8443 in lan	off on
dt_allow_remote_https_through_...	IPv4-tcp From any host in wan Via any router IP at port 8443	IP 192.168.21.1, port 8443 in lan	off on
Enable_CLL_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at ports 4200-4220	IP 127.0.0.1, ports 4200-4220 in lan	off on

NAME	PROTOCOL	EXTERNAL ZONE	EXTERNAL PORT	INTERNAL ZONE	INTERNAL IP ADDRESS	INTERNAL PORT	ACTION
dmz 1	TCP+UDP	wan	1-8442	lan	192.168.21.245 (reg300 lan)	1-8442	ADD
dmz 2	TCP+UDP	wan	8444-65535	lan	192.168.21.245 (reg300 lan)	8444-65535	ADD

Attention : L'adresse IP de votre serveur (ou équipement de destination) doit être **fixe**. Pour cela, effectuez une **Réservation IP** dans les paramètres DHCP du routeur Teltonika afin qu'elle ne change jamais.

The screenshot shows the Teltonika web interface. On the left sidebar, the 'NETWORK' menu is expanded, and 'INTERFACES' is selected. The main content area shows the 'INTERFACES: LAN' configuration page. The 'GENERAL SETUP' tab is active, showing fields for Protocol (Static), IPv4 address (192.168.21.1), IPv4 netmask (255.255.255.0), IPv4 gateway (0.0.0.0), IPv4 broadcast (0.0.0.0), and DNS servers (0.0.0.0). Below this is the 'DHCP SERVER' section with 'GENERAL SETUP' tab, showing 'Enable DHCP' (Enable), 'Start' (100), 'Limit' (100), 'Lease time' (12h), 'Start IP address' (192.168.21.100), and 'End IP address' (192.168.21.249). At the bottom is the 'STATIC LEASE' section with a table header: NAME, MAC, IP. Below the table is an 'ADD LEASE' button. Red arrows point to the 'INTERFACES' menu item, the 'INTERFACES: LAN' tab, and the 'ADD LEASE' button.

The screenshot shows the 'ROUTEUR SETTINGS' page. It has fields for 'MAC address' (5ce28c61:19:25) and 'IP address' (192.168.21.245). There are '< BACK' and 'SAVE & APPLY' buttons. Red arrows point to the 'MAC address' and 'IP address' fields, and the 'SAVE & APPLY' button.

The screenshot shows the 'STATIC LEASE' table. The table has columns: NAME, MAC, IP. The first row shows 'routeur' with MAC '5ce28c61:19:25' and IP '192.168.21.245'. There are edit and delete icons at the end of the row.

NAME	MAC	IP
routeur	5ce28c61:19:25	192.168.21.245

6. Accès à Distance


Pour administrer le routeur à distance via l'IP publique.

- I. Dans Network -> Firewall -> Port Forwards, assurez-vous que les règles suivantes sont **DÉSACTIVÉES** :
 - Enable_HTTP_WAN_Passthrough
 - tlt_allow_remote_http_trough
 - Enable_HTTPS_Wan_Passthrough
 - tlt_allow_remote_https_trough

Enable_SSH_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at port 22	IP 127.0.0.1, port 22 in lan	   off on
Enable_HTTP_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at port 80	IP 127.0.0.1, port 80 in lan	   off on
tit_allow_remote_http_through_D...	IPv4-tcp From any host in wan Via any router IP at port 80	IP 192.168.2.1, port 80 in lan	   off on
Enable_HTTPS_WAN_PASSTHROU...	IPv4-tcp From any host in wan Via any router IP at port 8443	IP 127.0.0.1, port 8443 in lan	   off on
tit_allow_remote_https_through_...	IPv4-tcp From any host in wan Via any router IP at port 8443	IP 192.168.2.1, port 8443 in lan	   off on
Enable_CUI_WAN_PASSTHROUGH	IPv4-tcp From any host in wan Via any router IP at ports 4200-4220	IP 127.0.0.1, ports 4200-4220 in lan	   off on

II. **Activation** : Allez dans System -> Administration -> Access Control.

- Cocher **"Enable remote HTTPS access"**.
- Configurer le port sur **8443**.

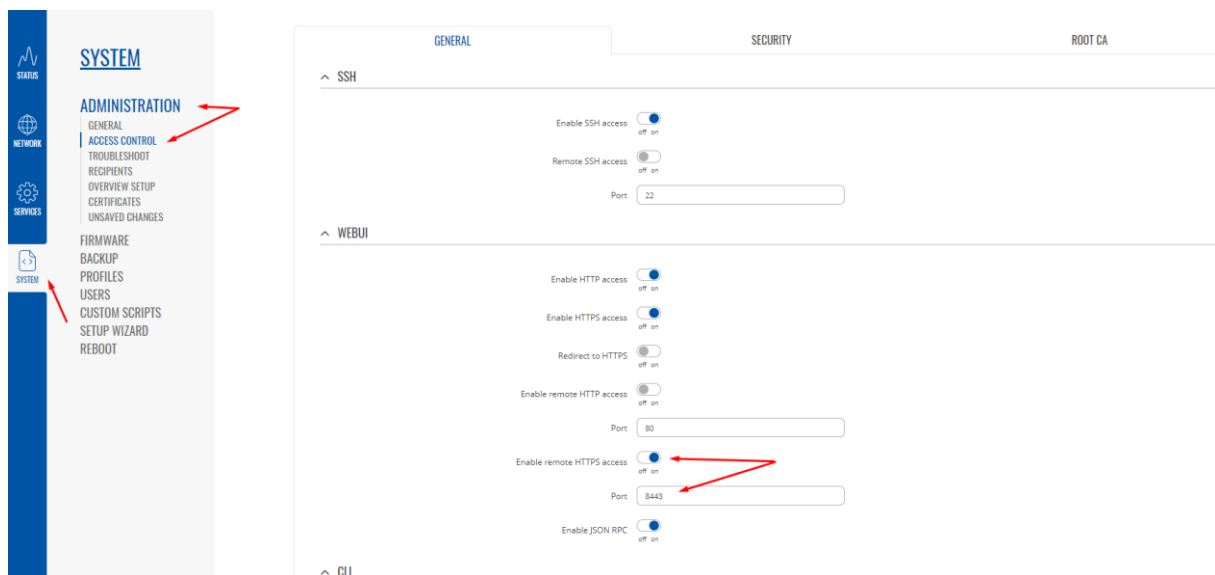

The screenshot shows the Mikrotik WinBox interface. On the left, the 'SYSTEM' menu is expanded, and 'ACCESS CONTROL' is selected. On the right, the 'ACCESS CONTROL' configuration page is displayed, with tabs for 'GENERAL', 'SECURITY', and 'ROOT CA'. The 'SSH' section shows 'Enable SSH access' and 'Remote SSH access' toggles, both turned on, and a 'Port' field set to 22. The 'WEBUI' section shows 'Enable HTTP access', 'Enable HTTPS access', 'Redirect to HTTPS', 'Enable remote HTTP access', 'Enable remote HTTPS access', and 'Enable JSON RPC' toggles. The 'Enable remote HTTPS access' toggle is turned on, and the 'Port' field is set to 8443. Red arrows indicate the navigation path and the specific settings being configured.

7. Optimisation pour la VoIP (Désactiver SIP ALG)

Étape indispensable pour éviter les problèmes de téléphonie IP (appels muets, déconnexions).

1. **Étape A** : NETWORK -> FIREWALL -> Automatic helper assignment : mettre sur **OFF** -> **Save & Apply**.
2. **Étape B** : NETWORK -> FIREWALL -> Zone Settings -> ADVANCED SETTINGS.

- Décocher **Conntrack helpers** (notamment SIP VoIP connection tracking (sip)).
- **Save & Apply.**