

Add manual / automatic
point

Navigation point list

Navigation variable

Navigation Analysis

Add Point 

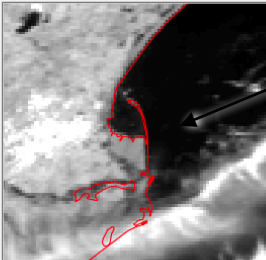
Navigation Points

Latitude	Longitude	Row	Col	Status
9.7223 N	79.8963 E	4761	450	Manual
10.3311 N	79.8218 E	4703	431	Manual
8.1700 N	79.7818 E	4915	471	Manual
8.4795 N	81.2026 E	4855	615	Manual
16.8708 N	82.3307 E	4013	539	Manual

Navigation Offset

Variable:

Box size:

Offset image 

Row offset:

Column offset:

Delete point

Clear point list

Offset controls