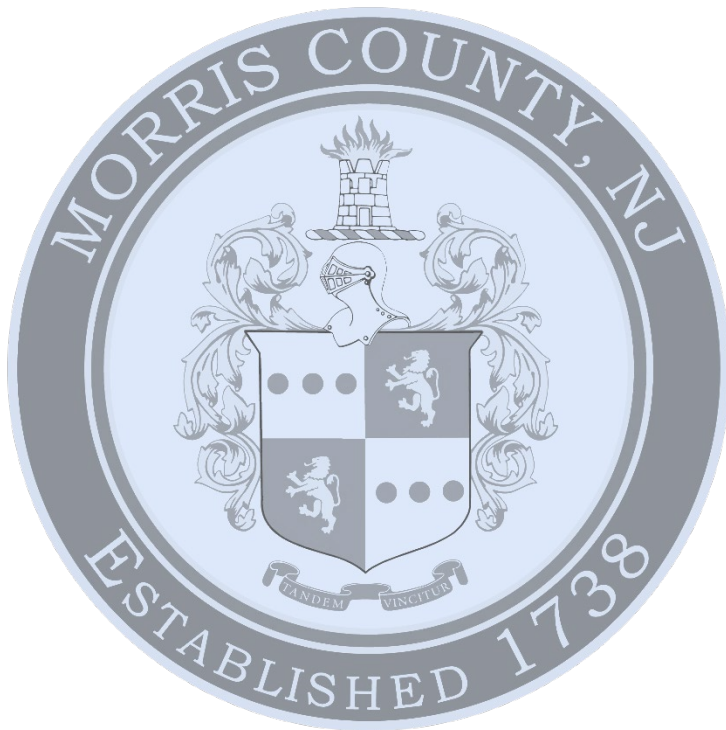


Voting Machine Manual

Election Day

Morris County

State of New Jersey



THIS PAGE WAS INTENTIONALLY LEFT BLANK

Contents:

Opening Procedures.....	3
Closing Procedures.....	9
Troubleshoot Guide.....	15

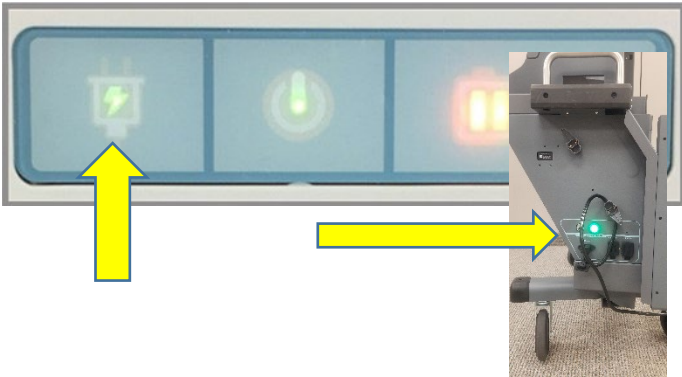
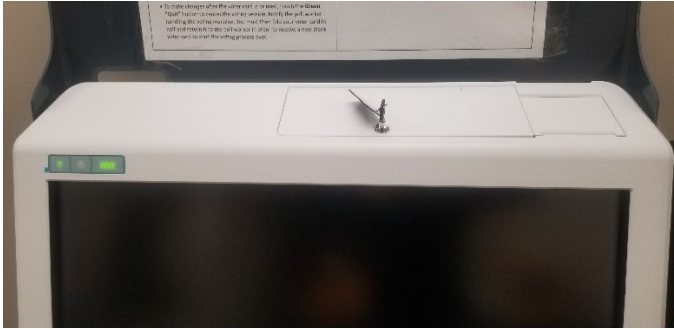
THIS PAGE WAS INTENTIONALLY LEFT BLANK

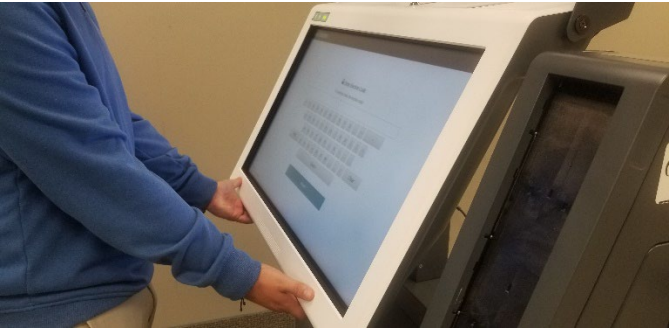
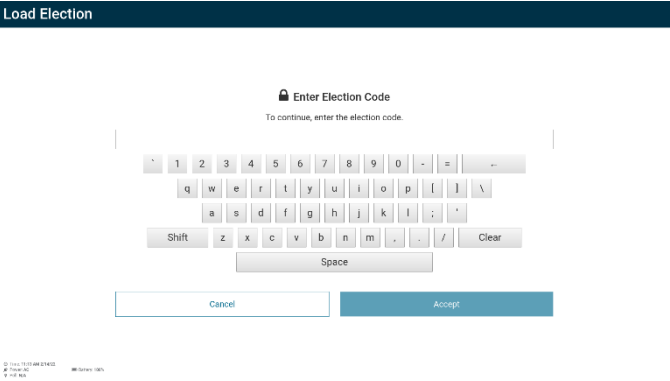
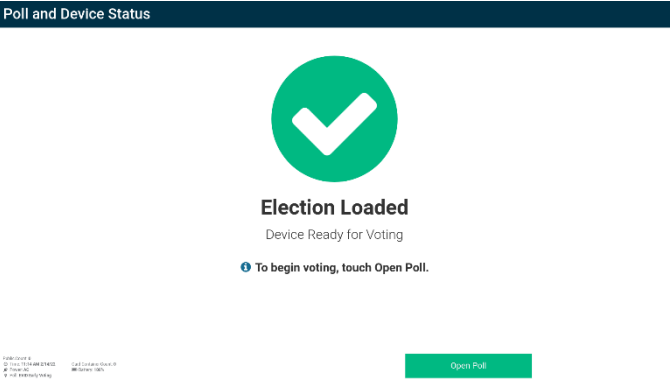
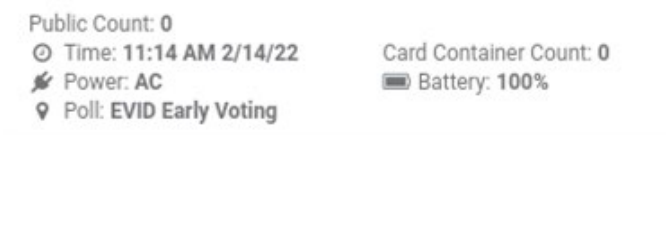
Opening Procedures for ExpressVote XL


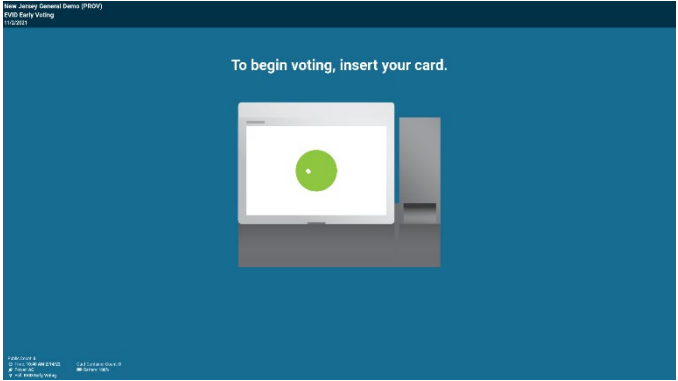
If any of the seals are missing, broken, or do not match the key envelope, call the Voting Machine Warehouse immediately. Place used seals in the green Spoiled Ballot/Used Seal Bag

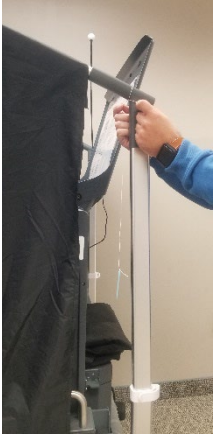
1.	• Use the chrome handles to position the machine. • Press down the locks on the swivel castors to secure the wheels in place.	
2.	• Move the light stick to the vertical position. • Move to the front of the machine and cut the white seal on the machine covers using the scissors in the Clear Envelope. • Put the used seal in the green Spoiled Ballot/Used Seal Bag. • Remove the machine covers. • Fold and place the covers on the back of the machine.	
3.	• Locate the Key Envelope in the Red Bag. • Confirm that the machine number on the Key Envelope matches the number on the machine.	

4.	• Using the barrel key located in the Key Envelope, open the back compartment. • The materials will be in the back of your machine. • If your district has two machines, the materials will be split up between them. • The container with the Activation Cards will be in the back of one machine, and the extension reel and power strips will be in the back of the second machine. • Close the back compartment and lock. *The container with the activation cards, extension reel, and the power strips are in the back of the machine. The power strips are for the ePollbook stations <u>ONLY</u>.*	
5.	• Verify the number on the red seal on the back of the Top Access Compartment matches the number recorded on Key Envelope. • Cut the red seal and place in the Spoiled Ballot/Used Seal Bag.	
6.	• Lift the screen cover.	

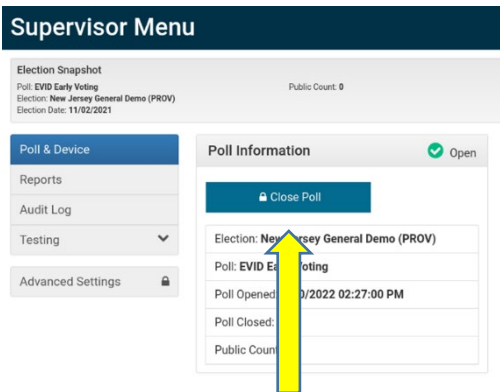
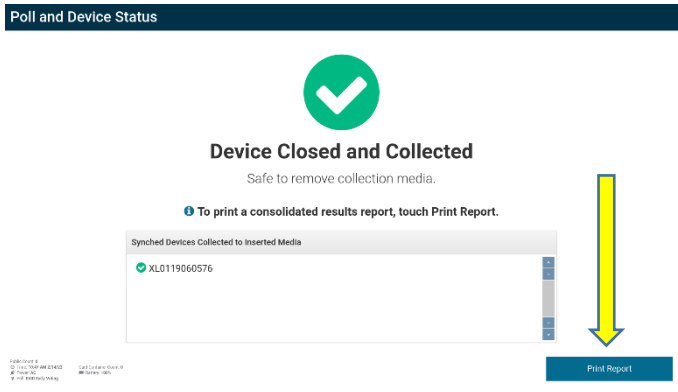
7.	• Plug the power cord into a <u>working</u> outlet. • Make sure the cord is secured so no one will trip over it. • Verify the green light above the power cord is lit. • Verify the plug icon on the upper left panel is illuminated. *You can daisy-chain up to four (4) machines <u>per outlet</u>.*	 The image shows a diagram of a power strip with three outlets. The leftmost outlet is highlighted with a green plug icon and a yellow arrow pointing to it. A second yellow arrow points from this outlet to a photograph of a machine's power cord plugged into a similar outlet, which has a green light above it.
8.	• Use the barrel key to unlock and open the Top Access Compartment. • Do NOT remove the key.	 A photograph of the machine with its top access compartment open. A small key is visible on the top surface of the compartment.
9.	• Click the RED power button. • Verify the middle light on the upper left panel above the screen is illuminated.	 A close-up photograph of the machine's control panel. A red power button, which also features a power symbol, is highlighted with a yellow rectangular box. To its left is a black button labeled 'MODE'.
10.	• Close and lock the Top Access Compartment. • Return the key to the Key Envelope. • Take the needle and thread out of the Key Envelope and place to the side.	 A photograph showing a person's hands placing a key into a yellow envelope. The envelope has some text and a small slot for the key.

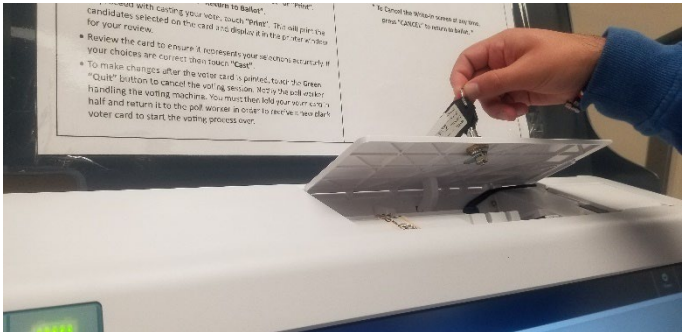
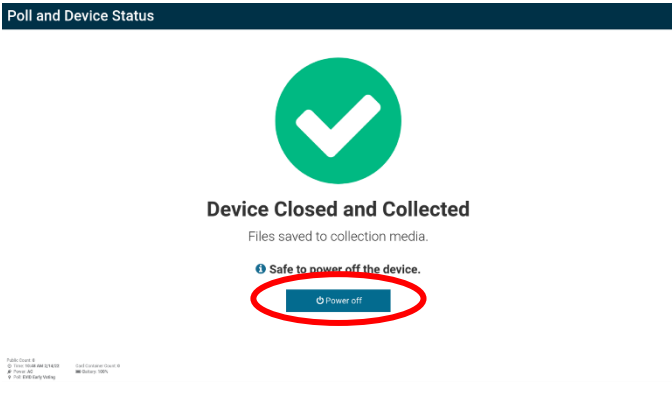
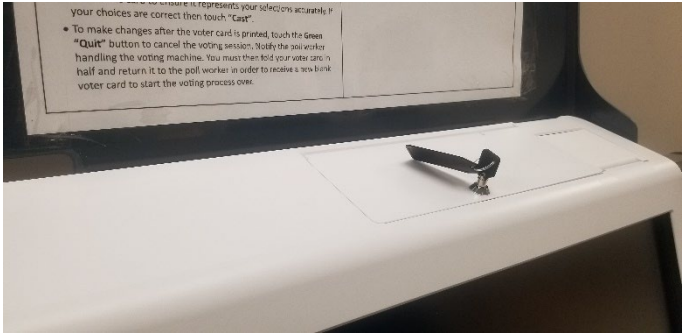
11.	Use two hands to pull from the bottom of the screen to adjust the angle.	
12.	- Enter the Election Code (password) which can be found in the Key Envelope. - Select Accept - Put the Key Envelope back in the Red Bag. *The Election Code is case sensitive.*	
13.	The Poll and Device Status Screen will display.	
14.	Verify the Public Counter total on the lower left corner of the screen is ZERO (0).	

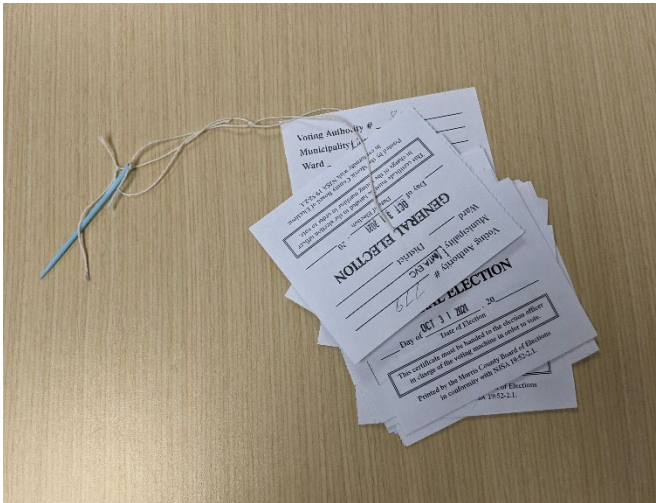
15.	• Select Open Poll • Two (2) copies of the Zero Report will print automatically • Pull up on the report to remove it from the printer • Verify all numbers are ZERO (0). TWO Poll Workers from opposing parties must sign both Zero Reports and place inside the Red Bag *ZERO REPORT MUST NOT TOUCH THE SCREEN WHILE PRINTING*	 To begin voting, touch Open Poll. 
16.	• Select Continue • The card insertion screen will display.	
17.	• Unlatch the white clamps and raise the curtain rods to maximum height. • Re-latch the white clamps to secure the rods.	

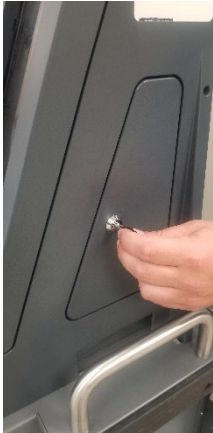
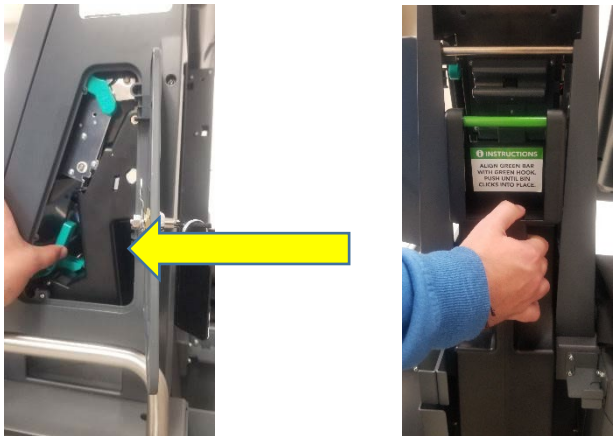
18.	• Release ONLY the Velcro strap on the left side of the curtain tube located on the bottom back of machine. • Remove the cap and the curtain. • Be sure to replace the cap on the tube when finished.	
19.	• Insert the metal curtain tubes into the curtain rods. *Two poll workers may be needed for this step.*	
20.	• Hang the needle and thread located in the Key Envelope on a curtain rod for the Authority Slips.	

Closing Procedures for the ExpressVote XL

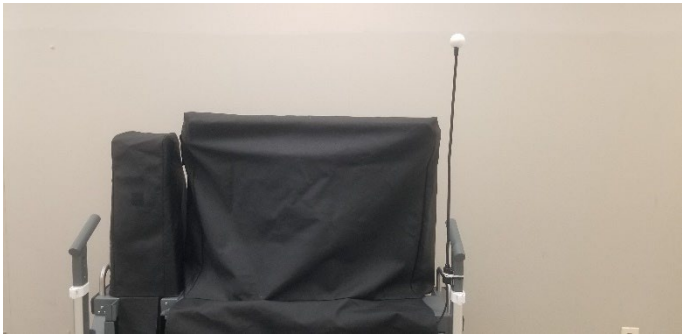
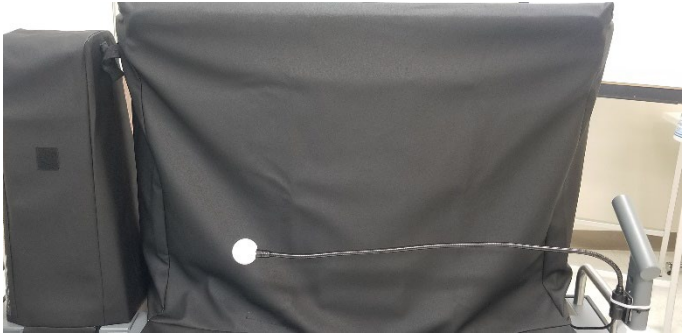
1.	- Select the Public Counter on the bottom left of the screen. - The Poll and Device Status page will display. - Select Mode on the top right corner of the screen. - Enter the Election Code found in the Key Envelope and press accept. *The Election Code is case sensitive.*	
2.	- Select the Poll and Device tab located in the first column on the left of screen. - Select Close Poll - Enter the Election Code	
3.	<u>Three (3) copies of the Results Report will print automatically, they will not be pre-cut.</u> - If you need more, press the "Print Report" button in the bottom right-hand corner. All sign 3 copies of the report; two (2) go in the Red Bag, the judge of the district takes the third. *RESULTS REPORT MUST NOT TOUCH THE SCREEN WHILE PRINTING*	

4.	- Use two hands to gently push the bottom of the screen to the original vertical position. - Use the barrel key to unlock and open the Top Access Compartment.	
5.	- Remove the red seal tape securing the Memory Stick. - Place the red seal tape on the index card in the Key Envelope. - Place two fingers on the Memory Stick and pull straight up. - Place the Memory Stick in the Small Yellow Media Stick Pouch. *DO NOT PULL ON STRING TO REMOVE MEMORY STICK*	
6.	- The Power Off icon will display on the bottom of screen. - Select POWER OFF - Select SHUT DOWN	
7.	Close and lock the Top Access Compartment.	

8.	• Close the screen cover.	
9.	• Unplug the machine and wrap up the power cord.	
10.	• Remove the string with the Authority Slips and place them in the Maroon materials bag.	

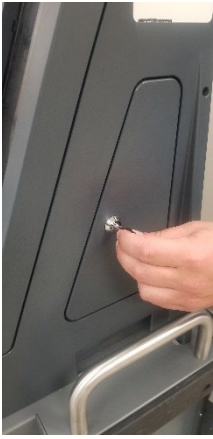
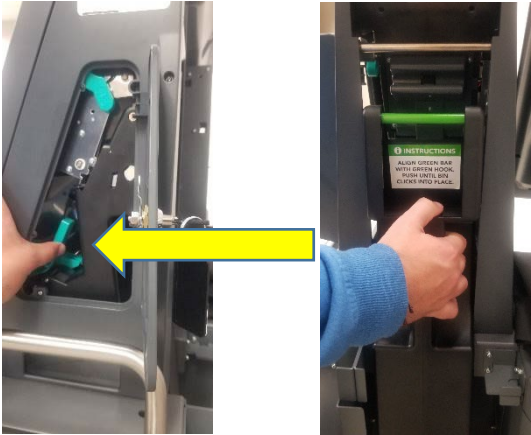
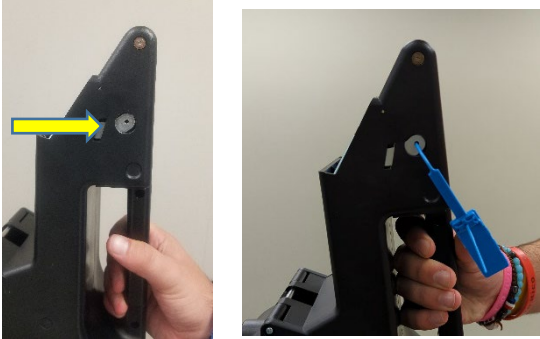
11.	- Remove the curtain rods, roll them up, and insert them into the tube located at the bottom rear of the machine. - Replace the cap. - Un-latch the white clamps and lower the curtain rods to the minimum height. Re-latch to secure the white clamps.	
12.	- Unlock and open the back door of the machine. - Remove the black canister bag from the back of the machine. - Return the container with the unused Activation Cards, extension reel, and the power strips to the back of the machine. - Close and lock the back door.	
13.	Use the barrel key to unlock and open the side door.	
14.	- Stand behind the machine. - Place your right hand on the Card Canister handle. DO NOT LET GO and step to face the opening of the Paper Path Module door. - Place left thumb on the lower left teal lever. - Press firmly towards the front of the machine releasing the used Card Canister. - Remove the used Card Canister.	

15.	- Retrieve a blue string seal from the Red Bag. - Fasten to the used card canister (as pictured) securing the canister door.	
16.	Place the sealed used canister into the canister bag.	
17.	Close and lock the side door.	
18.	- Return the barrel key to the Key Envelope and place in the Red Bag. *Verify the Key Envelope contains the barrel key, the password index card with the used red tape seal on the back. Be sure the Small Yellow Pouch with the Media Stick is in the Red Bag.*	

19.	Cover the machine with the covers located on back shelf.	
20.	• Lower the light stick to the horizontal position. • Unlock the swivel casters and return the machine to a secured location.	

Troubleshooting

How to Replace a Canister:

1.	• Use the barrel key to unlock and open the side door.	
2.	• Stand behind the machine. • Place your right hand on the Card Canister handle. • DO NOT LET GO and step to face the opening of the Paper Path Module door. • Place left thumb on the lower left teal lever. • Press firmly towards the front of the machine releasing the used Card Canister. • Remove the used Card Canister.	
3.	• Retrieve a blue string seal from the envelope inside the black bag. • Fasten to the used card canister (as pictured) securing the canister door.	

4.	Place the sealed used canister into the canister bag.	
------------------	---	--

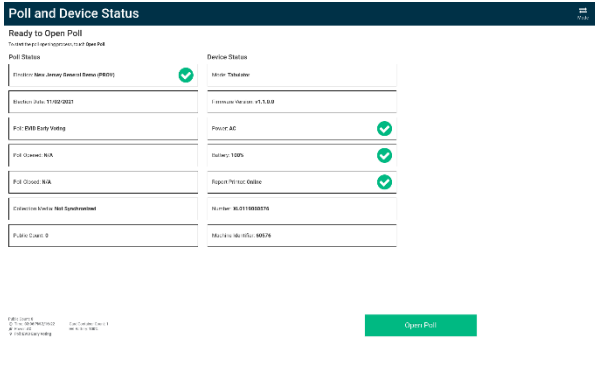
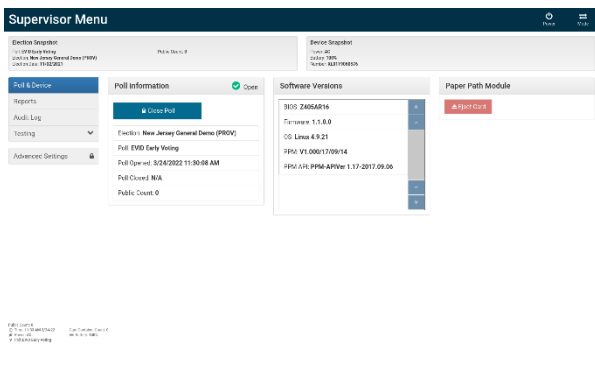
*All seals should be recorded on the Voting Machine Canister Replacement Form. *

**The Voting Machine Canister Replacement Form should be filled out and given to the Municipal Clerk upon arrival at the Municipal Building. **

Troubleshooting when the Activation Card cannot be inserted:

1.	If a voter tries to insert their Activation Card into the Voting Machine and they get an error message, or the machine simply does not accept the card follow these steps.	
2.	- Check that there is not a ballot on the SCREEN. - If there is a ballot on the screen, quit the voting session using the quit button in the top right corner. - Write spoiled on the ejected Activation Card and place in the green Spoiled Ballot/Used Seal bag.	

How to return to the home screen for voting:

1.	If at any point the Voting Machine Screen is on the Poll and Device Status screen during the day, press the public count button on the lower left-hand corner.	
2.	If at any point the Voting Machine Screen is on the Supervisor screen during the day and they are meant to be on the home screen for voting, follow the next step.	
3.	Press the mode button in the upper right-hand corner to return the home screen.	