AntMiner S9 Serial Communication

- AntMiner S9 ZYNQ-7010 FPGA Board
- USB to Serial Adapter
- Putty Software

USB to Serial Adapter (aliexpress.com)

Putty Software

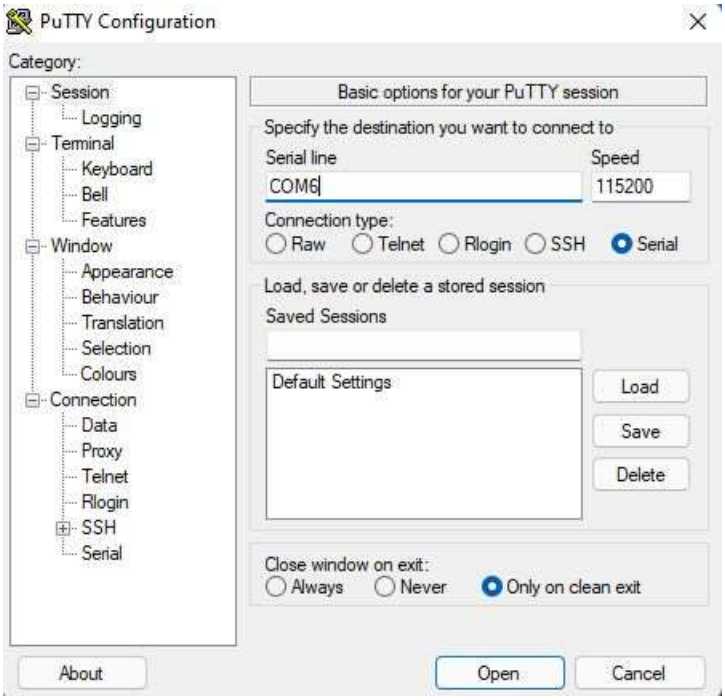

Serial Communication Setup

Connect Serial Adapter Gnd, RX, TX to AntMiner Gnd, TX, RX pins on serial header as shown below (VCC is not used). Note RX to TX and TX to RX connections below. Connect Serial Adapter to USB Port on Computer. Open Putty Software and setup as shown above:

- Select Serial
- COM# (device manager will show which com port to use)
- Speed = 115200

Click Putty Open Button.
Power On the AntMiner Board.

Putty Should now display the AntMiner Boot process.

```
--- mount angstrom file system
bootargs: noinitrd mem=1008M console=ttyPS0,115200 root=ubi0:rootfs ubi.mtd=
otfstype=ubifs rw rootwait
--- upgrade marker upgrade_buf[0] = 0xff ---
--- upgrade marker upgrade_buf[1] = 0xff ---
--- upgrade marker upgrade_buf[2] = 0xff ---
--- upgrade marker upgrade_buf[3] = 0xff ---
--- upgrade marker upgrade_buf[4] = 0xff ---
--- upgrade marker upgrade_buf[5] = 0xff ---
--- upgrade marker upgrade_buf[6] = 0xff ---
--- upgrade marker upgrade_buf[7] = 0xff ---
--- upgrade marker upgrade_buf[8] = 0xff ---
--- upgrade marker upgrade_buf[9] = 0xff ---
--- upgrade marker upgrade_buf[10] = 0xff ---
--- upgrade marker upgrade_buf[11] = 0xff ---
--- upgrade marker upgrade_buf[12] = 0xff ---
--- upgrade marker upgrade_buf[13] = 0xff ---
--- upgrade marker upgrade_buf[14] = 0xff ---
--- upgrade marker upgrade_buf[15] = 0xff ---
bootargs: noinitrd mem=1008M console=ttyPS0,115200 root=ubi0:rootfs ubi.mtd=
otfstype=ubifs rw rootwait
Net:   Gem.e000b000
Hit any key to stop autoboot:  0
```

Serial Communication Setup (cont.)

- The AntMiner Board should eventually show the below login prompt.
- The AntMiner Board should also still be running the Bitcoin Miner Software which will continue to display information in the Putty Console Window.
- The AntMiner should have login details (user=root pwd=admin) or if not…..
- To reset the root login password see the included Linux OS Config notes.
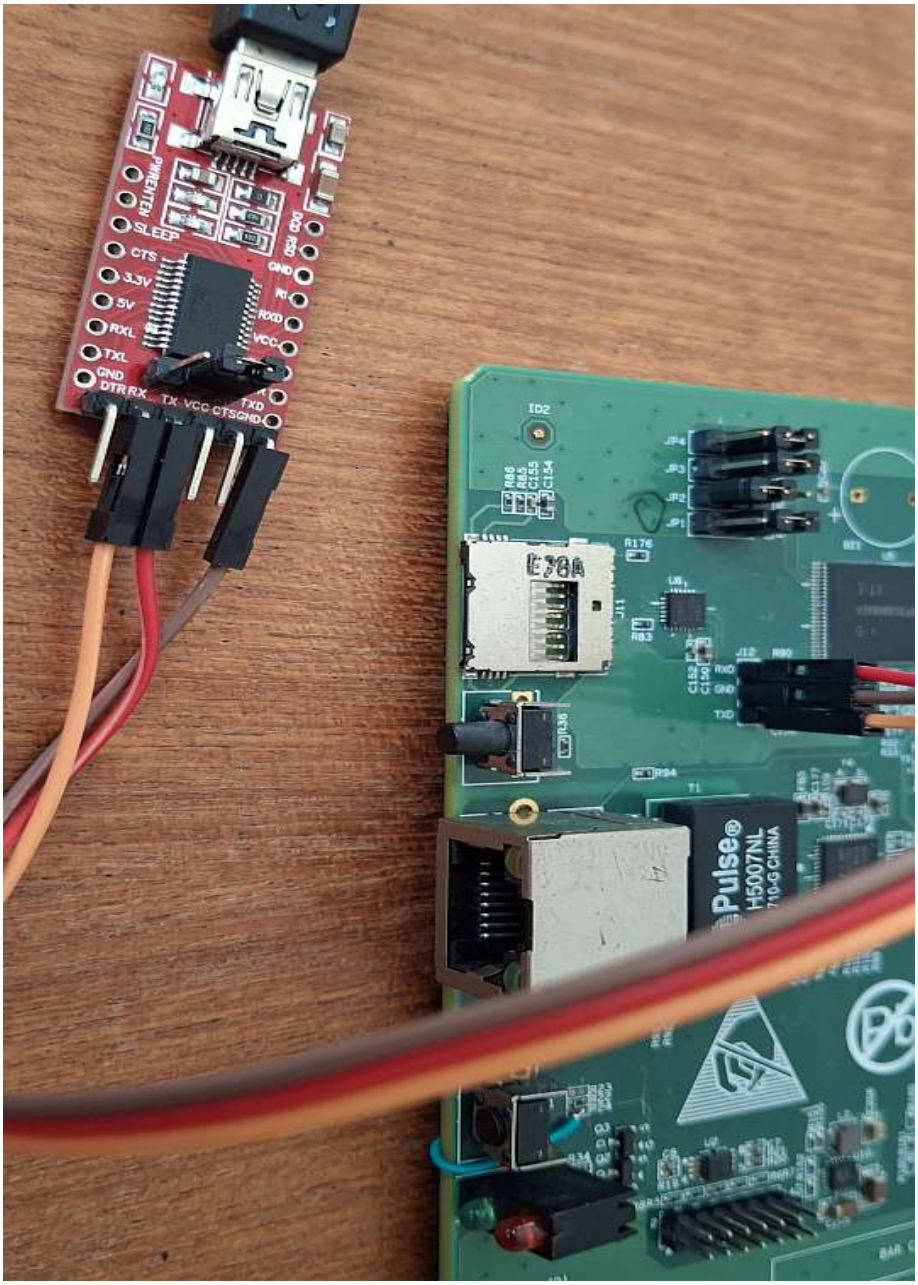
Serial Communication Setup (cont.)