EBAZ-4205 Serial Communication

- EBAZ-4205 ZYNQ-7010 FPGA Board
- USB to Serial Adapter
- Putty Software

USB to Serial Adapter (aliexpress.com)

Putty Software

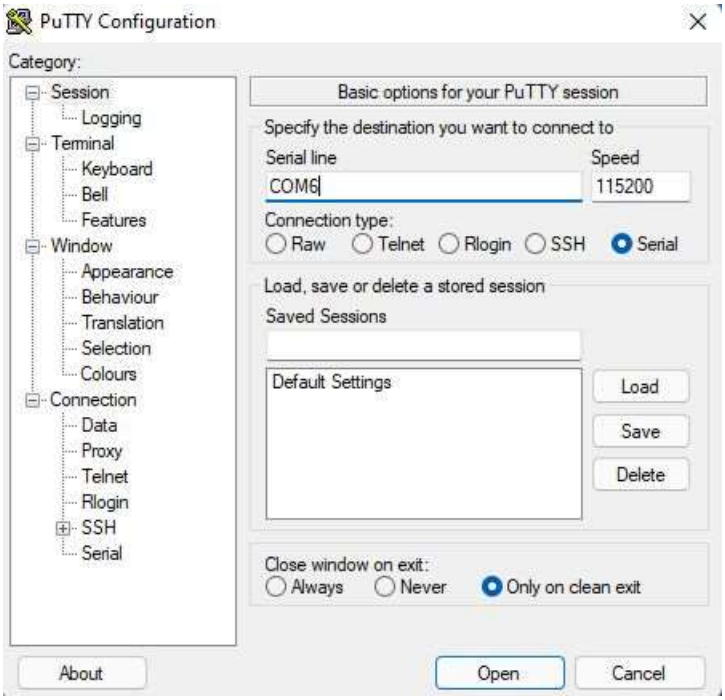

Serial Communication Setup

Connect Serial Adapter Gnd, RX, TX to EBAZ-4205 Gnd, TX, RX pins on serial header as shown below (VCC is not used). Note RX to TX and TX to RX connections below. Connect Serial Adapter to USB Port on Computer. Open Putty Software and setup as shown above:

- Select Serial
- COM# (device manager will show which com port to use)
- Speed = 115200

Click Putty Open Button.
Power On the EBAZ-4205 Board.

Putty Should now display the EBAZ-4205 Boot process.

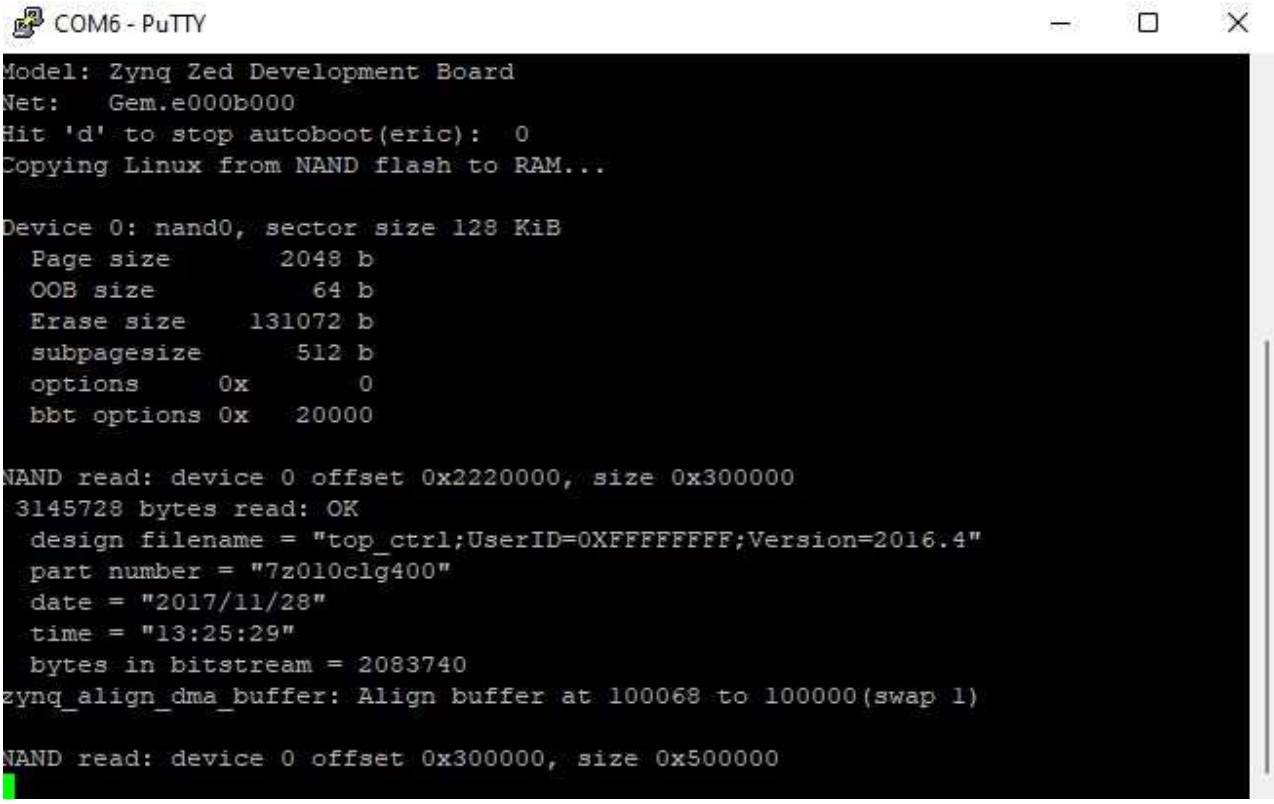

Serial Communication Setup (cont.)

- The EBAZ-4205 Board should eventually show the below login prompt.
- The EBAZ-4205 Board should also still be running the Bitcoin Miner Software which will continue to display information in the Putty Console Window.
- To reset the root login password see the EBAZ-4205 OS Config notes.

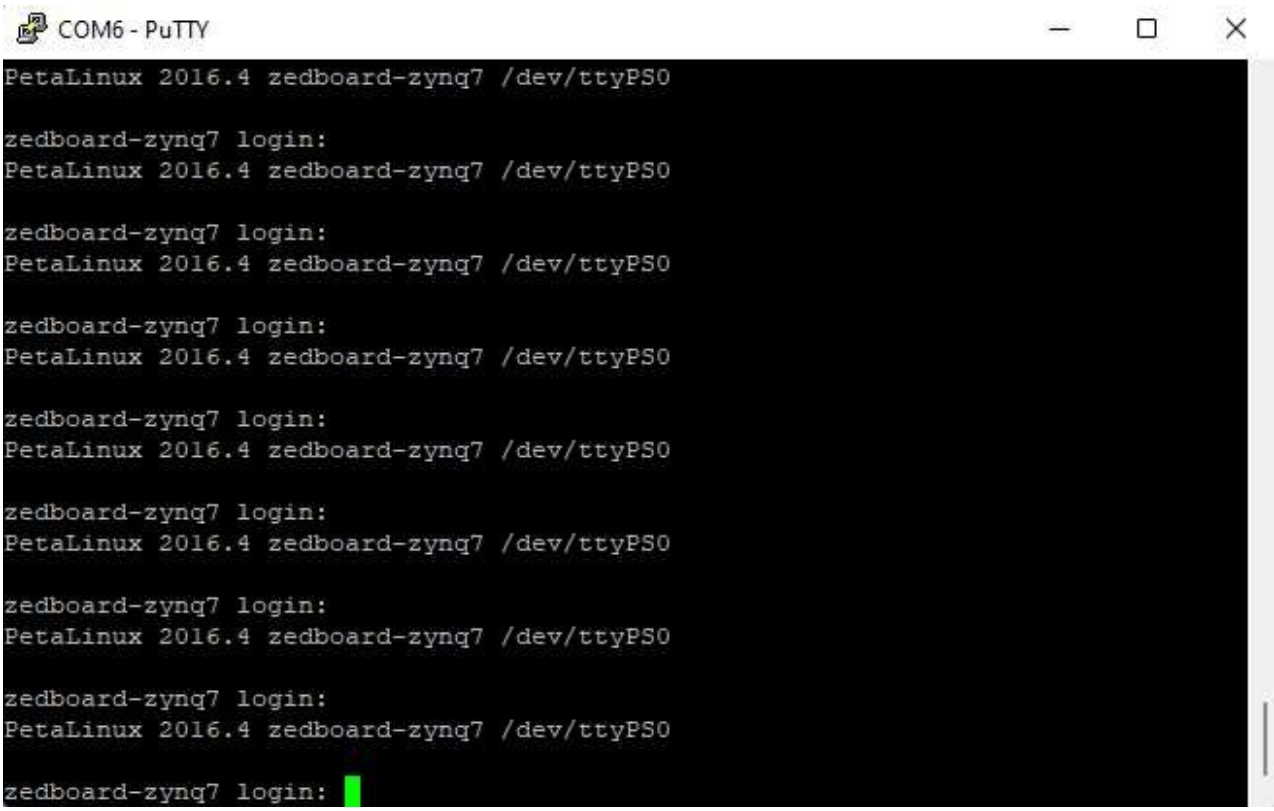
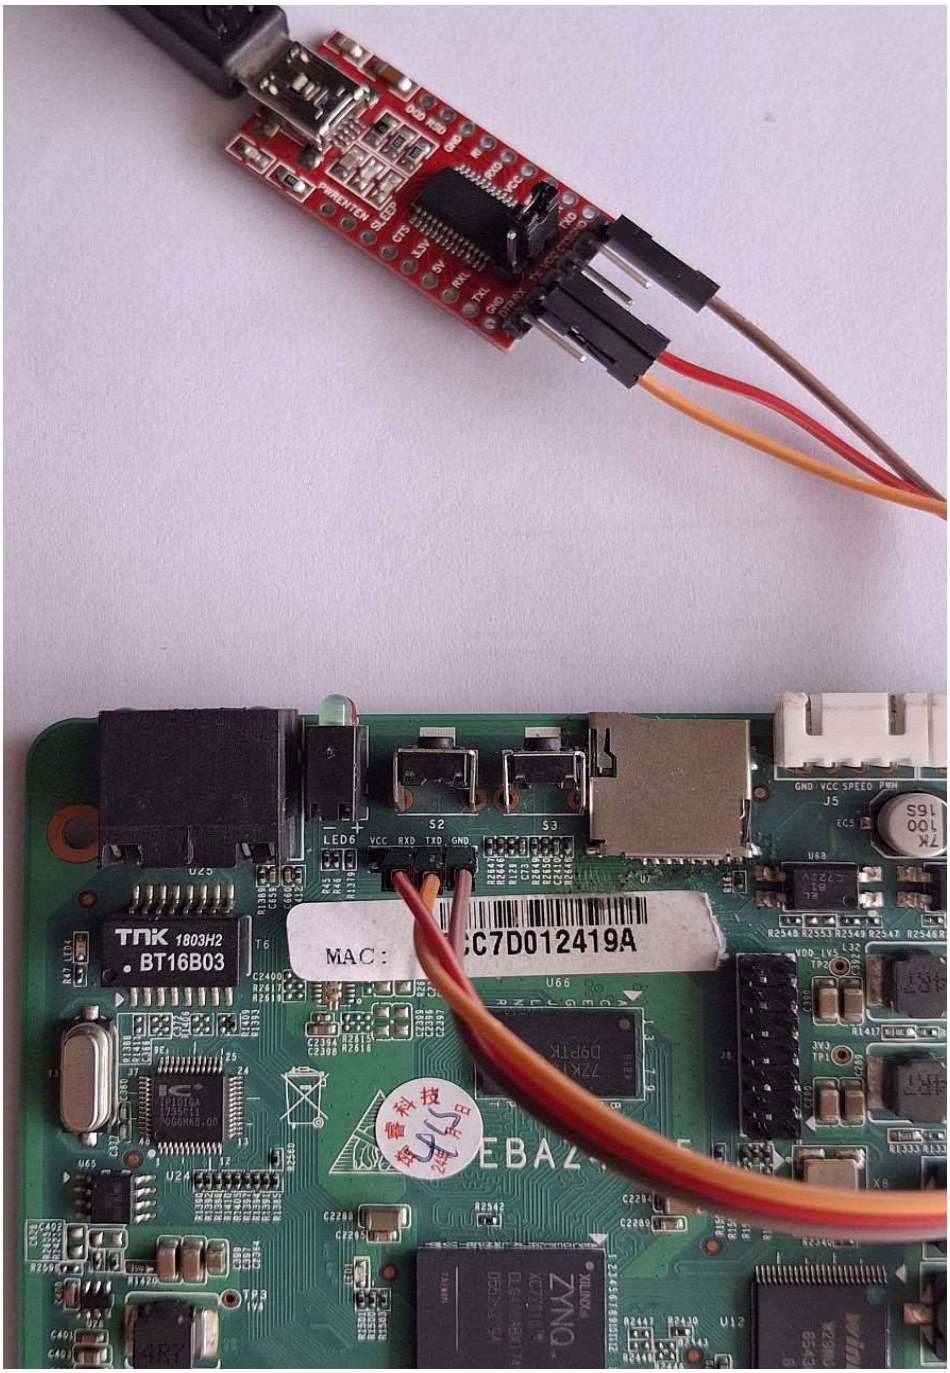
Serial Communication Setup (cont.)