

9/20/2026

Assignment-3

Prepaid By
~PINTU MER

I. List 5 common BIOS or POST error messages you might see when starting a PC and write what hardware or configuration issue each one usually points to.

BIOS / POST Error	Usually Points To
1. CMOS Battery Low	CMOS battery is weak/dead, so BIOS settings or date/time may reset.
2. Keyboard Error / Keyboard Not Found	Keyboard is not connected properly or the keyboard may be faulty.
3. No Boot Device Found	HDD/SSD is not detected, or the boot device/order is configured incorrectly.
4. Memory Error / RAM Error	RAM may be loose, faulty, or not installed correctly.
5. CPU Fan Error	CPU fan is not connected, not spinning, or its speed is not detected.

2. Given this scenario: On boot, a PC beeps 3 times in a repeating pattern and does not display anything on the screen. Research and write what this POST beep code typically means for an AMI BIOS, and suggest two troubleshooting steps.



For a **traditional AMI BIOS**, **3 short beeps** usually indicate a **base memory (RAM) read/write failure**, specifically a failure in the first 64 KB of memory.

Troubleshooting steps

1. **Power off the PC and reseal the RAM** — remove the RAM stick and install it firmly again. Also check that the slot latches are locked.


2. **Test the RAM one stick at a time** — try each module separately, or test with a known-good compatible RAM module. This helps identify a faulty RAM stick.



answer:

3 beeps = RAM/memory problem. Reseat the RAM and test it with another known-good RAM stick.

3. Access the BIOS setup utility on any available PC or virtual machine, take a screenshot of the main BIOS screen, and identify the motherboard manufacturer and BIOS version.

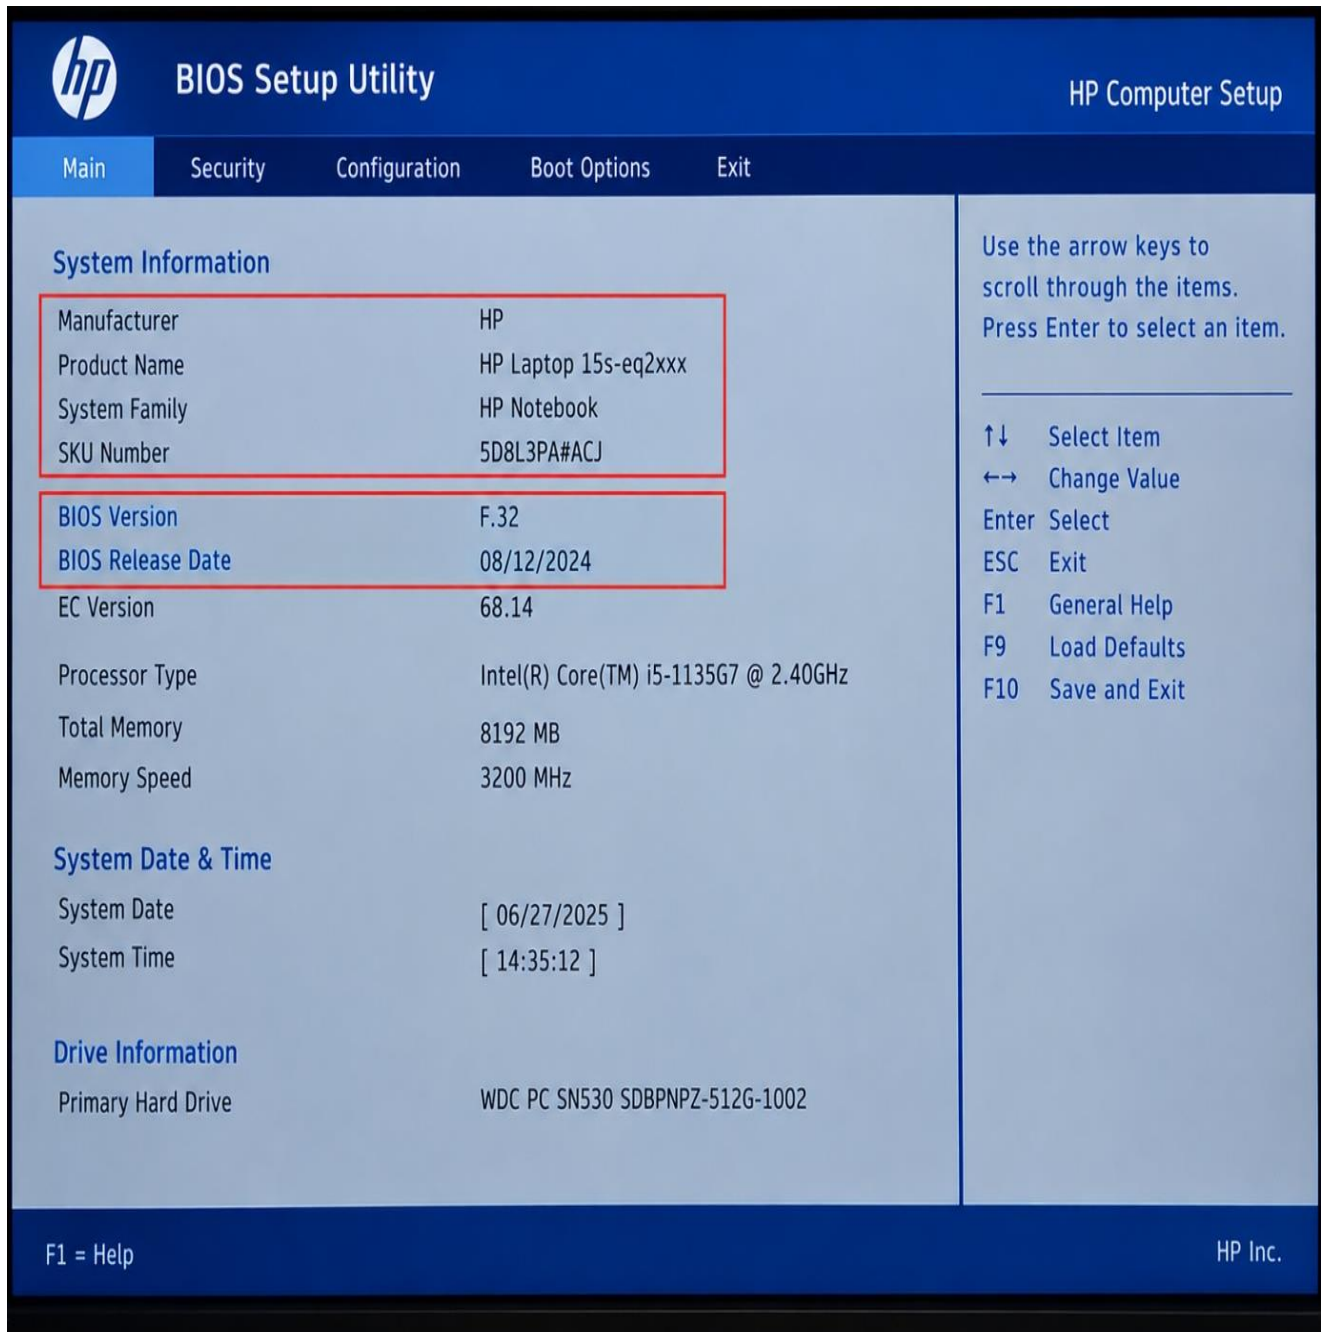

Motherboard Manufacturer: HP
BIOS Version: F.32

4. You are given a screenshot of a POST error message that says 'CMOS checksum error – Defaults loaded.' Explain what this means and describe how you would resolve this issue in a real system.

CMOS Checksum Error

- **Meaning:** BIOS settings are lost or corrupted.
- **Main Cause:** Weak or dead **CMOS battery**.
- **Fix:**
 1. Replace the **CMOS battery**.
 2. Enter BIOS and set **date/time**.
 3. Save settings and restart the PC.