
MANUAL WINDOW AWNING ILLUSTRATED PARTS LIST

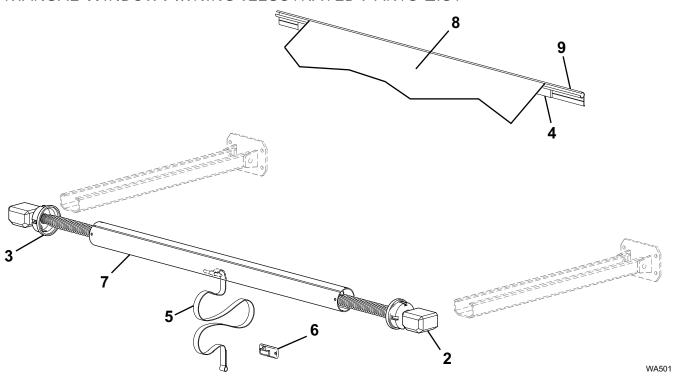

Item	Part Number	Description			Notes
2		Spring Assy, RH	Standard	XL	
	610000XXX	(used w/o Alumaguard)	3' thru 8'	3' thru 6.5	1
	610004XXX		9' thru 12'	7' thru 12'	1
	610008XXX		13' thru 15'	12.5' thru 15'	1
<u></u>		Spring Assy, RH	Standard	XL	
	610002XXX	(used w/ Alumaguard)	3' thru 8'	3' thru 6.5	1
	610006XXX		9' thru 12'	7' thru 12'	1
	610010XXX		13' thru 15'	12.5' thru 15'	1
3		Spring Assy, LH	Standard	XL	
	610001XXX	(used w/o Alumaguard)	3' thru 8'	3' thru 6.5	1
	610005XXX		9' thru 12'	7' thru 12'	1
	610009XXX		13' thru 15'	12.5' thru 15'	1
'		Spring Assy, LH	Standard	XL	
	610003XXX	(used w/ Alumaguard)	3' thru 8'	3' thru 6.5	
	610007XXX		9' thru 12'	7' thru 12'	
	610011XXX		13' thru 15'	12.5' thru 15'	
4	R001696	Bumper Pad			
5	901012	Pull Strap, 27"	Standard		
	R022406-044	Pull Strap, 44"		XL	
6	901044	Pull Strap Catch	Black		
	901044W	Pull Strap Catch	White		
7		Roller Tube	See Hardware and Accessories		
8		Canopy Only	Refer to Canopy Order Form		
9		Awning Rail	See Hardware and Accessories		
10	610200-xxx-XXX	Alumaguard	Not Shown		1

Notes: 1. XXX = Color; xxx = Length

070000-DIS 14