
APEX ILLUSTRATED PARTS LIST (OEM MODEL)

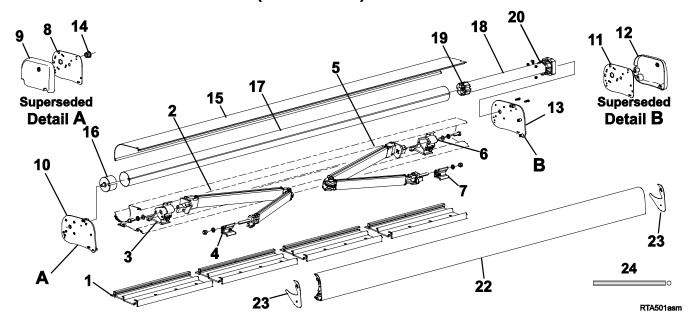

Item	Part Number	Description		Notes
1	R076744-006	Mounting Plate		
2	R001612BLK	Spring Arm Assy, LH		5
3	R062768-001	Knuckle, LH, Spring Arm		5 5
4	R019263-23L	Connector, LH, Lead Rail	Black	5
5	R001614BLK	Spring Arm Assy, RH		5,6
6	R062769-001	Knuckle, RH, Spring Arm		5,6
7	R019263-23R	Connector, RH, Lead Rail	Black	5,6
8	Superseded	End Plate, Housing, LH	FCO D004400VVV	
9	Superseded	End Cap, LH	FSO R001190XXX	2 2
10	R001190XXX	End Plate Assy, LH	•	
11	Superseded	End Plate, Housing, RH	FCO D004404VVV	3
12	Superseded	End Cap, RH	FSO R001191XXX	3
13	R001191XXX	End Plate Assy, RH	•	
14	R062755-001	Glide Bushing, LH		4
15	R001257XXX-xxx	Top Cover	RH Motor	
	R001579PBL-xxx	Top Cover	LH Motor	
16	R001054	Plug, Roller Tube		
17	R001076-xxx.xx	Roll Bar	1 7/8 Dia	
18	R001055	Motor Assy		
19	R030886-001	Drive Gear, Motor		
20	R030885-001	Crown, Motor		
21		Canopy Replacement	See Canopy Order Form	
22	R001516PBLK-xx	Lead Rail		
23	R036624-006	End Plate, Lead Rail		7
24	030796-001	Hex Key, Manual Override	7mm	

Notes:

- 1. XXX = Color; xxx = Length in inches.
- 2. LH end plate (8) and end cap (9) is superseded. Use R001190XXX End Plate Assy (10) for replacement.
- 3. RH end plate (11) and end cap (12) is superseded. Use R001191XXX End Plate Assy (13) for replacement.
- 4. Glide bushing (14) used with item 11 only.
- 5. Item 2 (LH Spring Arm Assy) includes items 3 and 4. Item 5 (RH Spring Arm Assy) includes items 6 and 7.
- 6. For awnings 19' and longer with center arm, use RH arm (item 5) for center arm.
- 7. Lead rail end plate (item 23) is universal and can be used on left or right side.