
## PIONEER LITE ILLUSTRATED PARTS LIST 18 19 20 21 Alumaguard Detail A 17 17 18 19 19 19 10 11 11

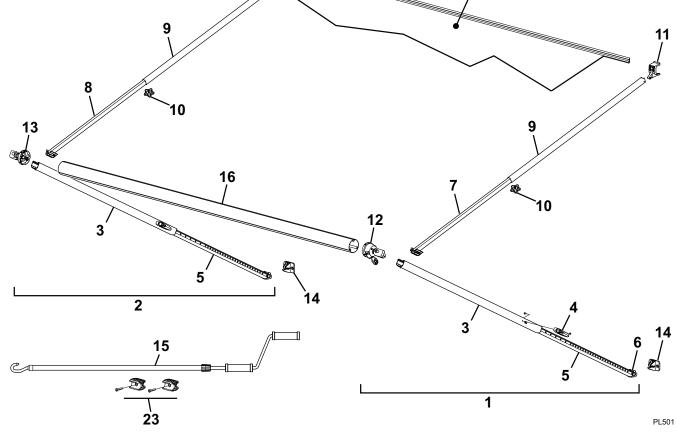

Item	Part Number	Description		Notes
1	R001665-XXX	1/2 Set Hardware	Right	1,3
2	R001666-XXX	1/2 Set Hardware	Left	1,3
3	R001667-XXX	Upper Main Arm, (includes item 4)		1
4	901071	Handle Assy	Black	
	901071WHT	Handle Assy	White	
5	R001668-XXX	Lower Main Arm, (includes Item 6)		1
6	901068	Carport Foot	Black	
	901068WHT	Carport Foot	White	
7	R001669-XXX	Lower Brace, RH		1,2
8	R001671-XXX	Lower Brace, LH		1,2
9	R001673-XXX	Upper Brace, (includes items 10 & 11)		1
10	R001674	Locking Knob		
11	901069	Top Bracket	Black	
	901069WHT	Top Bracket	White	
12	901073	Manual Crank Gear Assy	Black	
	901073WHT	Manual Crank Gear Assy	White	
13	901074	Idler Assy	Black	
	901074WHT	Idler Assy	White	
14	901070	Bottom Bracket	Black	
	901070WHT	Bottom Bracket	White	
15	R001546-RP	Manual Crank Handle		
16	19xx00	Roller Tube, 3 slot	3.5" Dia	
17		Canopy Only	Refer to Canopy Order Form	
18	20xx36XXX	Alumaguard Assembly Only		
19	R001246XXX-xxx	Uniguard (includes 4.25" soft connect)		
20	R001247XXX-xxx	Soft Connect	4.25 Wide	
21	901067	Tractioner Kit	pkg of 2	
	R001008	O-Ring, Tractioner Retainer	pkg of 2	
22	004070	Awning Rail	See Hardware and Accessories	
23	901072	Crank Handle Clip	qty: 2	
	The following items are not shown			
Notos:	R019324-001	Hardware Pack		

Notes: 1. XXX = Color:-005 = White; -006 = Black
2. Lower brace (items 7, 8) includes brace slider. Brace slider is not available seperately.
3. Arms available in universal only.