



EOM290.06 Operate a Handheld Radio

By:

Teaching Points

((01))

**Identify
parts of the
Radio**

((02))

**Turning the
Radio On &
Off**

((03))


**Adjusting
Frequencies**

((04))

**Operating the
Push-To-Talk
(PTT) Button**



((05))

**Changing
Batteries**

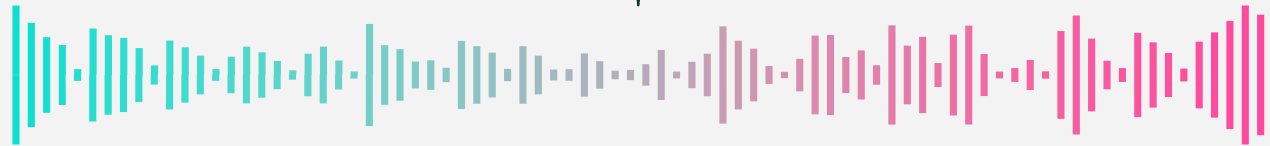

How to use the radio

Radio Parts

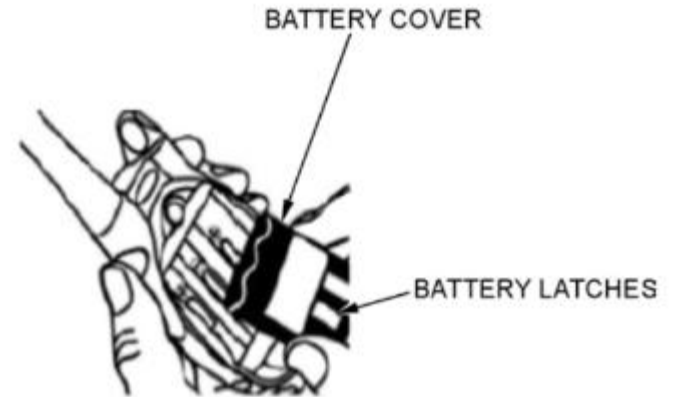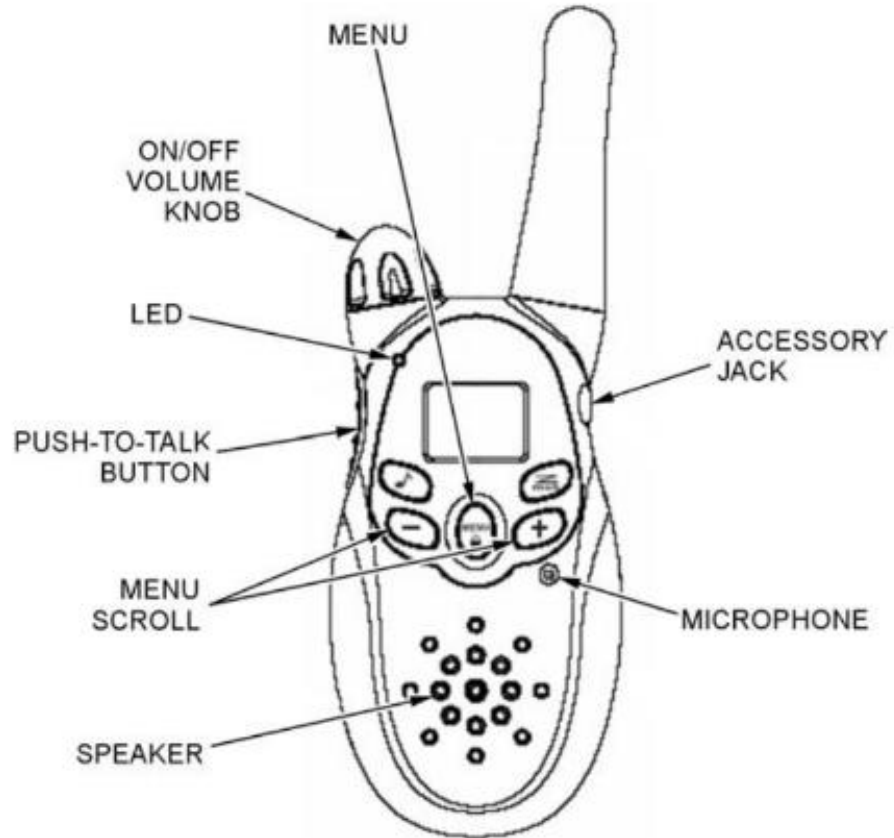




Parts of the Radio (The Back)

Battery Cover. Covers the storage compartment of the battery

Battery Cover Latches.
Secures the cover to the radio

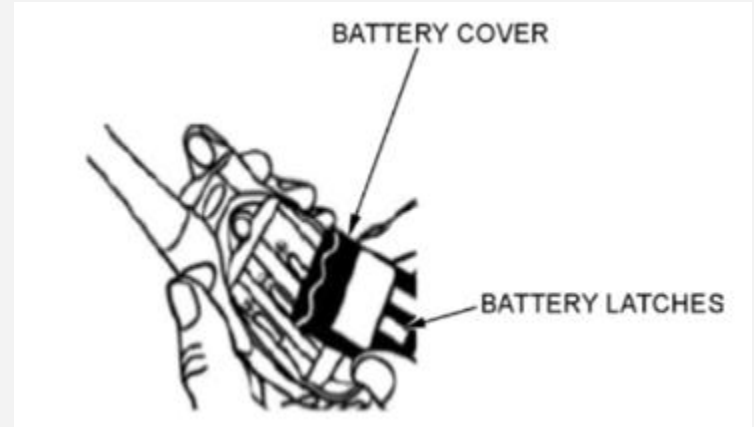

How to Use the Radio: On & Off

ON: turn the on-off/volume knob clockwise. The radio will beep and the radio display will briefly show all feature icons of the radio.

OFF: turn the on-off/volume knob counterclockwise. A clicking sound will indicate the radio is turned off.

How to Use the Radio: Adjusting Frequencies / Channels

The radio operates on a group of frequencies that are accessed through radio channels. To set the channel of the radio, push the Menu button, this will cause the current channel to flash. Using the Menu scroll button, scroll through the channels and push the PTT button to select the desired channel.

FRS & GMRS

FRS (Family Radio Service) - Lower power use and lower range

GMRS (General Mobile Radio Service) - Higher power use and higher range. Requires FCC (Federal Communications Commission) Licence

How to Use the Radio: Push-To-Talk Button

To send and receive messages, check the channel activity by pressing the push-to-talk (PTT) button. Static will be heard if the channel is clear to use. Do not transmit if someone is talking on the channel.

- To send messages, press the PTT button, pause, speak into the microphone, pause, and then release (hold 3-5 centimetres from your mouth).
- The LED will glow continuously when sending messages.
- To listen to messages, release the PTT button.

How to Use the Radio: Batteries

Many hand-held radios will use three AA batteries for power. To insert or replace these batteries, follow these steps:

1. Turn the radio so the back is facing up. Lift the battery latch to release the battery cover.
2. Remove the battery cover.
3. Insert three AA batteries as shown on the inside of the battery compartment.
4. Replace the battery cover and clip the battery latch to secure.

BATTERY METER

The battery icon shows the battery charge level, from full to empty. When the battery is empty, the radio chirps periodically after releasing the PTT button. The radio powers off when the voltage drops below a predetermined level.

How to Use the Radio: Batteries

Batteries are made of various materials comprised of heavy metals that can harm the environment if not properly discarded.

Batteries, if not properly disposed of, may cause:

- The pollution when batteries are burned or disposed in landfills
- Corrosion from the strong acid
- Burns or other injury to eyes and skin

Batteries are not all the same and each have specific instructions for their proper disposal and/or recycling. It's best to check with the local community recycling facility to determine the household battery recycling options.

How to Use the Radio: Altogether



Questions





Questions

Explain how to use the radio:

On/Off - Turn the knob clockwise to turn on and the radio will beep.
Turn the knob counterclockwise until there is a click to turn off.

Changing Channel - Press the menu button, then use menu scroll buttons to change channels. Use PTT button to select channel.

PTT Button - Press and hold PTT to talk through the microphone.
Release to listen to messages.



Batteries - Lift the battery latches to remove the cover and switch batteries. Replace the cover and clip battery latches after.

Summary

- Parts of the Radio
 - On-Off / Volume knob
 - LED
 - PTT button
 - Menu button
 - Menu Scroll buttons
 - Antenna
 - Accessory jack
 - Microphone
 - Speaker
- How to operate the radio
 - On/Off
 - Speaking
 - Switching Channels
 - Changing Batteries



EOM290.06 Operate a Handheld Radio - DONE!

By: