Jib Camera Controls

Quick reference for operating the Jib camera with the SpaceMouse and foot pedal.

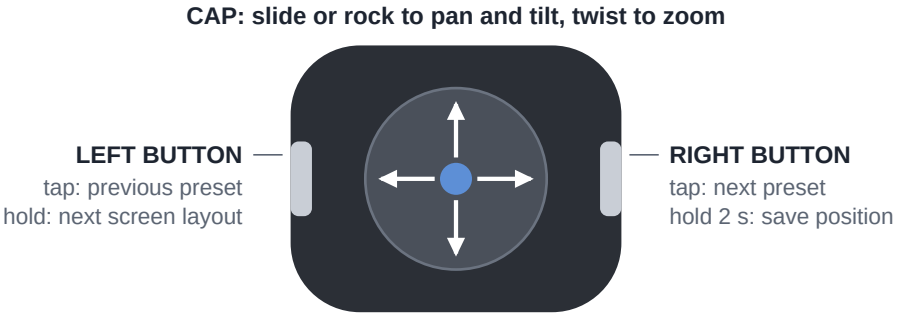

Moving the camera

Do this with the cap	Camera
Slide left / right	Pans left / right
Push forward / pull back	Tilts the camera
Twist	Zooms (clockwise zooms in)
Rock / tip the cap	Also pans and tilts, if you prefer that feel

A light touch moves slowly; push further to go faster. Let go and the camera stops. Zoom and pan/tilt don't mix: whichever you're doing more of wins, and straight moves stay straight unless you clearly go diagonal.

Buttons

Button	Tap	Hold
Left	Go to the previous preset	Next screen layout in Nx Witness (hold about 1 s)
Right	Go to the next preset	**Save** the current position to the preset last shown (hold 2 s)

Tapping cycles through all four presets in order: Normal, Lower, Middle, Upper, then back to Normal.

Foot pedal

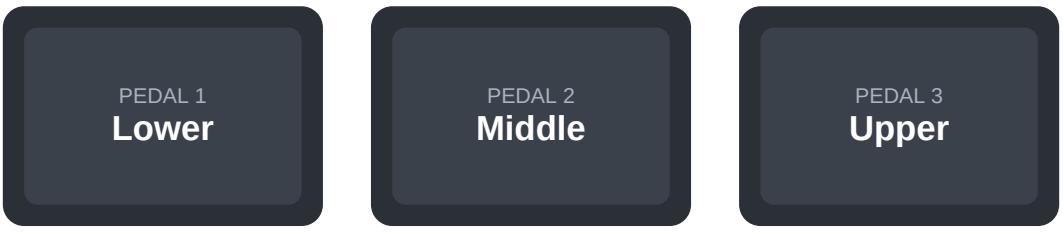

Pedal	Action
Tap	Camera goes to that pedal's preset (it moves when you lift your foot)
Hold 2 s	**Saves** the current camera position to that pedal's preset

Presets

Preset	Buttons	Pedal	Notes
Normal	Slot 1	–	Home position. **Locked**: can't be overwritten from the controls.
Lower	Slot 2	Pedal 1	
Middle	Slot 3	Pedal 2	
Upper	Slot 4	Pedal 3	

Saving a new position

With the pedal	1. Frame the shot with the SpaceMouse. 2. Hold the pedal for 2 seconds. 3. *Saved: Middle* appears on the video.
With the buttons	1. Tap left/right until the preset you want to replace appears on the video. 2. Frame the shot with the SpaceMouse. 3. Hold the right button for 2 seconds until *Saved: …* appears.

Text on the video

When the camera goes to a preset, its name appears large in the centre of the picture for 5 seconds, then moves to the bottom-left corner and stays there until the next preset.

You see	Meaning
Middle	Camera is going to the Middle preset
Saved: Middle	The current position was saved as Middle
Middle (empty)	Nothing is saved in that slot yet; the camera didn't move
Normal (locked)	That preset is protected; nothing was saved

The text is part of the camera's picture. It shows on every output from this camera, including recordings and anything that goes to air. The corner label shows the last preset selected, even if you have moved the camera by hand since.

SpaceMouse light

Light	Meaning
Quick blinks, N times	Went to preset N (e.g. 3 blinks = Middle)
One slow blink	Position saved
Rapid flicker	Save refused: that preset is locked
Slow blinks, N times	Switched to screen layout N

Automatic return home

If nobody touches the SpaceMouse or pedal for **2 minutes**, the camera goes back to **Normal** by itself. Any movement, button press or pedal tap restarts the 2 minutes.

If something isn't working

Camera doesn't respond	Check the SpaceMouse USB cable. If it still won't move, ask IT to check the control service.
Pedal does nothing	Check the pedal's USB cable; it reconnects by itself when plugged back in.
Shows *(empty)*	That preset hasn't been saved yet; frame the shot and save it.