
PLINKY//12

■ 10 × 16 WELL ■ 9 VOICES ■ 1/16 GRID

VIEW: KLOTZ

16 × 16 // ARCADE12

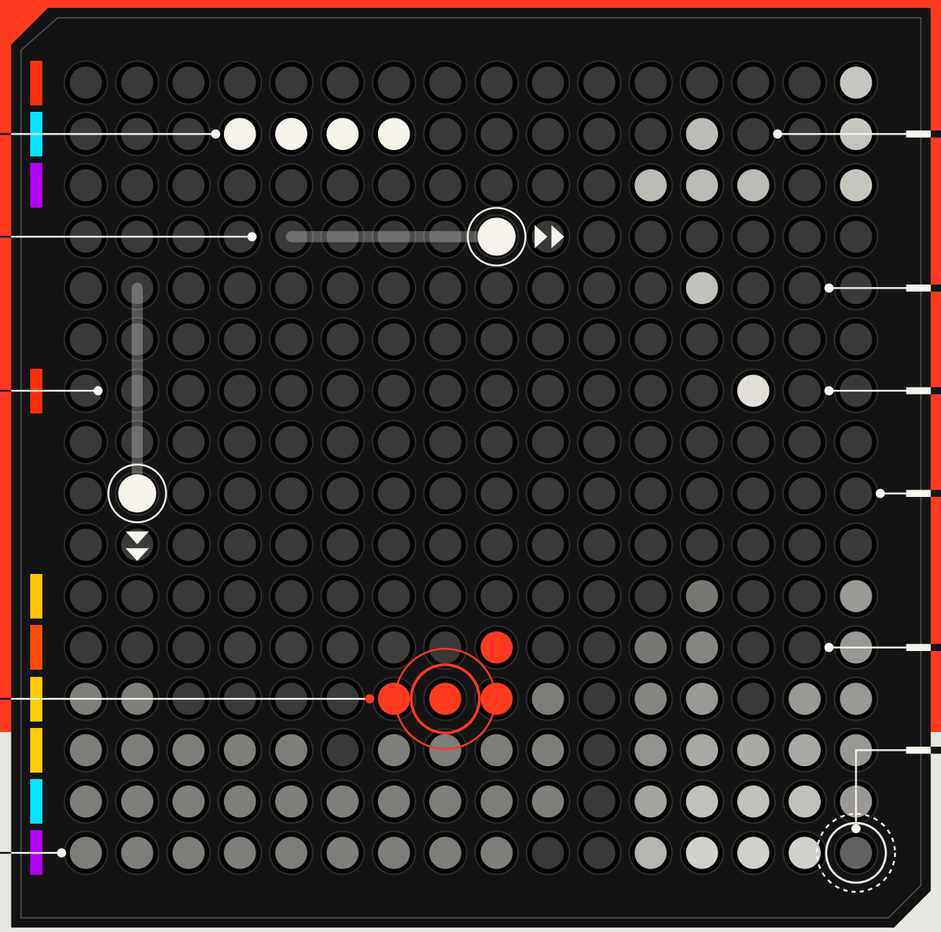

STONE
TAP = ROTATE

SWIPE ← →
THE STONE FOLLOWS THE FINGER

SWIPE ↓
HARD DROP ON THE NEXT 16TH

LANDING
STRUMS THE CHORD

STACK
10-STEP SEQUENCER AGAINST 16

NEXT
THE COMING STONE

BEAT
QUARTER NOTES

CHORD
LINE CLEARS MOVE IT

LEVEL
PROGRESS + COUNT

METERS
4 ACTIVITY BARS

PAD
TAP · HOLD = MENU

UP

DOWN

PAGE

HOLD ↘ PAD 0.7 S = SELECTOR

THE STACK IS THE SCORE.
LANDING STRUMS A CHORD.
LINES MOVE THE HARMONY.

A PERPLEX ON PLINKY 12 PANEL

SHEET 1/2 · KLOTZ

AUTHOR	**PERPLEX ON**
PANEL ID	**perplex_on/arcade_12**
FIRMWARE	**BETA**
PREFERRED	**BLOCKS**

PLAY

SWIPE ← →	MOVE
SWIPE ↓	HARD DROP
TAP	ROTATE
4 LINES	KEY UP A FOURTH

SETTINGS

▲ CLICK RIGHT HARDWARE BUTTON UP

ROOT	C - B
SCALE	CLASSIC + 12
PROG	MOLL / DUR / MODL
MIDI	ON / OFF
├ **SOUNDTRACK**	ONE LAYER PER LEVEL

L1	L2	L3	L4	L5	L6	L7
KICK	HATS	KICK 3	CLAP	4/4	SUB	PAD

DEFAULTS: ROOT D · CLASSIC · MOLL · MIDI ON

PAGES

▼ CLICK RIGHT HARDWARE BUTTON DOWN

0	**PLAY**	SELECTOR · GAME
1	**SOUND**	9 VOICES · XY
2	**SAVE/LOAD**	BOTH SOUND SETS

■ **SETTINGS SAVE GLOBALLY.**
SOUNDS + MIX OF BOTH GAMES TRAVEL WITH THE SONG.

SCALES

CLASSIC	MAJOR	MINOR
DORIAN	PHRYG	LYDIAN
MIXO	H.MIN	P.MAJ
P.MIN	HIRAJ	WHOLE
CHROM		

//:ARC PLINKY 12

ARCADE12

PLINKY//12

■ 16 × 14 FIELD ■ 7 VOICES ■ 1/16 BALL

VIEW: PRALL


16 × 16 // ARCADE12

ROW
HEIGHT IN THE CHORD

COLUMN
WHICH CHORD TONE · NEIGHBOURS DIFFER

POWER-UP
CATCH IT WITH THE PADDLE

PADDLE
DRAG ← → · PLAYS THE BASS

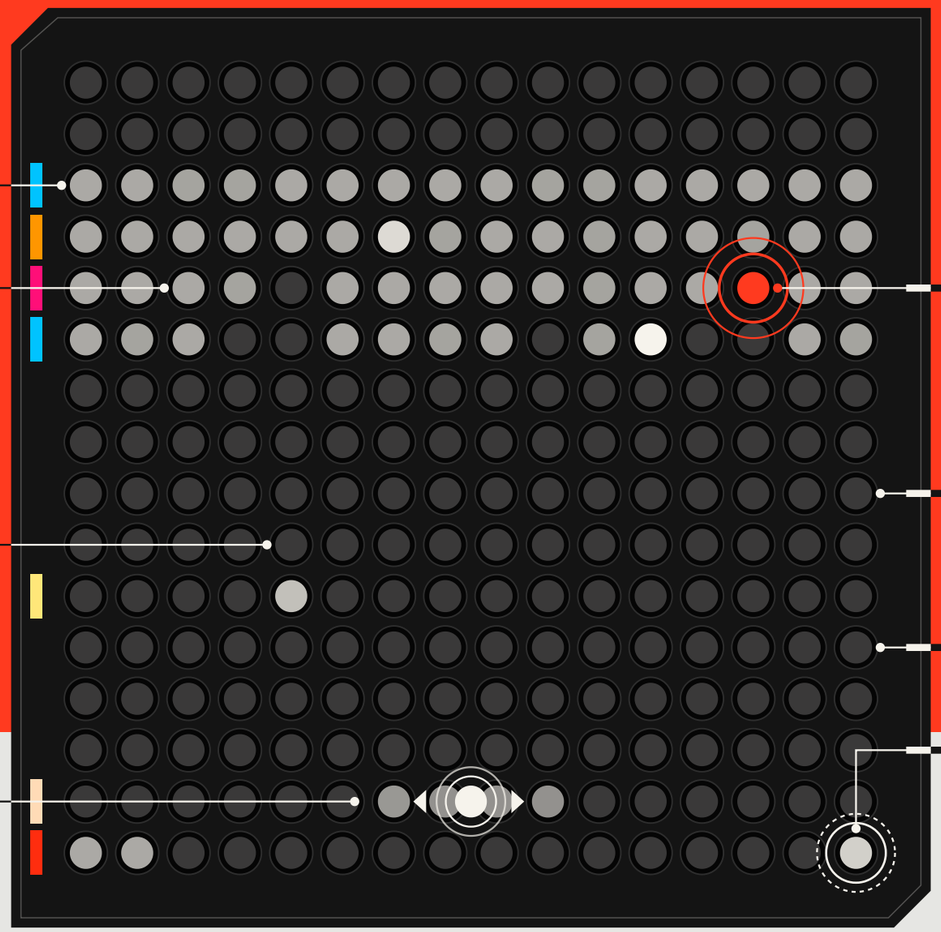

HIT = NOTE
+ DOTTED-1/8 ECHO

WALLS
HAT + METALLIC TONE

CEILING
COLOUR-TONE STAB

PAD
TAP · HOLD = MENU

UP

DOWN

PAGE

HOLD ↘ PAD 0.7 S = SELECTOR

EVERY BOUNCE IS A NOTE.
ROWS MOVE THE CHORDS.
EVERY LEVEL IS A SONG.

A PERPLEX ON PLINKY 12 PANEL

SHEET 2/2 · PRALL

AUTHOR	**PERPLEX ON**
PANEL ID	**perplex_on/arcade_12**
FIRMWARE	**BETA**
PREFERRED	**BLOCKS**

PLAY

DRAG ← →	PADDLE
TAP / SWIPE ↑	LAUNCH
ROW CLEAR	NEXT CHORD
LIVES	3 · BOTTOM LEFT

SETTINGS

▲ CLICK RIGHT HARDWARE BUTTON UP

ROOT	C – B
SCALE	13 SCALES
MIDI	ON / OFF
POWER-UPS	4 BARS EACH
HALF	HALF-TIME DRUMS · SLOW BALL
DOUBLE	HAT ROLL · FAST BALL
MULTI	2ND BALL · COUNTER-ARP
WIDE	WIDE PADDLE

DEFAULTS: ROOT C · P.MIN · MIDI ON

PAGES

▼ CLICK RIGHT HARDWARE BUTTON DOWN

0	**PLAY**	SELECTOR · GAME
1	**SOUND**	7 VOICES · XY
2	**SAVE/LOAD**	BOTH SOUND SETS

■ **SETTINGS SAVE GLOBALLY.**
SOUNDS + MIX OF BOTH GAMES TRAVEL WITH THE SONG.

SCALES

MAJ	MIN	DOR
PHRY	LYD	MIXO
HMIN	PMAJ	PMIN
HIRA	BLUE	WHOL
CHRO		

//:ARC PLINKY 12

ARCADE12

PERPLEX_ON/ARCADE_12 · FIRMWARE BETA · BLOCKS