
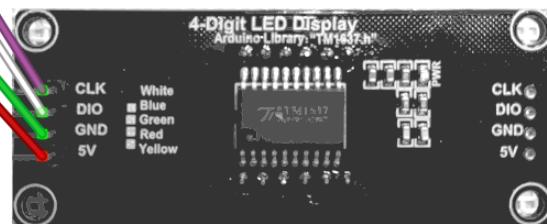


0. Disconnect Arduino from USB
1. Make connections.
3. Install "RTCLib" by Adafruit
4. Go to Clock example <https://www.makerguides.com/tm1637-arduino-tutorial/>
5. Follow instructions how to download and install TM1637-master.zip
6. Make new file copy the code in to it.
7. Load and run.

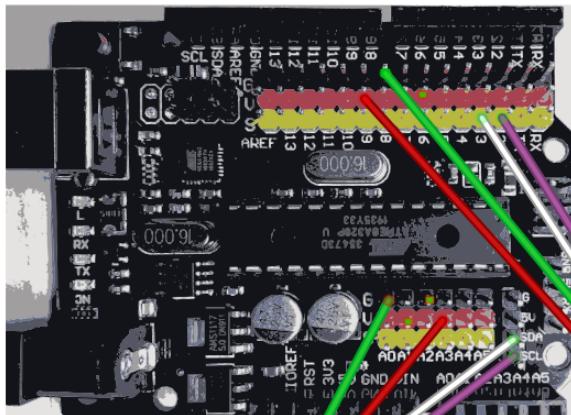

fritzing