



1

Teraterm manual

How to use teraterm:

When opening Teraterm the window looks like this:




Terminal setup


Set up the terminal by choosing Setup->Terminal

Offshore Sensing AS



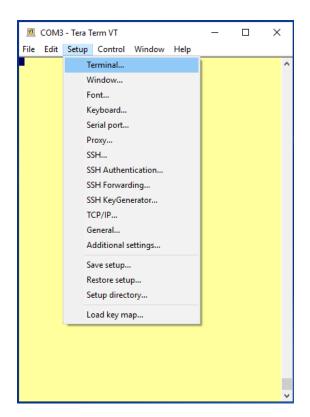

Set the following vales circled in red.

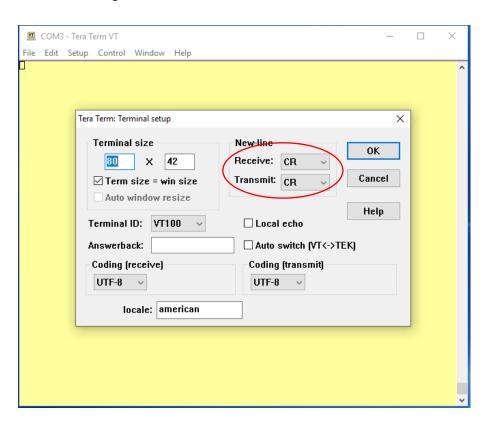






Selecting the serial port


Before selecting the serial port, the USB to serial converter has to be installed and working. Select Setup->Serial Port

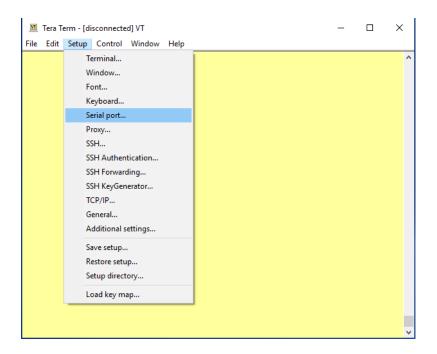


The USB converter should be available for selection in the dialog box mark in red. Ensure that additional parameters are the same as shown. Select OK.





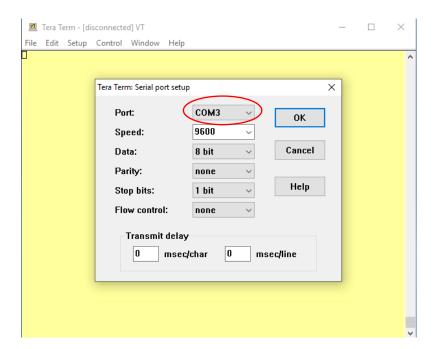

In the example below the serial port COM3 was selected as show in the window text.

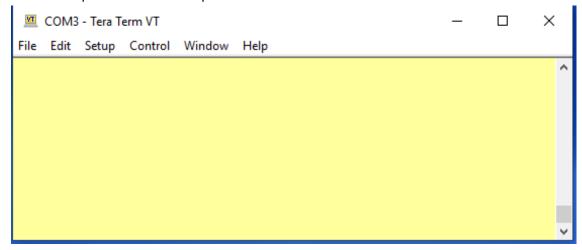


Teratem is now set up correctly and ready to use.

Teraterm Y-modem


To download files form the datalogger y-modem is used. See below how to select the Y-modem protocol and initiate download from Teraterm.

Offshore Sensing AS



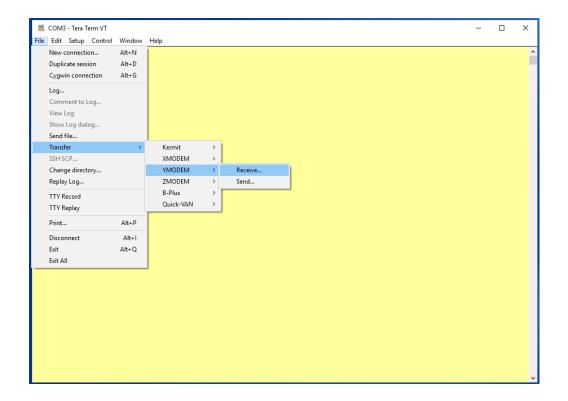

A dialog box will appear showing the download progress.

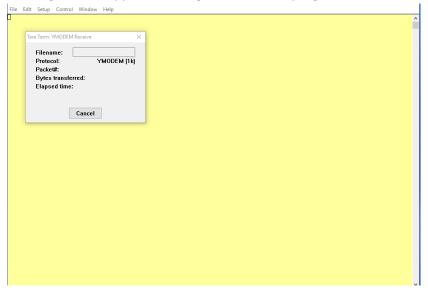

Tips: To set the download file folder one can try to send a file using YMODEM->send... Then aborting the transfer. This can be done before starting the Sailbuoy.