
踣　ノ繒　　| TOYOTA 1KD / 2KD FTV

Injector Driver #1 – #4 / SE591 / Reference redraw

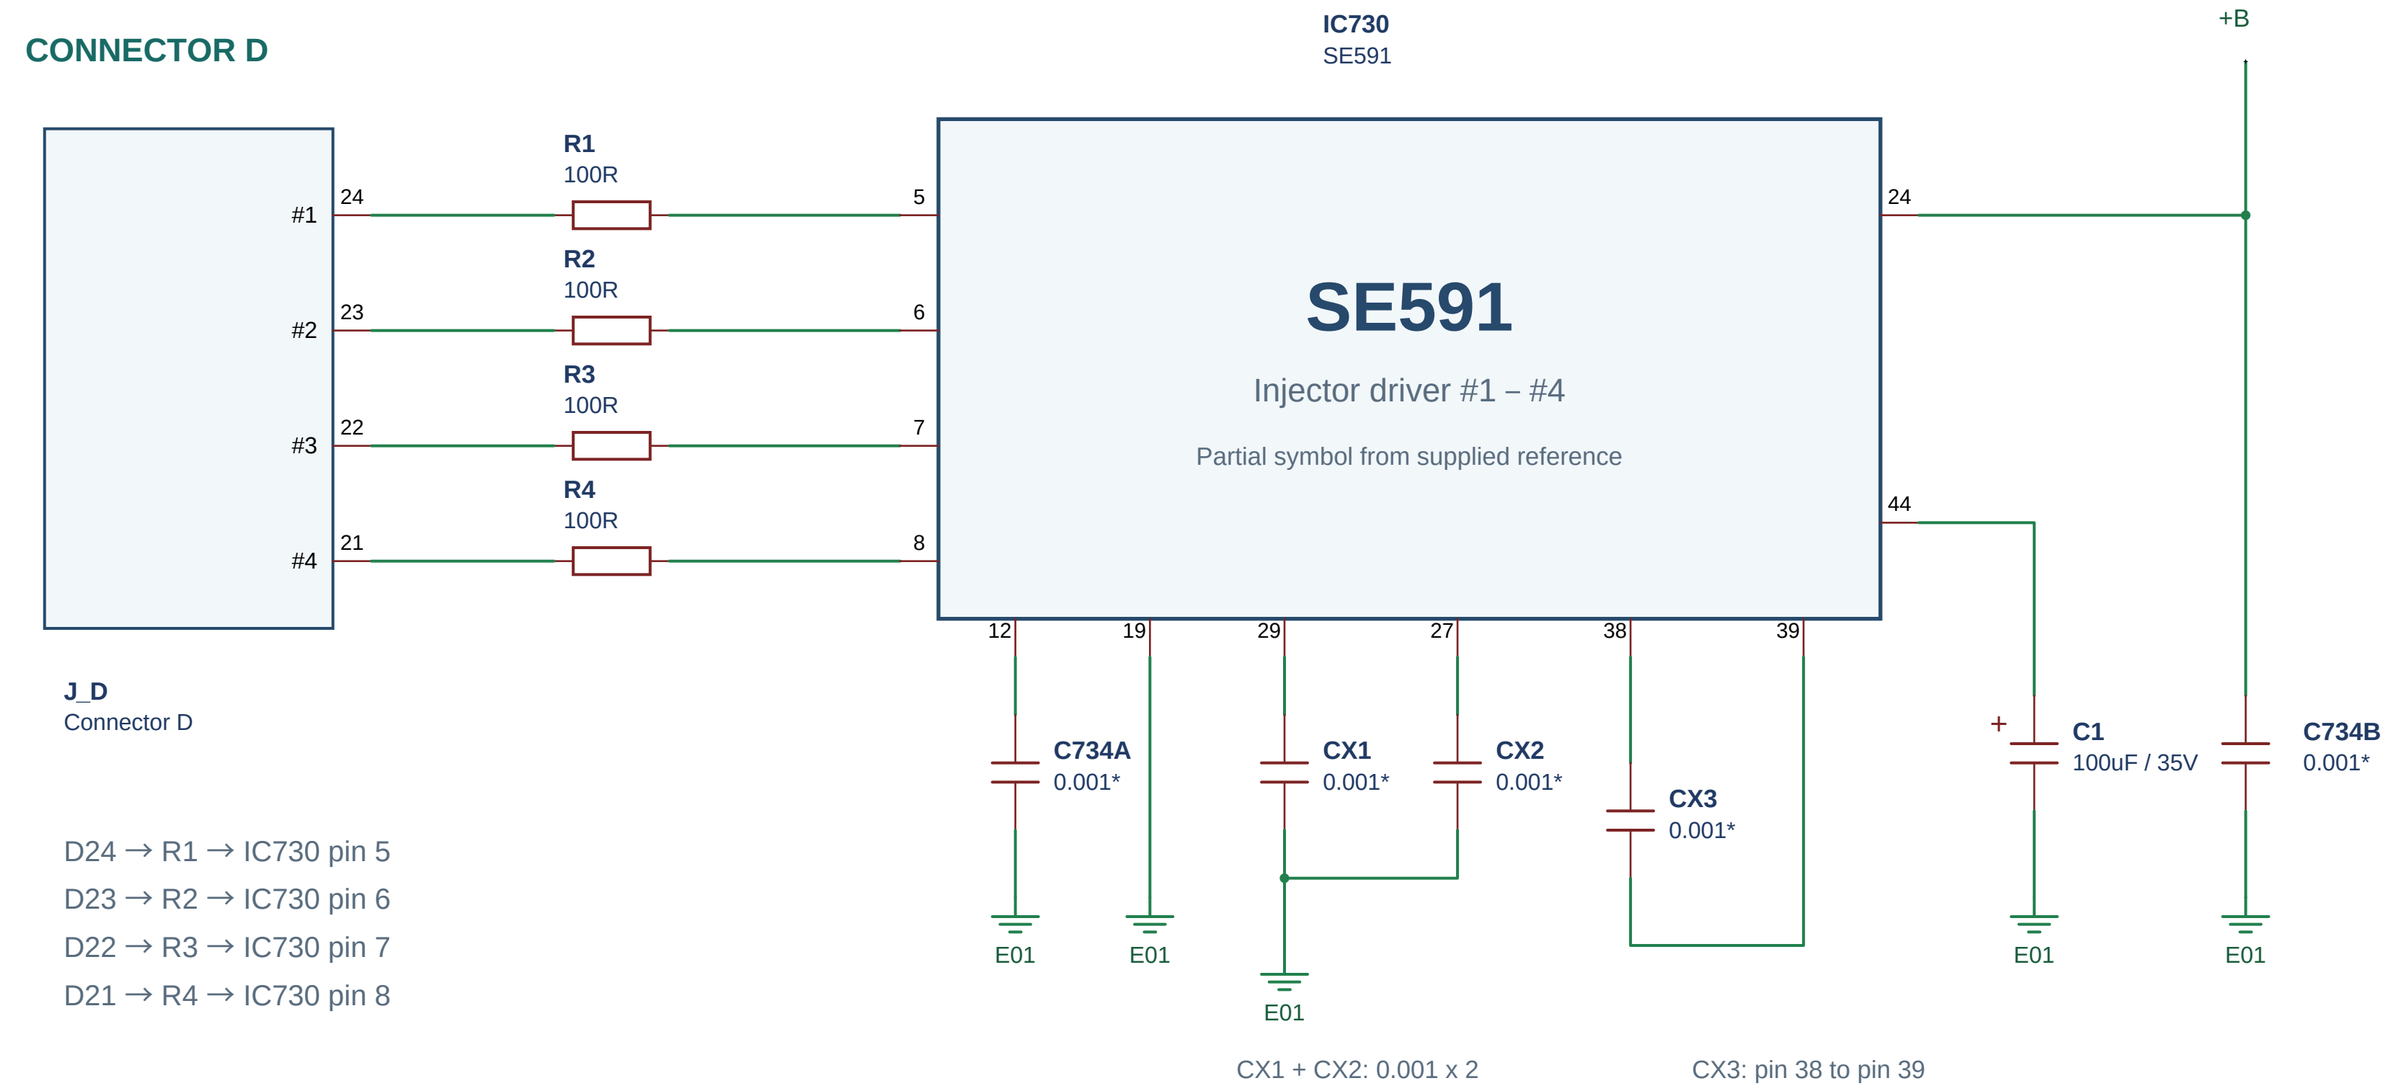

D24 → R1 → IC730 pin 5

D23 → R2 → IC730 pin 6

D22 → R3 → IC730 pin 7

D21 → R4 → IC730 pin 8

CX1 + CX2: 0.001 x 2

CX3: pin 38 to pin 39


* 0.001 retained as printed; unit not shown. C734A / C734B distinguish the two parts both labelled C734.

CX1 – CX3 are local IDs. Ground symbols are treated as a common E01 return. Full IC pinout is not shown.

Schematic reference only / No selected PCB footprints or simulation model

TOYOTA 4E-FE | TWIN INJECTION

Injector output stage and CPU support network — editable reference schematic

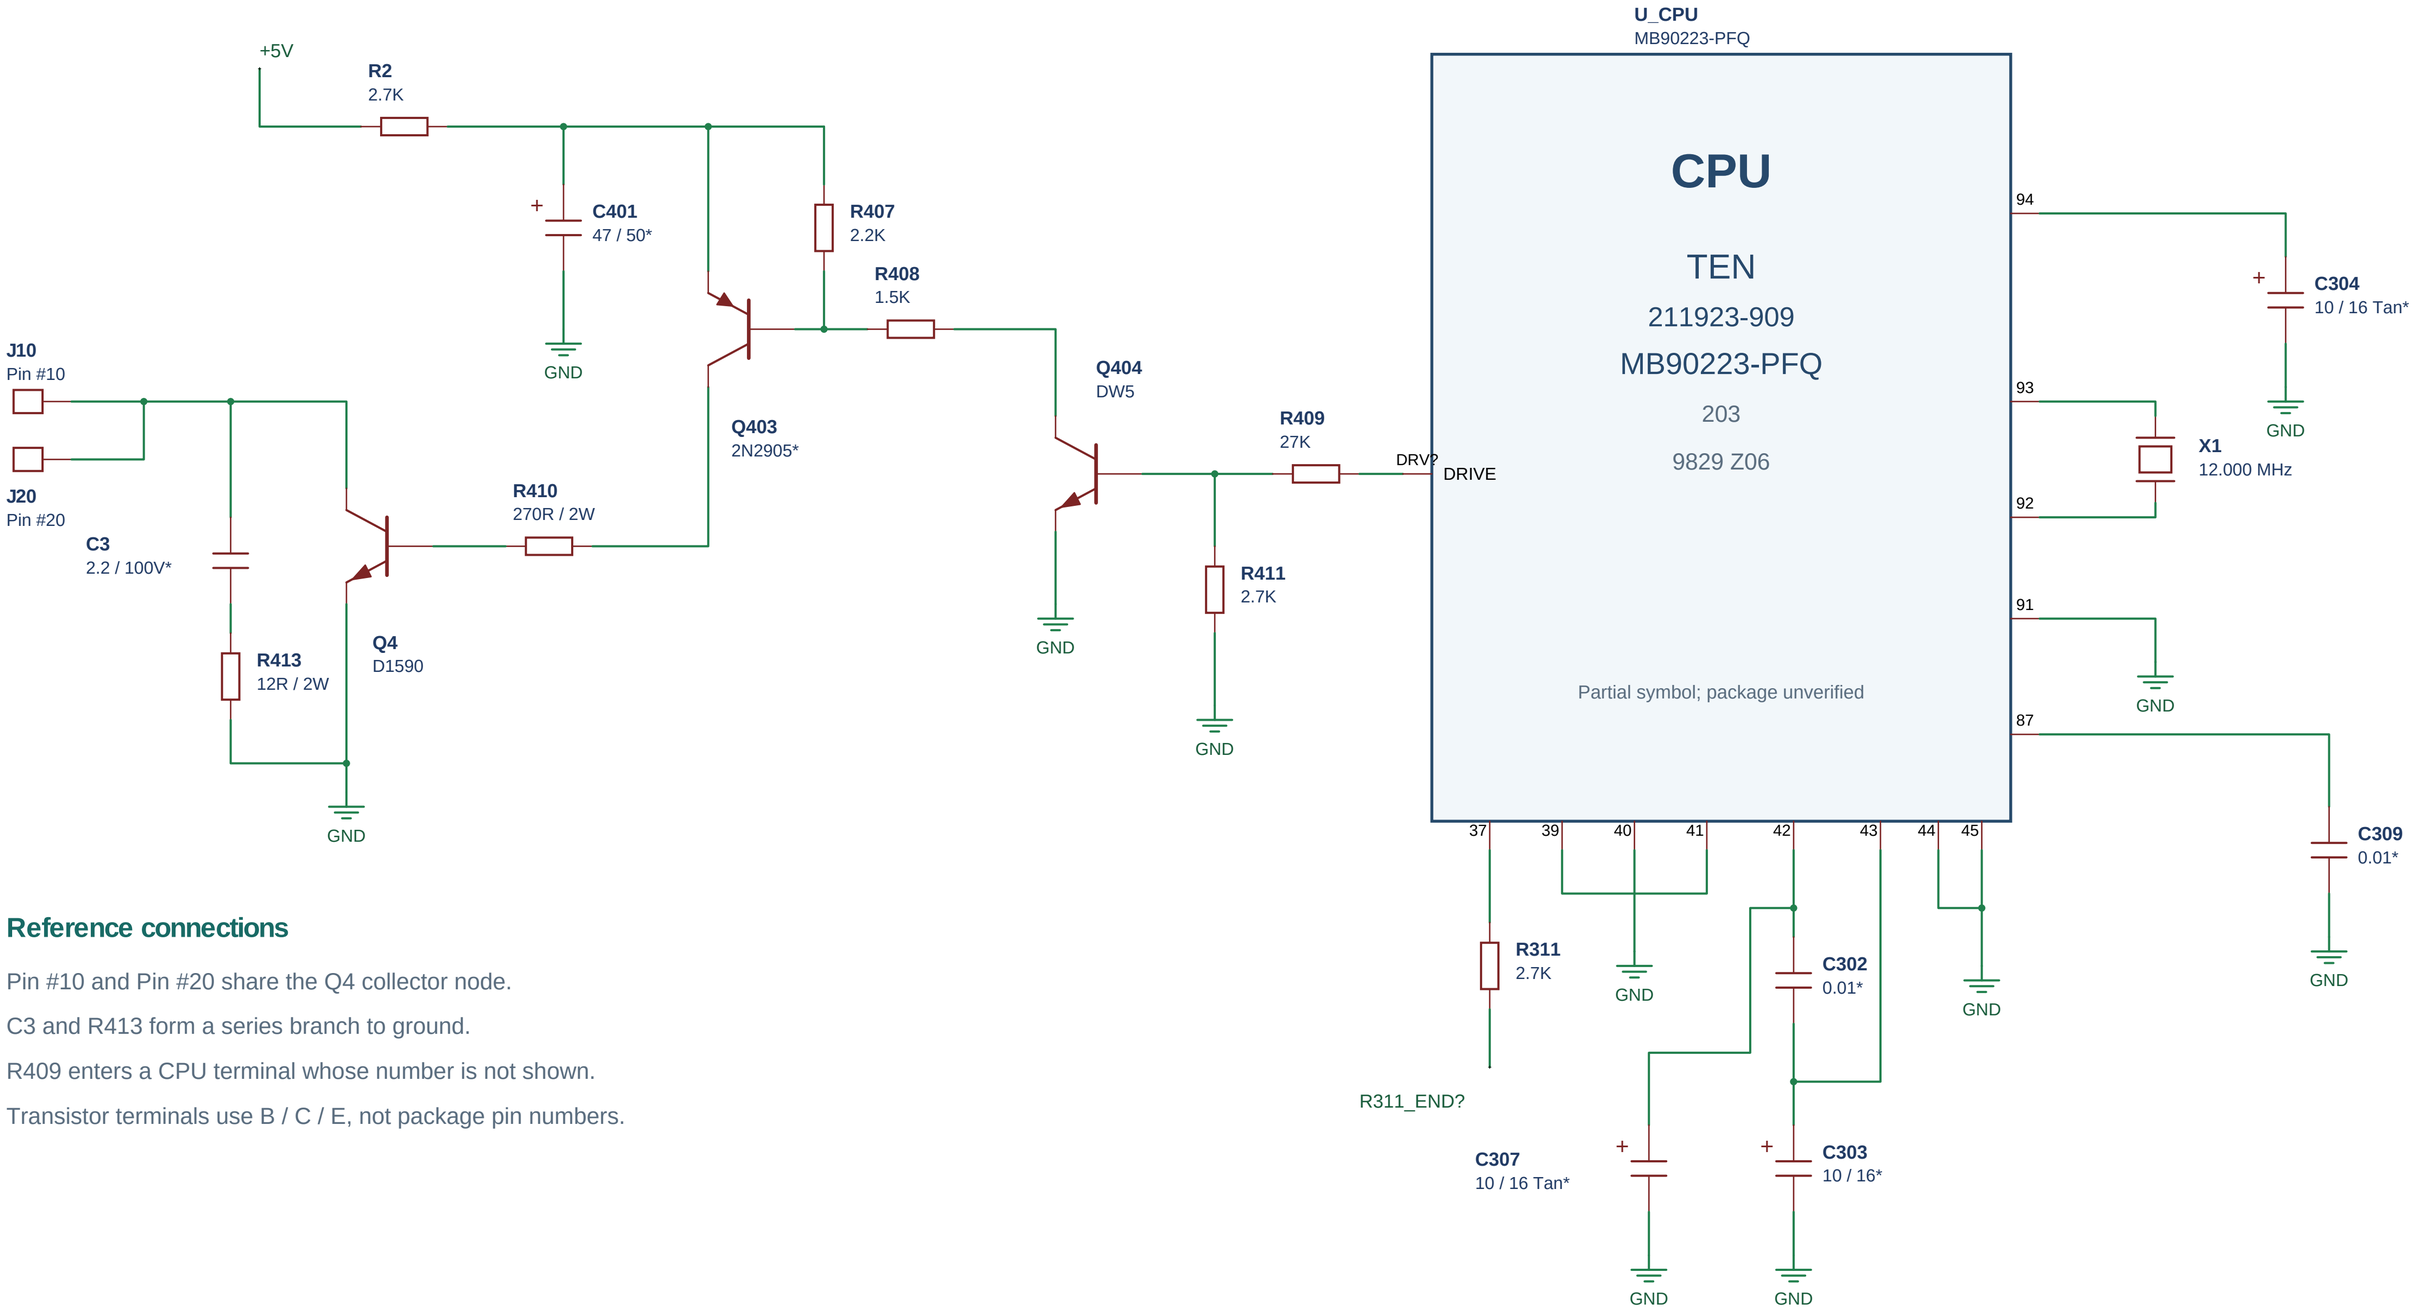

Reference connections

Pin #10 and Pin #20 share the Q4 collector node.

C3 and R413 form a series branch to ground.

R409 enters a CPU terminal whose number is not shown.

Transistor terminals use B / C / E, not package pin numbers.

* Capacitor markings retained as printed: value / voltage convention; units are not explicit in the reference.


Q403 marking appears to be 2N2905 (verify). CPU drive pin number and R311 far-end connection are unknown.

Pin 42: C307 to ground and C302 to pin 43. Pin 43: C303 to ground. All matching ground symbols share GND.

Native editable schematic / No PCB footprints, package pin mapping or simulation models selected.

TOYOTA 5A-FE | INJECTOR DRIVER

Editable reference redraw / connections retained from the supplied image

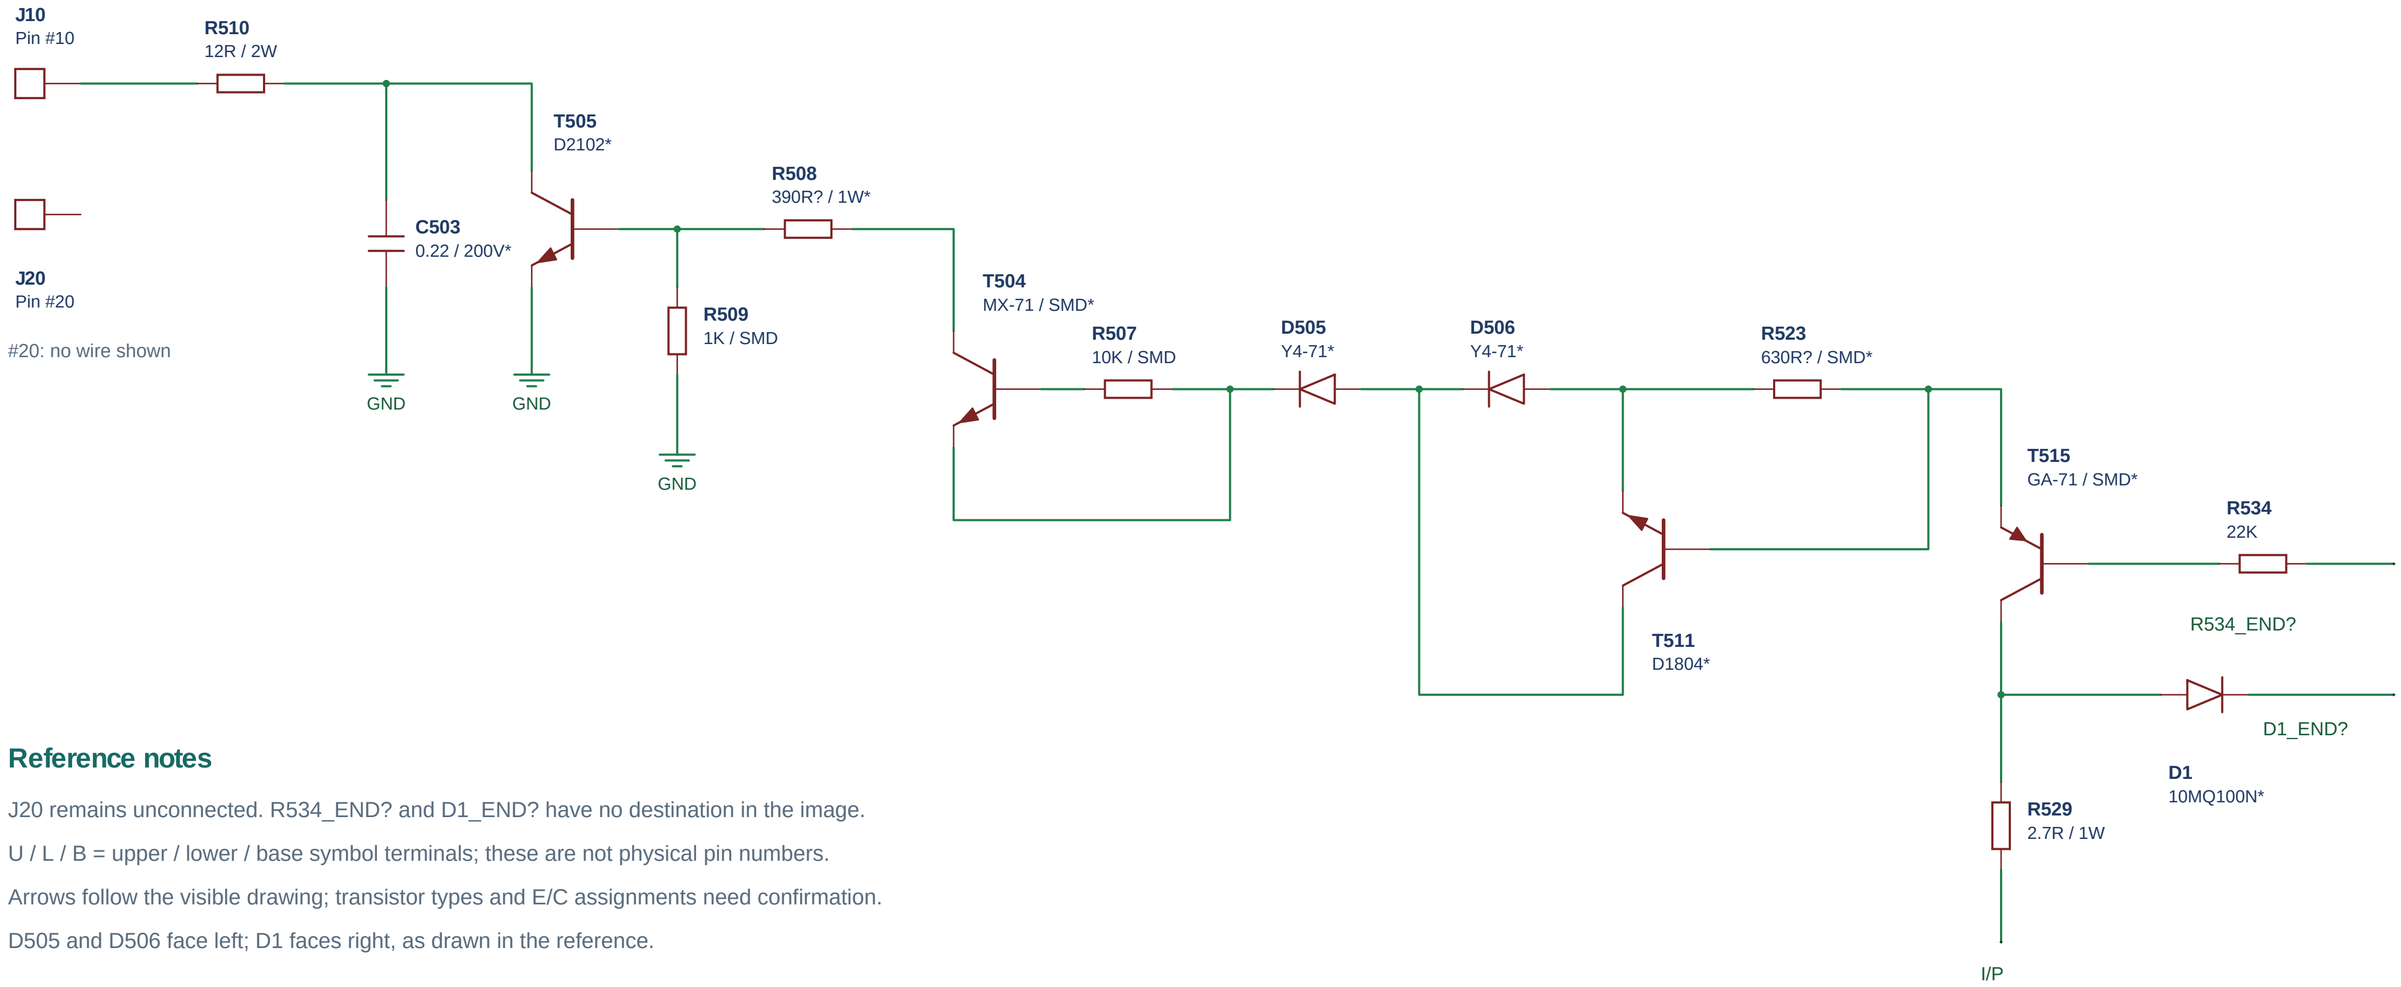

Reference notes

J20 remains unconnected. R534_END? and D1_END? have no destination in the image.

U / L / B = upper / lower / base symbol terminals; these are not physical pin numbers.

Arrows follow the visible drawing; transistor types and E/C assignments need confirmation.

D505 and D506 face left; D1 faces right, as drawn in the reference.

* Small markings are provisional. R508 appears 390R and R523 appears 630R; check the original board/image.

C503 value is retained as printed. Native schematic only; no footprints, package pin mapping or simulation models.