


POUNAMU ELECTRONICS
RE_SWC
USER GUIDE

Rev 3

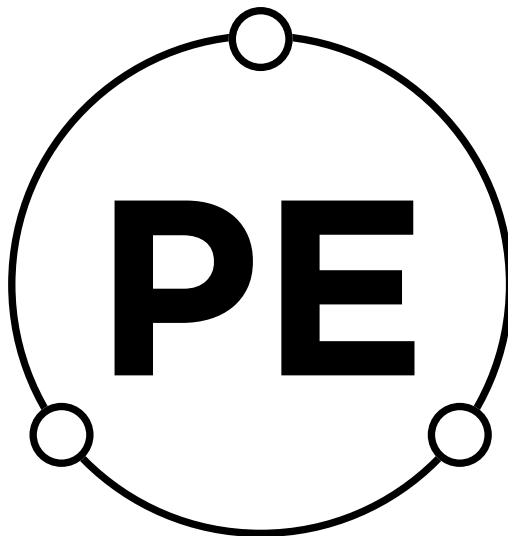


**POUNAMU
ELECTRONICS**

Contents

3	<u>OVERVIEW</u>
4	<u>ASSEMBLY</u>
5	<u>CONFIGURATION - HEADUNIT SELECTION</u>
6	<u>HEADUNIT LEGEND</u>
7	<u>FUNCTIONS</u>
8	<u>VOLUME KNOB DIMENSIONS</u>
9	<u>RE_SWC SPECS</u>
10	<u>DISCLAIMERS</u>
11	<u>COMPLIANCE</u>
12	<u>DOCUMENT REVISION HISTORY</u>

OVERVIEW

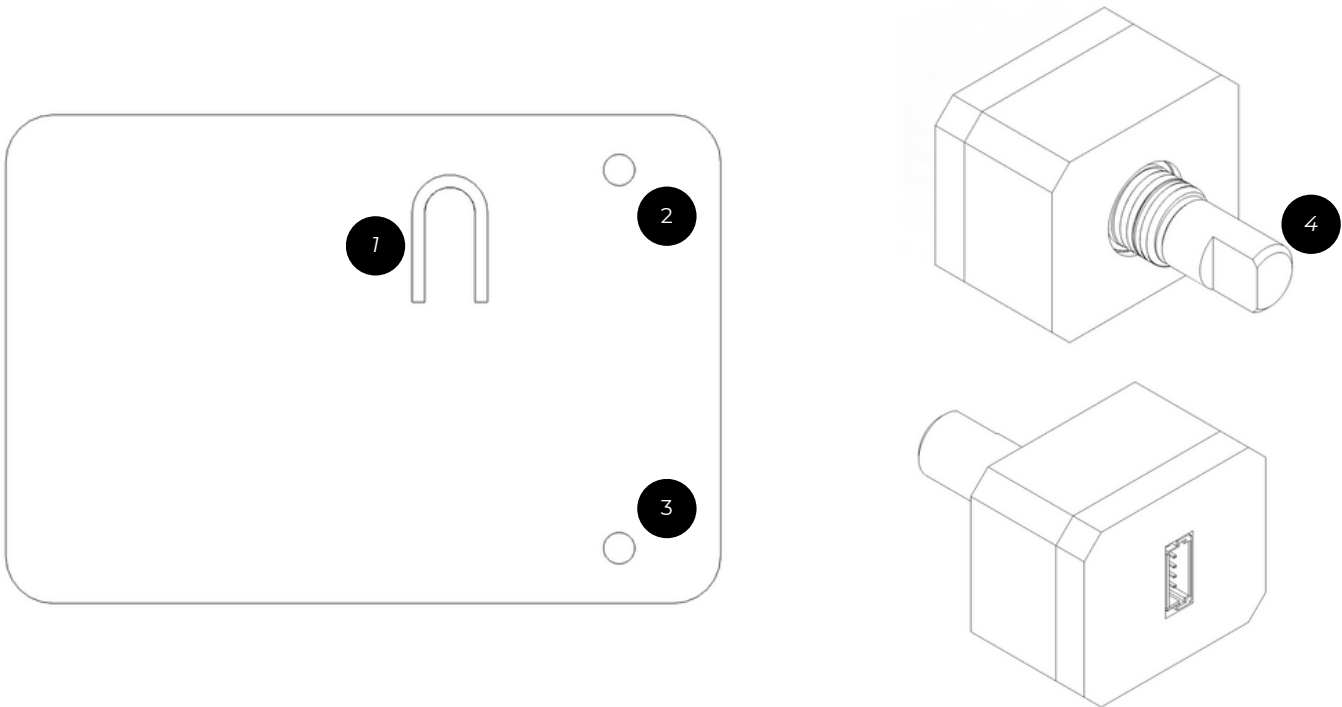

1. UPDATE BUTTON

**2. WHITE STATUS
LIGHT**

**3. RED POWER
LIGHT**

**4. DIA 6mm
ENCODER SHAFT**

ASSEMBLY

USB HID

- *Connect the RE_SWC kit to your device with a USB C cable (must support data & power)*
- *The RED power indicator on the RE_SWC will illuminate and stay on*

Others

- *Solder the RED wire from the 2-pin connector on the RE_SWC kit to your headunit's steering wheel control input pin*
- *Connect the RE_SWC to power with a USB C cable*
- *The RED power indicator on the RE_SWC will illuminate and stay on*

CONFIGURATION

HEADUNIT SELECTION

- *Ensure RE_SWC is not powered*
- *Press and hold the volume knob. Connect power to the RE_SWC while keeping the volume knob held*
- *Release the volume knob when the WHITE status light is illuminated*
- *Press the volume knob once. The WHITE status light will flash once. Headunit number 1 is now programmed. Repeat this step until the desired headunit number is reached - refer to the headunit legend*
- *When the desired headunit number is entered, press and hold the volume knob. The WHITE status light will flash. Release the volume knob. The RE_SWC will flash x times where x is the headunit number entered*


HEADUNIT LEGEND

HEADUNIT NUMBER	HEADUNIT TYPE / BRAND
1	<i>GENERIC RESISTIVE</i>
2	<i>JVC</i>
3	<i>KENWOOD</i>
4	<i>ALPINE</i>
5	<i>PIONEER / SONY</i>
6	<i>USB HID</i>

FUNCTIONS

INPUT	GENERIC RESISTIVE	JVC	KENWOOD	ALPINE	PIONEER / SONY	USB HID
Volume Knob CW	<i>Any</i>	<i>Volume +</i>	<i>Volume +</i>	<i>Volume +</i>	<i>Volume +</i>	<i>Volume +</i>
Volume Knob CCW	<i>Any</i>	<i>Volume -</i>	<i>Volume -</i>	<i>Volume -</i>	<i>Volume -</i>	<i>Volume -</i>
Button Short Press	<i>Any</i>	<i>Mute</i>	<i>Mute</i>	<i>Mute</i>	<i>Mute</i>	<i>Mute</i>
Button Long Press	<i>Any</i>	<i>Next Track</i>	<i>Next Track</i>	<i>Next Track</i>	<i>Next Track</i>	<i>Next Track</i>
Button Double Press	<i>Any</i>	<i>Previous Track</i>	<i>Previous Track</i>	<i>Previous Track</i>	<i>Previous Track</i>	<i>Previous Track</i>

VOLUME KNOB DIMENSIONS

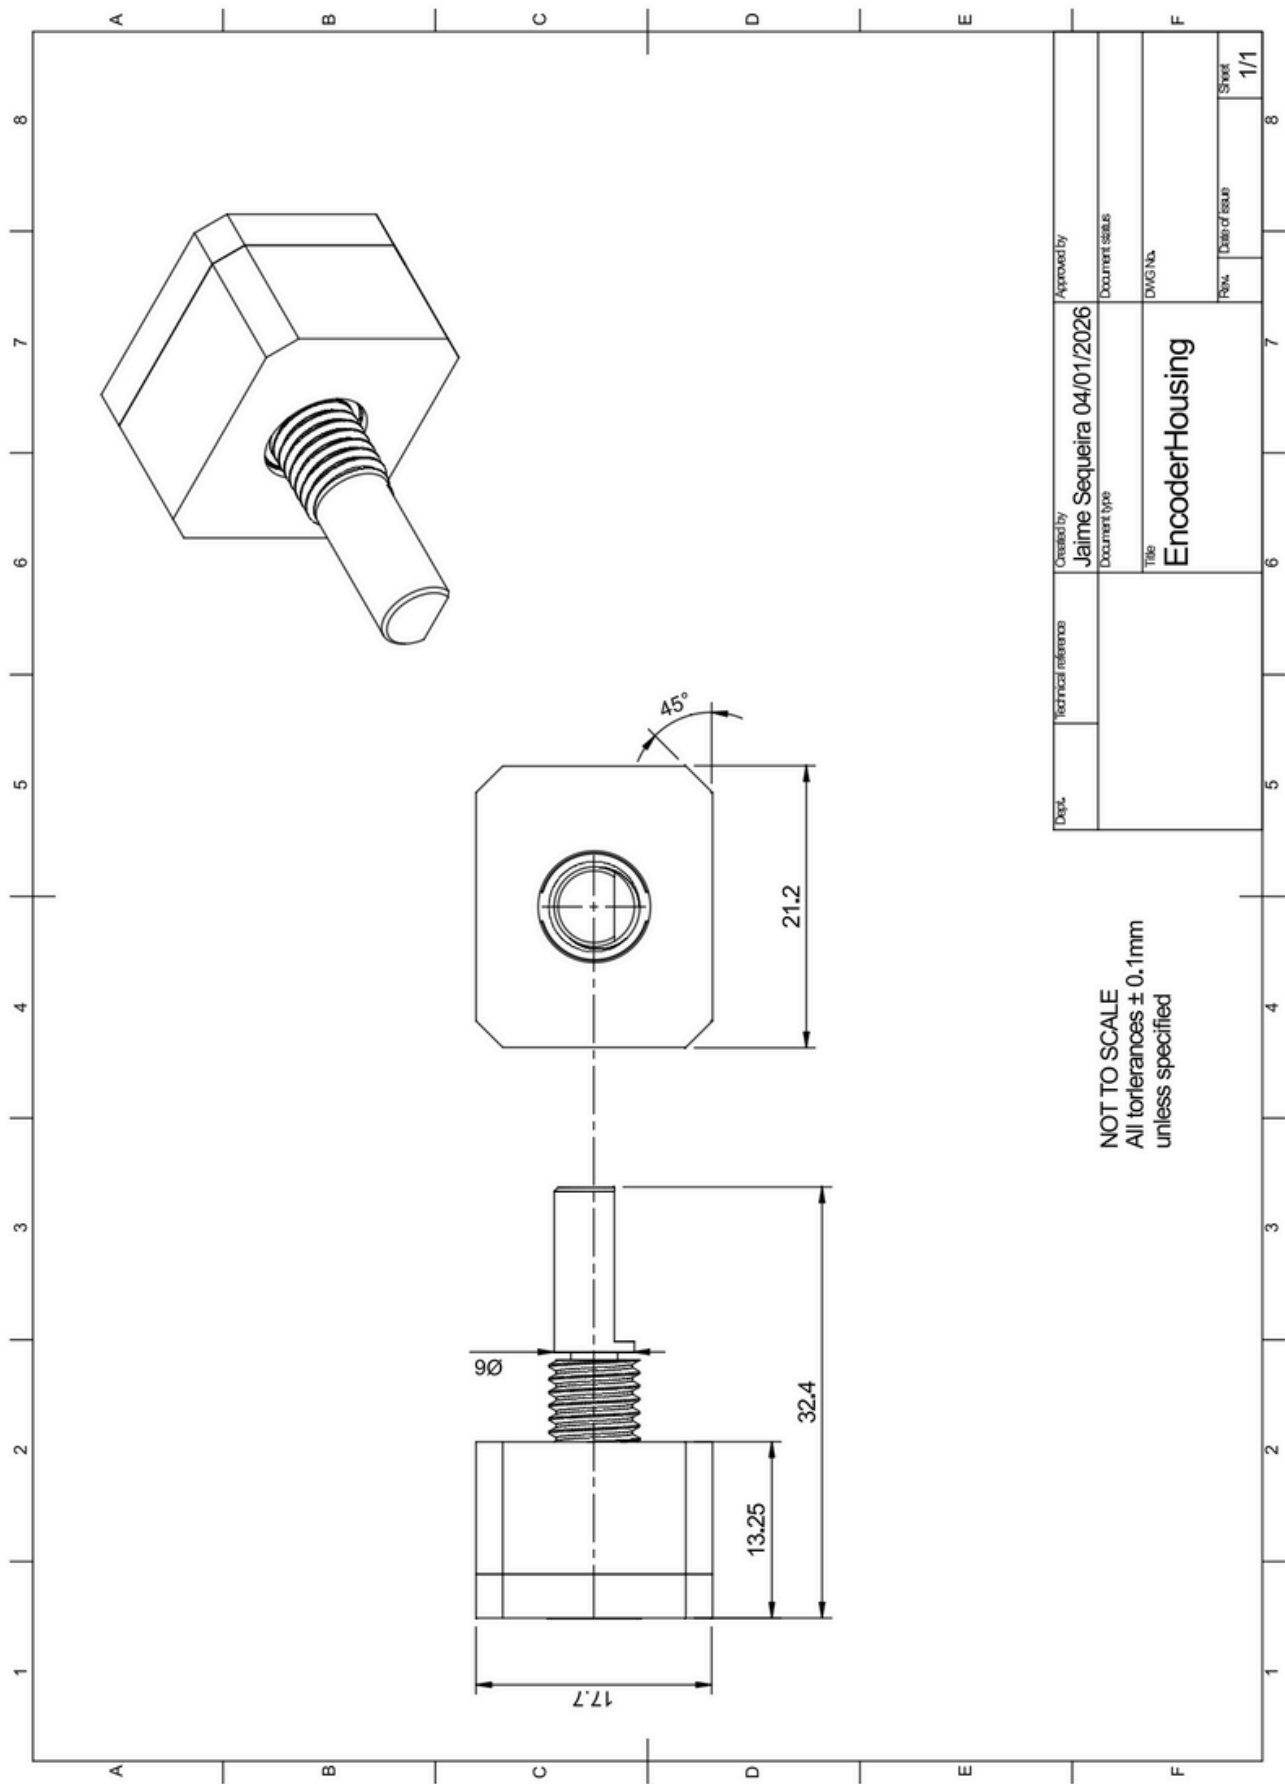

RE_SWC SPECS

Input

5V / 100mA USB-C

CONNECTORS

VOLUME KNOB: JST SHR-05V-S-B

SWC OUT: JST SHR-02V-S-B

MCU:

WCH CH32X035F8U6

Digital Rheostat:

MCP4131-104E/SN

SPI @ 250kHz

DISCLAIMERS

- *Pounamu Electronics is not affiliated or associated with any headunit manufacturers or brands*
- *Pounamu Electronics is not affiliated or associated with the USB Implementers Forum (USB-IF)*

COMPLIANCE

- FCC ID: #####
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Document Revision History

- *Rev 1 - Initial release*
- *Rev 2 - FW V2.0.0*
 - *Added instructions for JVC headunit interface*
 - *Added instructions for Kenwood headunit interface*
- *Rev 3*
 - *Overhaul for RE_SWC V2*
 - *Added disclaimers section*
 - *Added compliance section*