


FINAL WORKING CONNECTION

6P6C modular plug shown at the copper-contact end, contacts facing you.

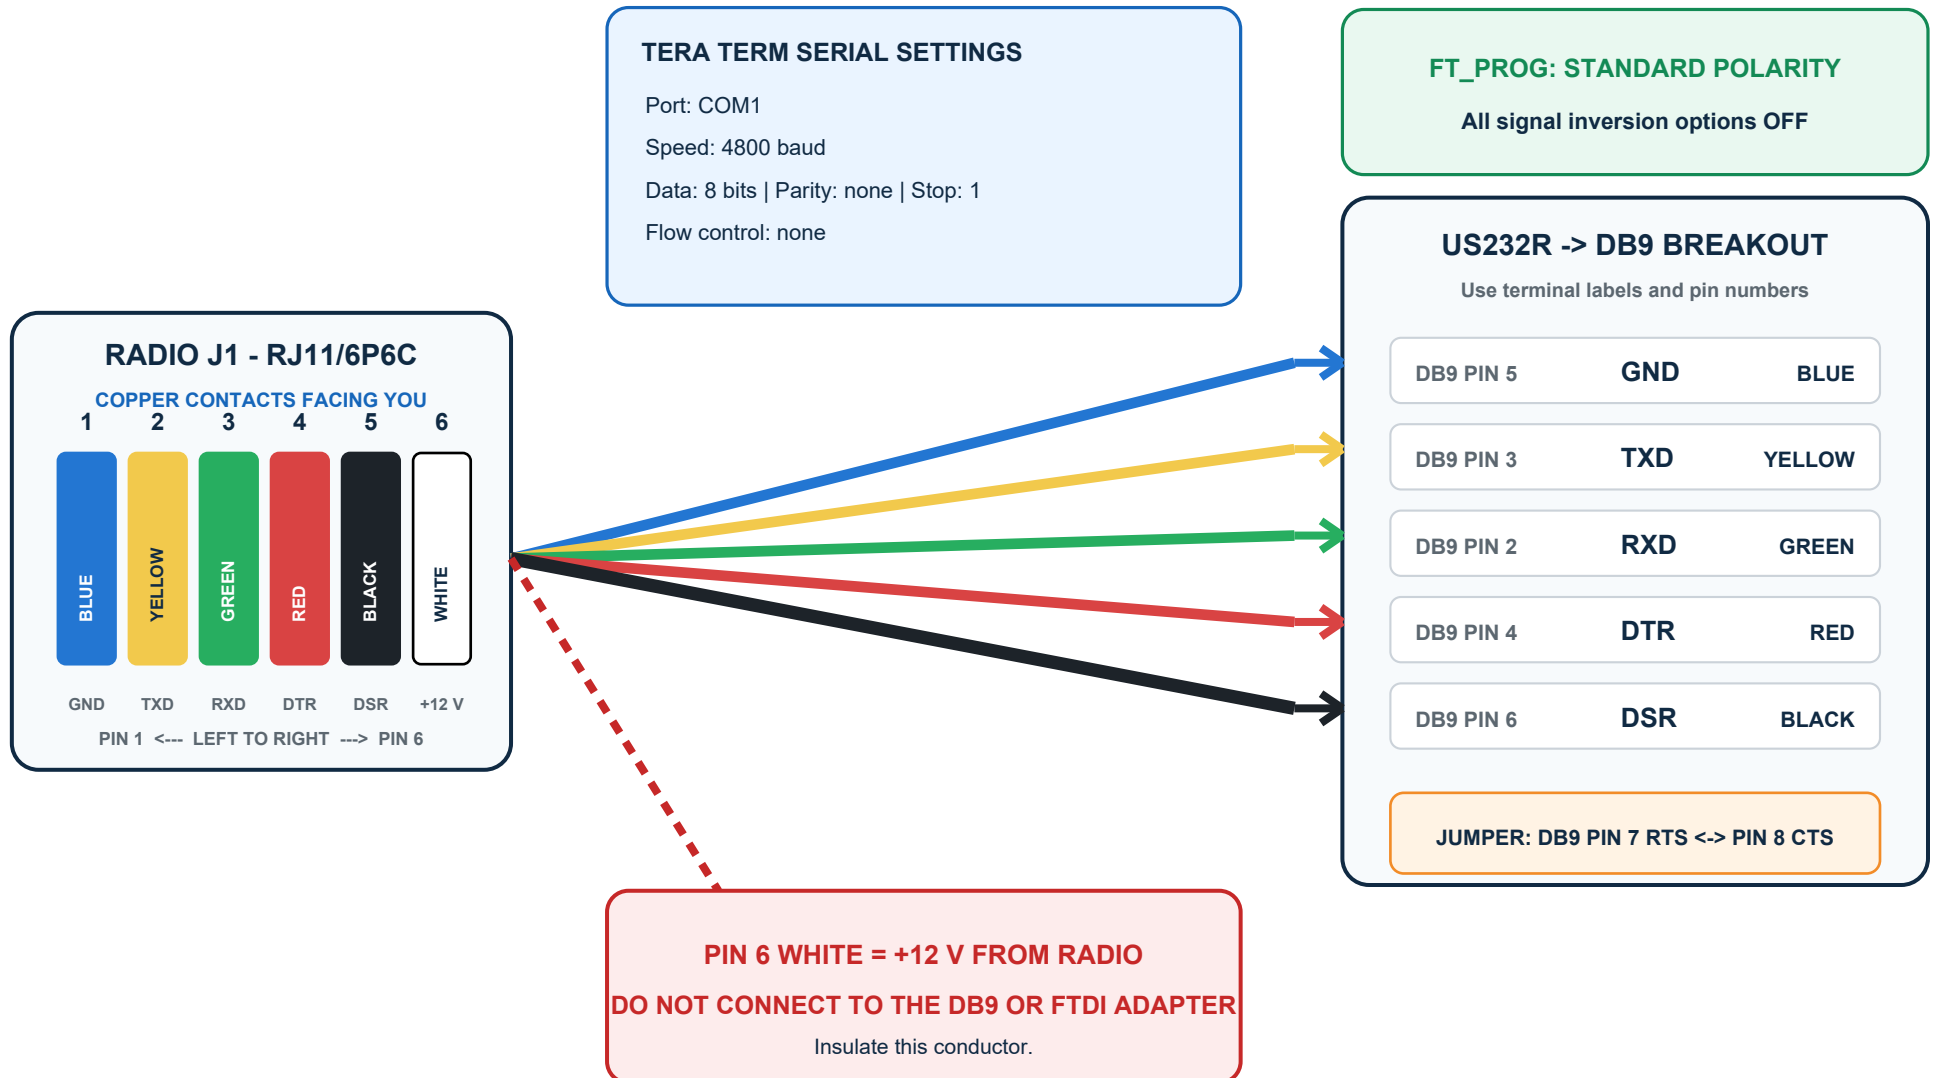

HANDHELD PROGRAMMER -> PC KEYBOARD COMMANDS

Use the PC key sequence below in Tera Term. Letter commands are lower-case. The first five rows are complete key equivalents; the AES quick-command chart assigns a named standalone action only to F5 / Ctrl+U.

Handheld key	PC / Tera Term	Command or function
F1	Ctrl+Q	Context/menu key equivalent
F2	Ctrl+R	Context/menu key equivalent
F3	Ctrl+S	Context/menu key equivalent
F4	Ctrl+T	Context/menu key equivalent
F5	Ctrl+U	Send Text Message
Shift+F1	a	RX Monitor On / Off (toggle)
Shift+F2	b	TX Monitor On / Off (toggle)
Shift+F3	c	Monitor All On / Off (toggle)
Shift+F4	d	Test Status
Shift+F5	e	Key Transmitter for 5 seconds
Ctrl+F1	f	Setup Unit - ID number and Cipher
Ctrl+F2	g	Set Timers - Check-In Interval and AC Report Delay
Ctrl+F3	h	Set Zones - Supervised / Fire / Bypassed / Restoral
Ctrl+F4	i	Set Modes - Repeating and AC Fail Suppression
Ctrl+F5	j	Reset RAM - Y/N; keeps ID number and Cipher

Operating notes	Safe reset / monitor notes
- Type a through j as lower-case commands. - When entering hexadecimal values, use upper-case A-F. - Set Tera Term backspace handling to destructive if available. - Press Enter after a requested value.	- Commands a, b, and c toggle monitoring; turn them off when finished. - Command j resets RAM/defaults except the ID number and Cipher; answer its Y/N prompt carefully. - If a monitor mode is left on, reset the unit after work is complete.

Reference manuals: AES 7744F Installation Manual - <https://aes-corp.com/wp-content/uploads/2020/07/7744-Install-Manual.pdf> | AES 7788F Installation Manual - <https://aes-corp.com/wp-content/uploads/2020/07/40-7788-Rev-6.pdf>