




Spare Parts Catalogue

Specification No. 597400-81

Book No. 9006491 02 Rev. 01

Product No. 597400 91

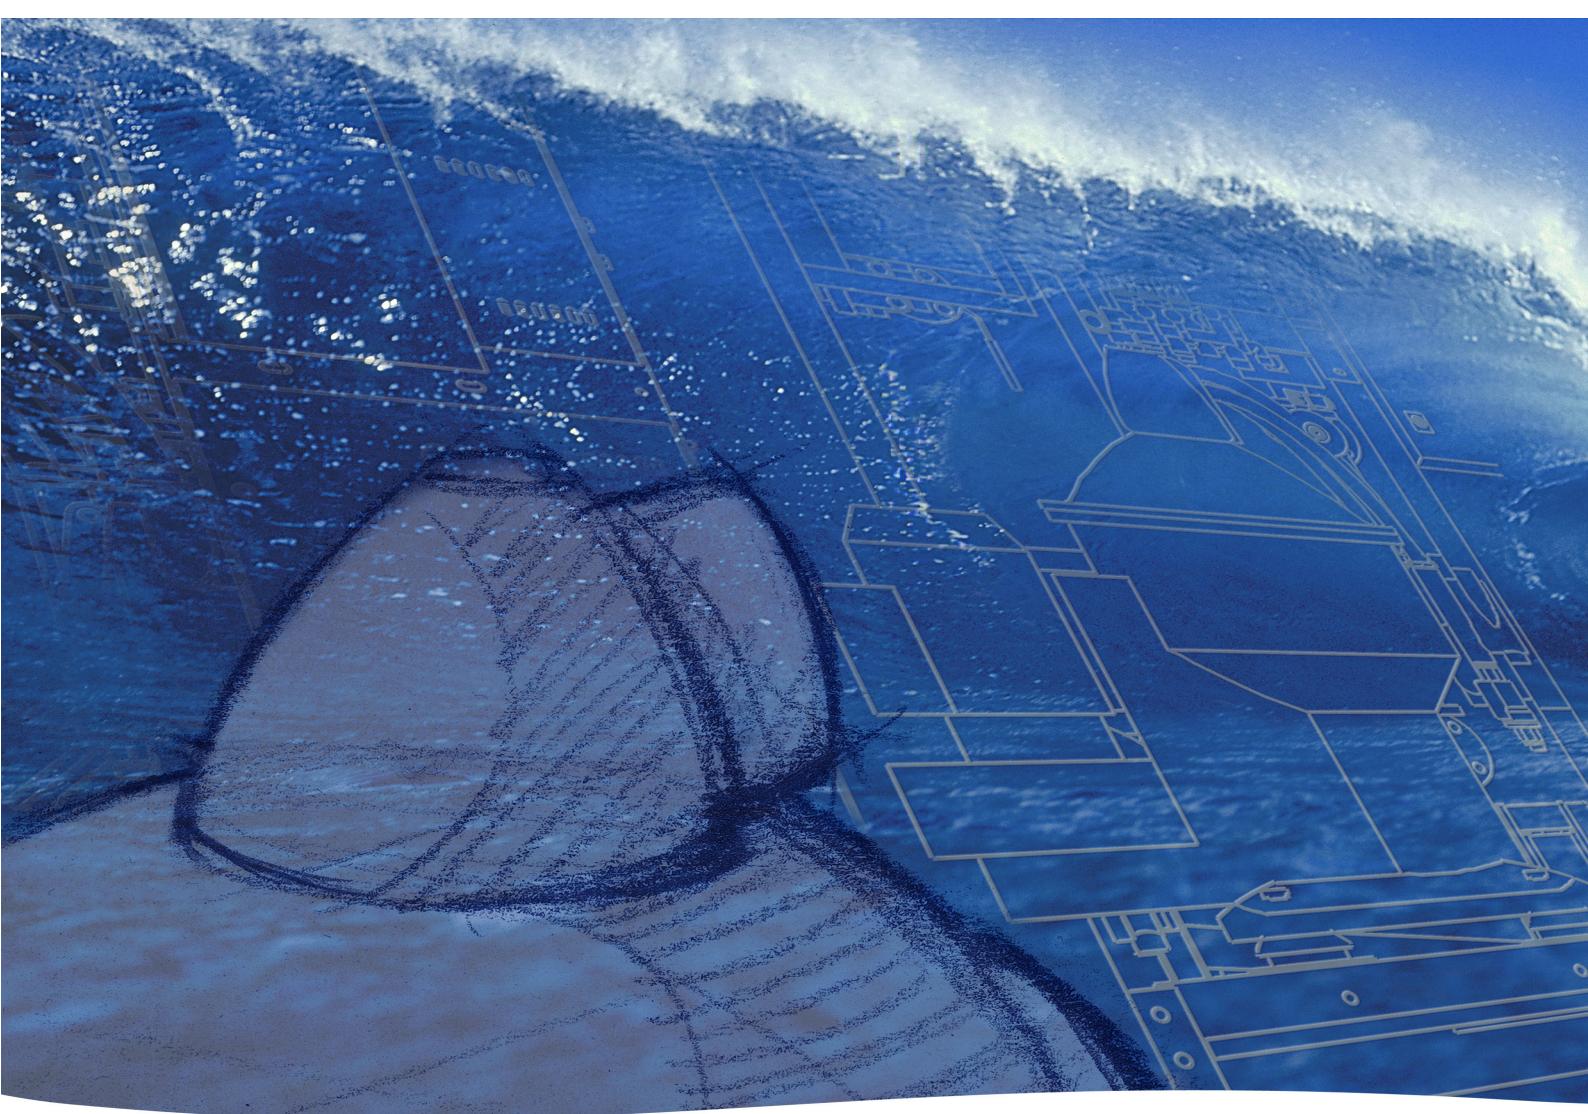

Spare parts catalogue

Reservdelskatalog

Ersatzteilkatalog

**Catalogue de pièces de
rechange**

**Catalogue de piezas de
recambio**

**Каталог запасных
частей**

Catalogo parti di ricambio

Catalogo de pecas sobressalentes

Varaosaluetelo

Καταλογος ανταλλακτικων

Reserveonderdelen-catalogus

Reservedelskatalog

Alfa Laval reserves the right to make changes at any time without prior notice.

Any comments regarding possible errors and omissions or suggestions for improvement of this publication would be gratefully appreciated.

Copies of this publication can be ordered from your local Alfa Laval company.

Published by: Alfa Laval S.p.A.
Marine & Diesel Equipment
20900 - Monza, MB
Italy

© Copyright Alfa Laval Italy, Jan 2014.

Contents

1	Read this first	5
1.1	General information	6
1.2	Translation list	9
2	Sludge outlet block	12
2.1	Sludge outlet S 805 / S 815	14
3	Feed supervision block	16
4	Light phase regulating block	18
4.1	Water Transducer MT60	20
4.2	Pressure transmitter	22
5	3-Way valve block	24
6	3-way valve Spare Parts	26
7	Flexible hoses block	28
7.1	Flexible hoses kit	30
8	Operating water valve block	32
8.1	Valve block water	34
8.2	SV10A Assembly	36
9	Air distributor kit	38
10	Control Block	40
10.1	Control_Unit incl. Starter	42
10.1.1	Control Cabinet	44
10.1.2	PLC standard kit	46
10.1.3	Main switch	48
10.1.4	RJ45 connector kit	50
10.1.5	Motor starter	52
11	Water block spare parts	54
12	Cross reference list	56

1 Read this first



- en** Check the machine unit number on the name-plate before using this catalogue
- sv** Kontrollera maskinenhetens nummer på maskinskytten innan du använder katalogen
- de** Das Typenschild - ein Hinweis zur korrekten Ersatzteilnummer
- fr** La plaque de la machine, un guide pour trouver le numéro de pièce de rechange correct
- es** La placa-marca de la máquina - guía del número correcto del repuesto
- ru** Фирменная табличка машины - указатель правильного номера запасной части
- it** La targhetta della macchina - guida al corretto numero dei ricambi
- pt** La placa do fabricante da máquina - um guia do número correto das partes sobressalentes
- fi** Konekilpi - opastin oikeaan varaosanumeroon
- el** Η πινακίδα της μηχανής είναι ο οδηγός του σωστού ανταλλακτικού
- nl** Het gegevensplaatje - een wegwijzer naar het juiste onderdeelnummer
- da** Typeskiltet - en guide til det rette reservedelsnummer.

1.1 General information

en

Safeguard your commitment to quality by always using genuine Alfa Laval spare parts.

Remember, Alfa Laval cannot accept responsibility for the failure of a separator equipped with non-original spare parts. We guarantee the quality and reliability of our products.



sv

Följ ditt kvalitetstänkande genom att endast använda Alfa Laval originalreservdelar.

Kom ihåg att Alfa Laval inte tar något ansvar för fel på en separator, som innehåller icke-originaldelar. Vi garanterar kvaliteten och driftsäkerheten endast hos våra egna produkter.

de

Aus Rücksicht auf Ihr Bestreben um beste Qualität sollten Sie nur Alfa Laval Originalersatzteile benutzen.

Vergessen Sie nicht, Alfa Laval kann keine Verantwortung für das Versagen eines Separators übernehmen, der nicht mit Originalersatzteilen versehen ist. Wir garantieren Qualität und Zuverlässigkeit unserer Produkte.

fr

Préservez la qualité de vos équipements en n'employant que des pièces de rechange Alfa Laval.

N'oubliez pas q'Alfa Laval décline toute responsabilité en cas de panne d'un séparateur non équipé de pièces de rechange d'origine. Nous garantissons la qualité et la fiabilité de nos produits.

es

Mantenga su compromiso con la calidad, al usar siempre piezas de repuesto Alfa Laval auténticas.

Recuerde que Alfa Laval no acepta responsabilidad por el fallo de una separadora equipada con piezas de repuesto no originales. Garantizamos la calidad y fiabilidad de nuestros productos.

ru

Гарантируйте надежность качества всегда используя подлинные запасные части фирмы Alfa Laval.

Запомните, что Alfa Laval не несет ответственности за повреждение сепаратора, оснащенного неподлинными запчастями. Мы гарантируем качество и надежность наших изделий.

it

Salvaguardate la vostra garanzia di qualità facendo sempre uso di parti di ricambio Alfa Laval autentiche.

Tenete presente che la Alfa Laval non può accettare responsabilità per avaria ad un separatore attrezzato con parti di ricambio non originali. Noi garantiamo la qualità l'affidabilità dei nostri prodotti.

**fi**

Varmistakaa vastuunne laadusta käyttämällä aina alkuperäisiä Alfa Laval varaosia.

Muistikaa, Alfa Laval ei voi hyväksyä vastuuta ei-alkuperäsillä varaosilla varustetun separaattorin vaurioista. Me takaamme tuotteidemme laadun ja käyttövarmuuden.

pt

Proteja o seu cometimento a qualidade usando sempre peças sobressalentes genuinas Alfa Laval.

Não esqueça que Alfa Laval não aceita responsabilidade por falha de uma separadora equipada com peças sobressalentes não genuinas. Nós garantimos a qualidade e a confiança dos nossos produtos.

el

Εξασφαλίστε υψηλή ποιότητα χρησιμοποιώντας μόνο γνήσια ανταλλακτικά της Alfa Laval.

Έχετε υπόψη ότι η Alfa Laval δεν αναλαμβάνει καμμιά ευθύνη για βλάβες βουτυρομηχανής, οτην οποία έχουν εφαρμοστεί μή γνήσια ανταλλακτικά. Εγγυόμαστε ποιότητα και καλή λειτουργία μόνο για τα δικά μας προϊόντα.

nl

Streef naar een zo hoog mogelijke kwaliteit en gebruik uitsluitend originele Alfa Laval reserveonderdelen. Streef naar een zo hoog mogelijke kwaliteit en gebruik uitsluitend originele Alfa Laval reserveonderdelen.

Vergeet niet dat Alfa Laval niet verantwoordelijk is voor een defecte separator die niet-originale onderdelen bevat. Wij garanderen de kwaliteit en betrouwbaarheid van onze eigen produkten.



da

Hold Dem til den kvalitet, De har valgt at satse på, ved altid at anvende ægte Alfa Laval reservedele.

Husk, at Alfa Laval ikke kan påtage sig noget ansvar for fejl på en separator, som indeholder uoriginale dele. Vi kan kun garantere kvalitet og driftsikkerhed på vore egne produkter.

1.2 Translation list

Översättningslista

Übersetzungsliste

Liste de traduction

Lista de traducciones

en	sv	de	fr	es
Part no.	Reservdelsnummer	Teil-Nr.	Numéro de pièce	Pieza No.
Qty	Antal	Anzahl	Quantité	Cantidad
Description	Benämning	Bezeichnung	Dénomination	Descripción
Notes	Anmärkningar	Anmerkungen	Remarques	Notas
Machine type	Maskintyp	Maschinentyp	Type de machine	Tipo de máquina
Product no.	Produktnr	Produktnummer	Numéro de produit	Número de producto
Machine unit description	Maskinblocksbenämning	Bezeichnung des Maschinenblocks	Dénomination de partie de machine	Descripción de sección de la máquina
Machine unit no.	Maskinblocksnr	Maschinenblock Nr.	Partie de machine n°	No. de sección de máquina
Subassembly description	Undergruppsbenämning	Bezeichnung der Untergruppe	Dénomination de sous-ensemble	Descripción de subconjunto
Subassembly no.	Undergruppsnr	Untergruppe Nr.	Nº de sous-ensemble	Número de subconjunto
See page	Se sidan	Siehe Seite	Voir page	Véase la página
Fig. ref.	Figurhänvisning	Bildhinweise	Réf. de fig.	Referencia de figura
Product name	Produktnamn	Produktnname	Nom du produit	Nombre del producto
Exchange necessitates rebalancing of bowl	Utbyte nödvändiggör ombalantering av kulan	Austausch erfordert Wiederauswuchtung der Trommel	Le remplacement nécessite le rééquilibrage du bol	El racmbio requiere el reequilibrado del rotor
See separate spare parts list	Se separat reservdelslista	Siehe separate Ersatzteilliste	Voir liste séparée des pièces de rechange	Véase la lista de piezas separada
Not delivered as spare part	Levereras ej som reservdel	Nicht als Ersatzteil geliefert	Non livré comme pièce de rechange	No se entrega como pieza de recambio

Словарь перевода**Lista traduzioni****Lista para tradução****Käännösluttelo**

en	ru	it	pt	fi
Part no.	Деталь №	Nr. parte	Numero de peca	Varaosanumero
Qty	Кол—во	Quantita	Quantidade	Lukumäärä
Description	Наименование	Descrizione	Descricao	Nimitys
Notes	Примечания	Note	Notas	Huomautuksia
Machine type	Машина тнпа	Tipo macchina	Tipo de maquina	Konetyyppi
Product no.	Артикул №	Nr.prodotto	No. do produto	Tuotteen no
Machine unit description	Наименование блока машины	Descrizione unita macchina	Descricao da unidade da maquina	Koneenosan nimitys
Machine unit no.	Блок машины №	Nr. unita macchina	Numero de unidade da maquina	Koneenosan no
Subassembly description	Наименование группы	Descrizione sottogruppo	Descricao do subconjunto	Alaryhmän nimitys
Subassembly no.	Группа №	Nr. sottogruppo	Número de subconjunto	Alaryhmän no
See page	См. страницу	Vedi pagina	Véase la página	Ks sivu
Fig. ref.	Ссылка на эскиз	Rif. fig.	Referencia de figura	Kuvaviite
Product name	Наименование артикула	Nome prodotto	Nombre del producto	Tuotteen nimi
Exchange necessitates rebalancing of bowl	Замена требует балансировки барабана	La sostituzione comporta la equilibratura del tamburo	El racambio requiere el reequilibrado del rotor	Vaihdettaessa kuula tasapainoitettava uudelleen
See separate spare parts list	См. отдельный перечень запасных частей	Vedi lista separata delle parti di ricambio	Véase la lista de piezas separada	Katso erillistä varaosaluettelo
Not delivered as spare part	Не поставлена вместе с запасными частями	Non fornito come parte di ricambio	No se entrega como pieza de recambio	Ei toimiteta varaosana


ΓΛΩΣΣΑΡΙ Vertaallijst**Oversættelseliste**

en	el	nl	da
Part no.	Λριθμός ανταλλακτικού	Onderdeelnr.	Reservedelsnummer
Qty	Σύνολο	Hoeveelheid	Antal
Description	Περιγραφή	Beschrijving	Betegnelse
Notes	Παραπηρήσεις	Opmerkingen	Bemaerkninger
Machine type	Τύπος μηχανήματος	Machinetype	Maskintype
Product no.	Αριθμός προϊόντος	Produktnr.	Produktnr.
Machine unit description	Περιγραφή συγκροτήματος μηχανής	Machineblokbenaming	Maskinbetegnelse
Machine unit no.	Αριθμός συγκροτήματος μηχανής	Machineblokbenamning	Maskinnr.
Subassembly description	Περιγραφή υποσυγκροτήματος	Subgroepbenamning	Undergruppsbetegnelse
Subassembly no.	Αριθμός υποσυγκροτήματος	Subgroeprn.	Undergruppenr.
See page	Βλέπε σελίδα	Zie blz.	Se side
Fig. ref.	Παραπομπή σε εικόνα	Afb. ref.	Figurhenvisning
Product name	Όνομασία προϊόντος	Produktnaam	Produktnavn
Exchange necessitates rebalancing of bowl	Ανταλλαγή απαιτεί επαναρρύθμιση ισορροπίας του τύμπανου	Vervangning vereist herbalanceren van de kogel	Udskriftning kraever afbalcering af kuglen
See separate spare parts list	Βλέπε ειδική λίστα ανταλλακτικών	Vervangning vereist van de kogel	Se spaat reserve-delsliste
Not delivered as spare part	Δεν παραδίδεται ως ανταλλακτικό	Niet geleverd als reserveonderdeel	Levereres ikke som reservedel

2 Sludge outlet block

2 Sludge outlet block

Ref.	Part. No.	Description	Subassembly description:	Notes
			9000351 AA	
1	595084 80	Sludge Outlet	1	Separator Type(S 805,S 815). See page 14
3	598546 80	Butterfly Valve Kit	1	Separator Type(S 805,S 815). This is an option

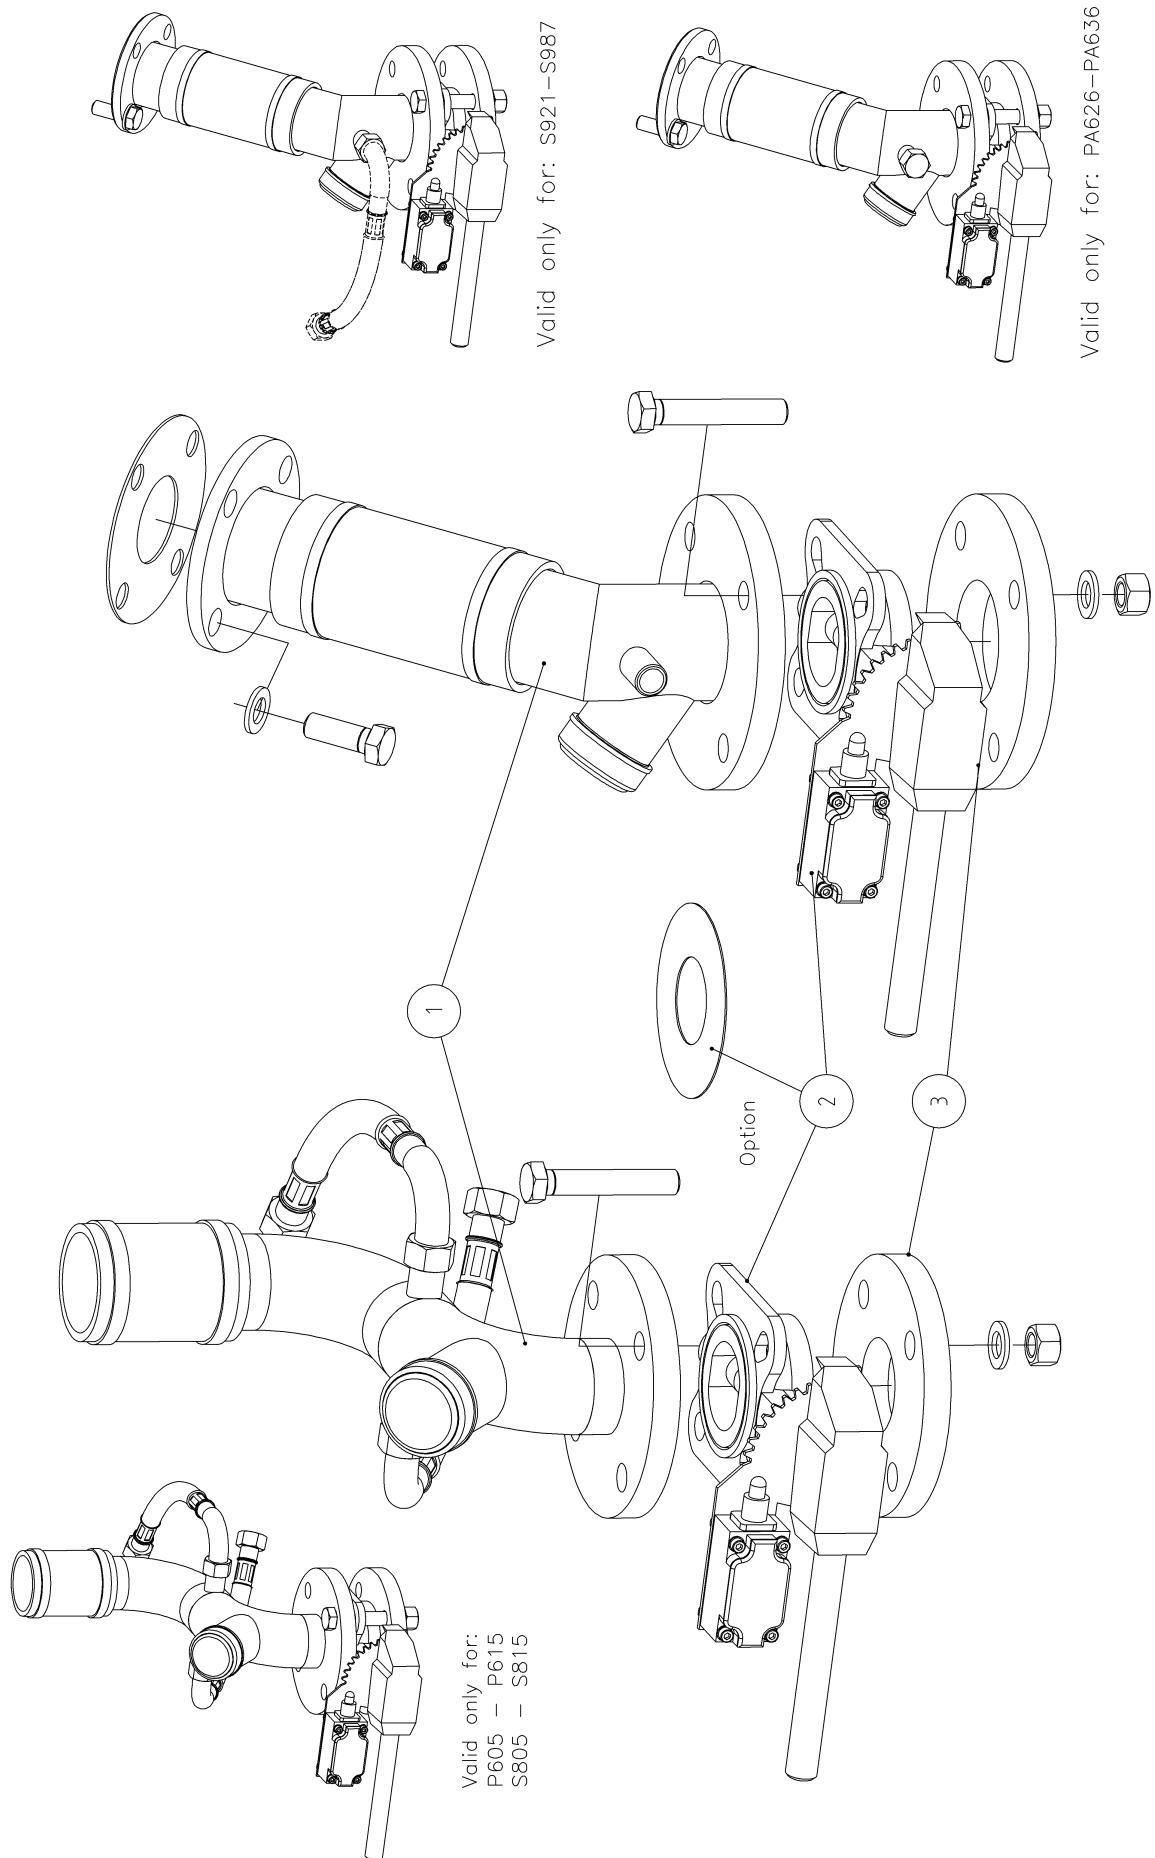


2 Sludge outlet block

2.1 Sludge outlet

S 805 / S 815


Ref.	Part. No.	Description	Subassembly description:	Notes
			595084 80	
1	595085 80	Discharge outlet DIN	1	
2	1765934 07	Flexible connection	1	
3	1765934 06	Flexible connection	1	
4	1762017 01	Hose	1	
5	1762020 03	Hose clip	2	
6	1766096 01	Plug	1	

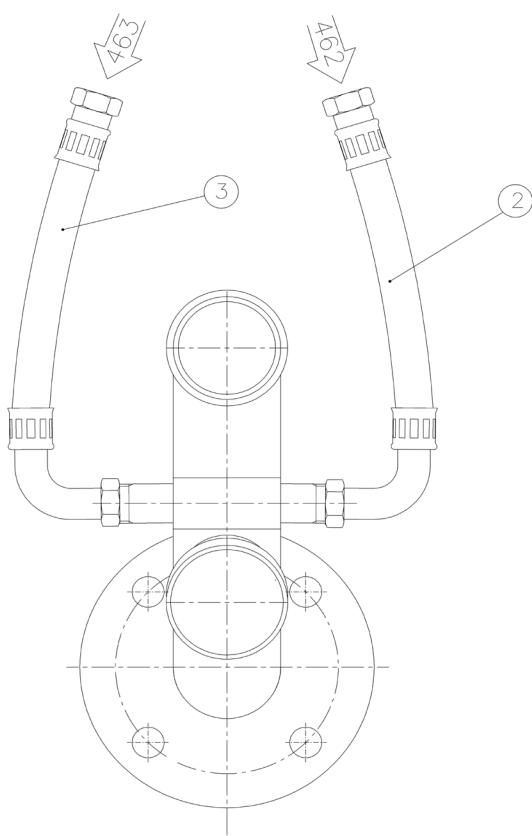

462 → Drain of frame top part, lower





463 → Drain of frame top part, upper

222 → Sludge outlet

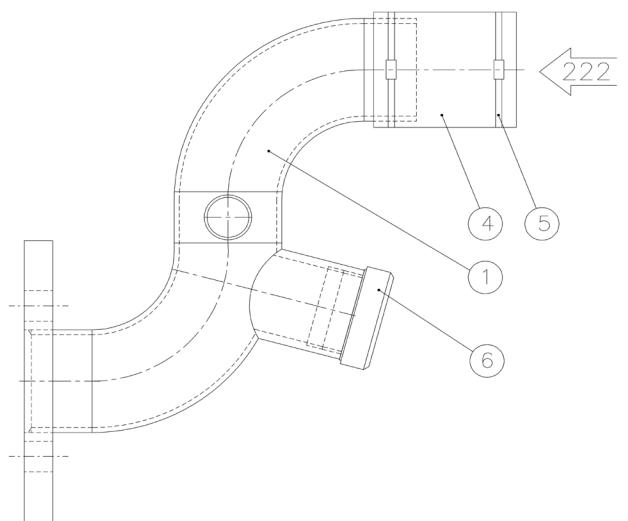


3 Feed supervision block

Ref.	Part. No.	Description	Subassembly description:	Notes
			9000152 AA	
1	1761626 01	Thermometer	1	Optional
3	597256 01	Temperature Sensor	1	

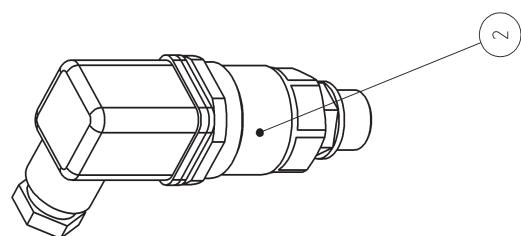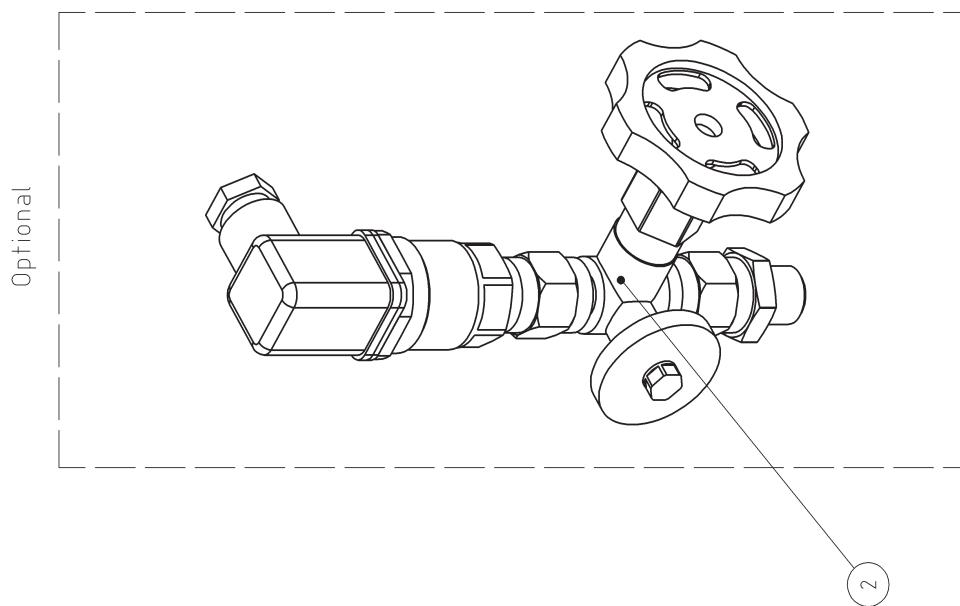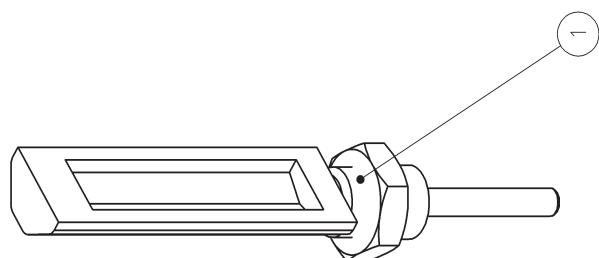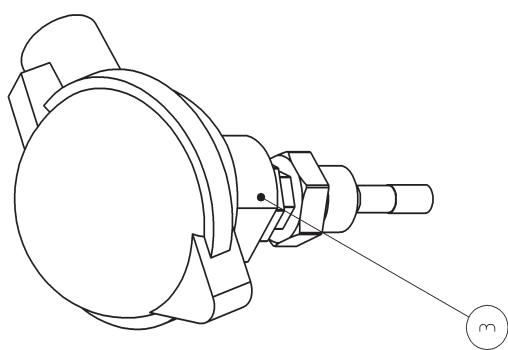



4 Light phase regulating block

Ref.	Part. No.	Description	Subassembly description: 9000158 AA	Notes
			Quantity	
1	589700 80	Water Transducer MT60	1	
2	580920 81	Cable 19 (5 m)	1	
3	582752 82	Pressure Transmitter	1	Separator Type(S 805,S 815).
4	569304 01	Ball Valve	1	Optional
5	543054 05	Pressure Gauge	1	Normal - This is an optional
5	584372 05	Pressure Gauge	1	Green field - This is an optional

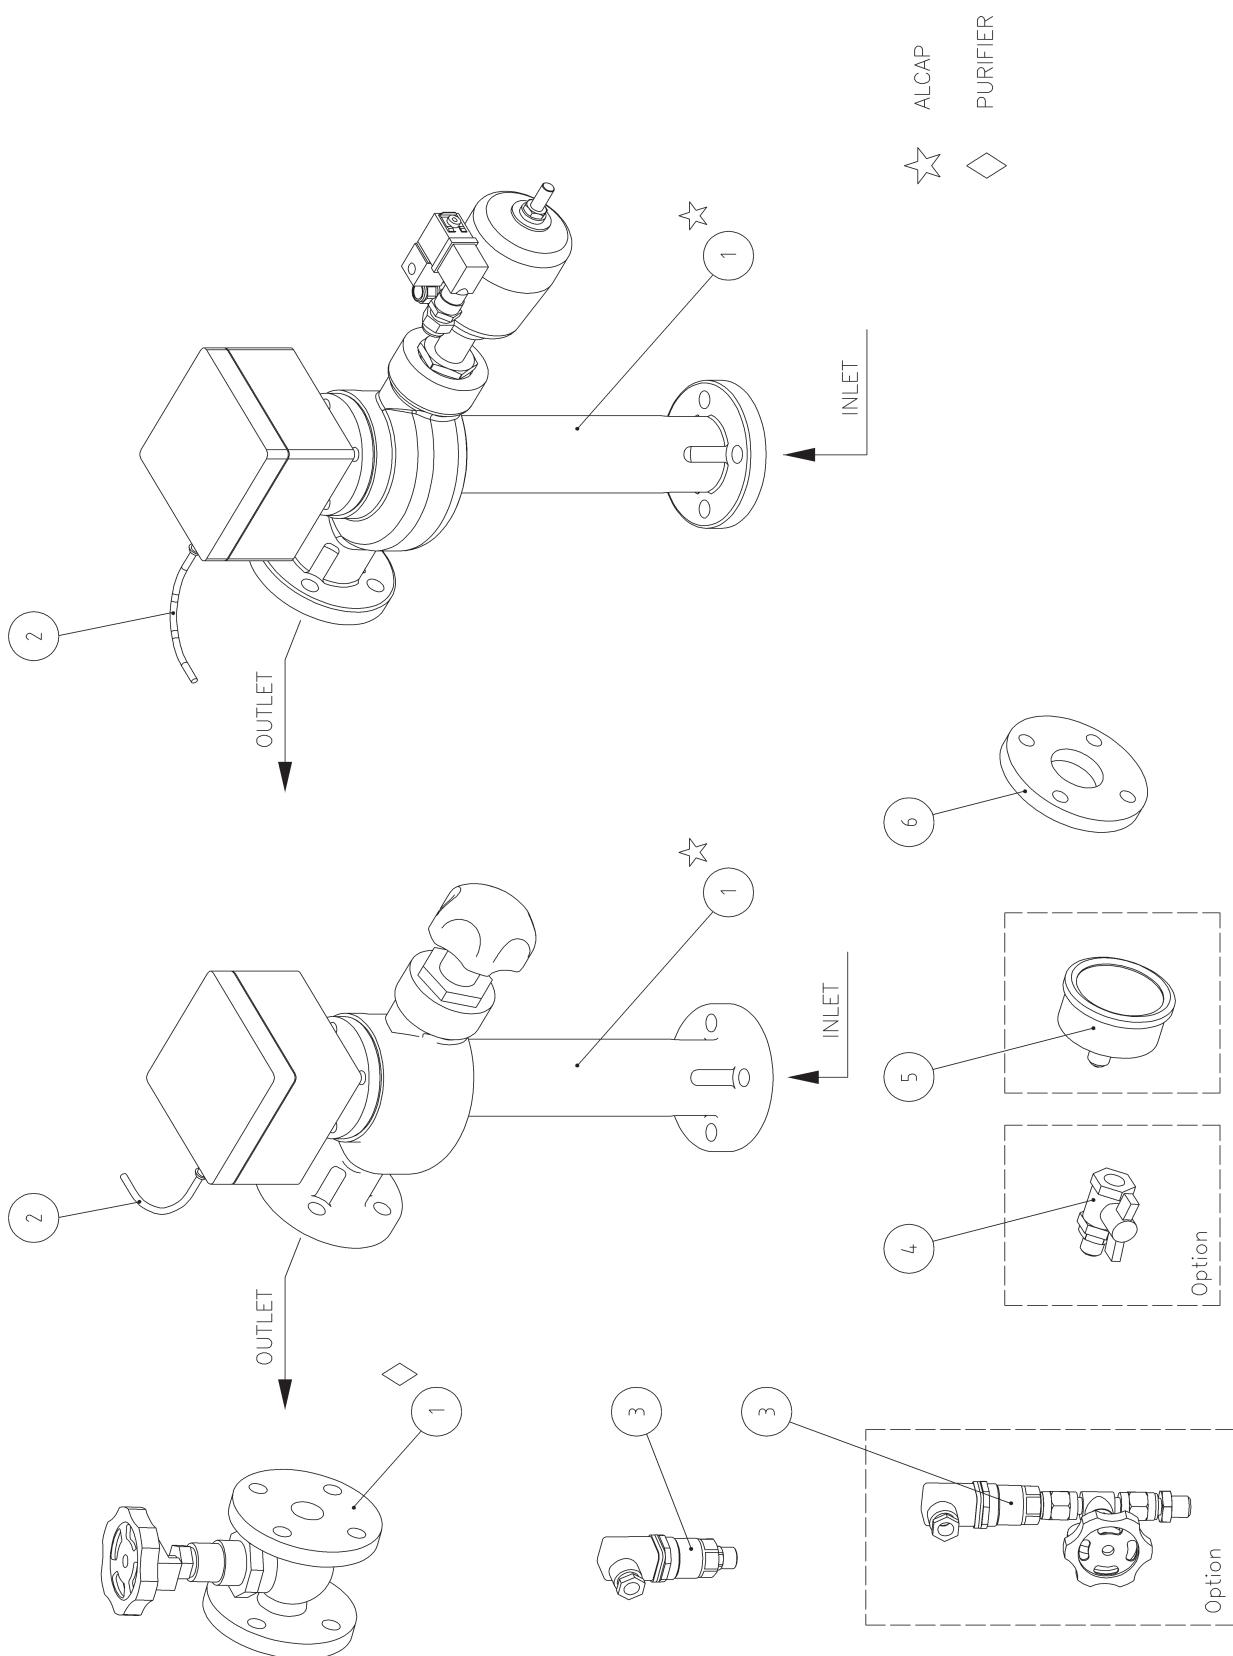


4.1 Water Transducer MT60

Ref.	Part. No.	Description	Subassembly description: 589700 - 80	Notes
			Quantity	
7	1765130 01	Gasket	1	
18	581017 01	MT60 Circuit Board	1	
28	582554 01	Valve Seat DN25	1	
29	582585 01	Manual insert DN25	1	
30	586248 03	Gasket	1	

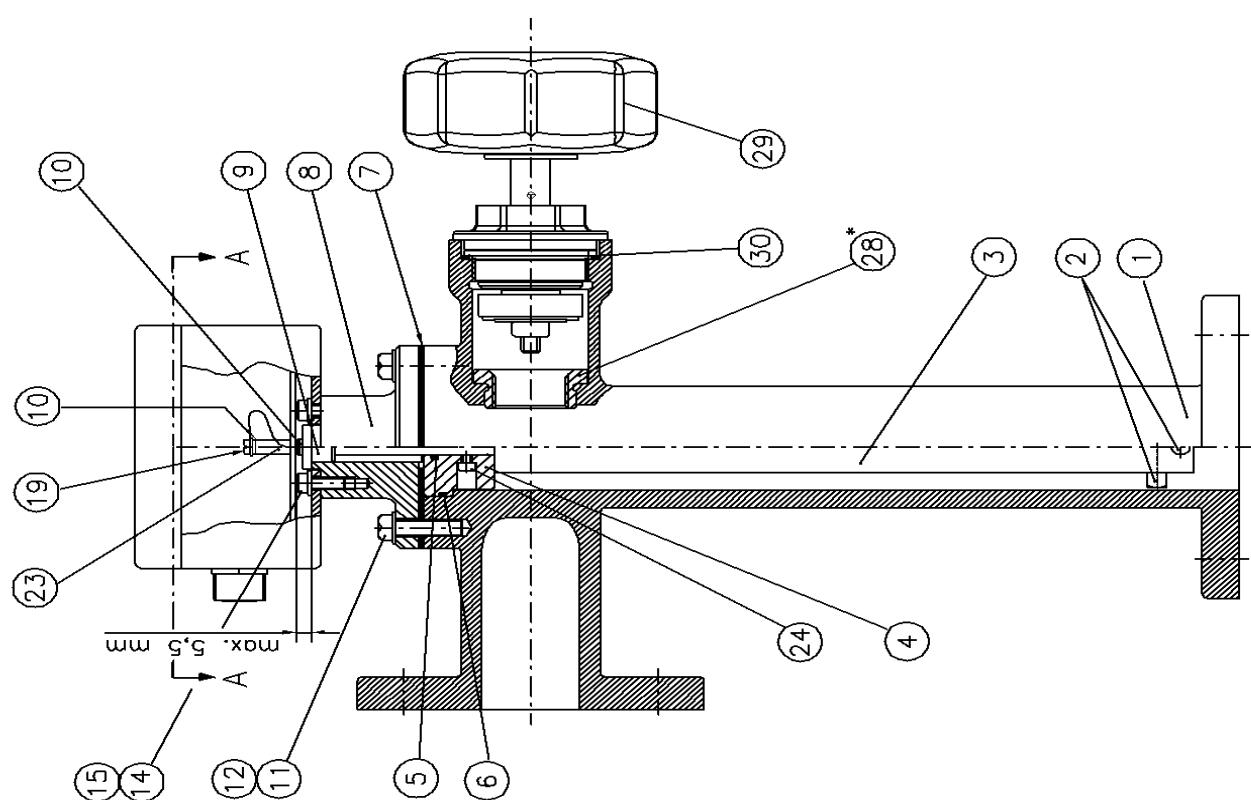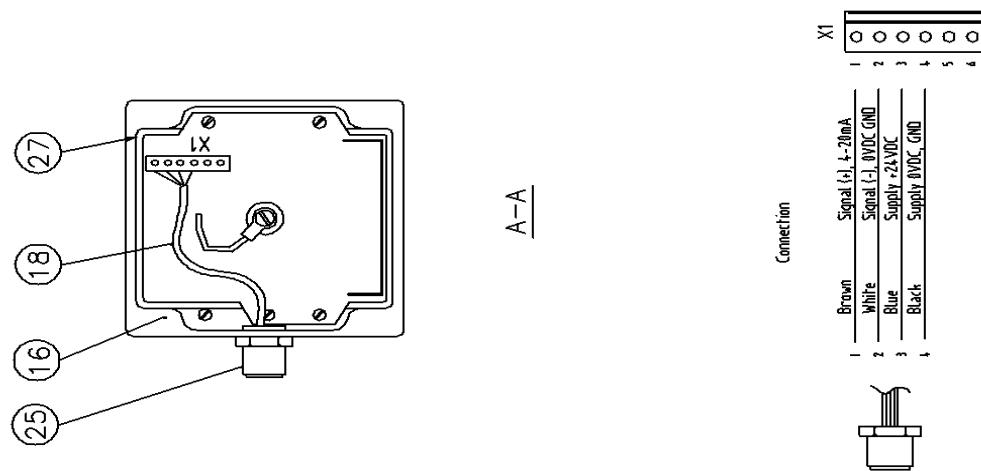


4.2 Pressure transmitter


Ref.	Part. No.	Description	Subassembly description:	Notes
			582752-82	
Quantity				
1	597255 02	Pressure transmitter	1	
2	1763903 03	Needle valve	1	Optional
3	53551716 02	Washer	2	

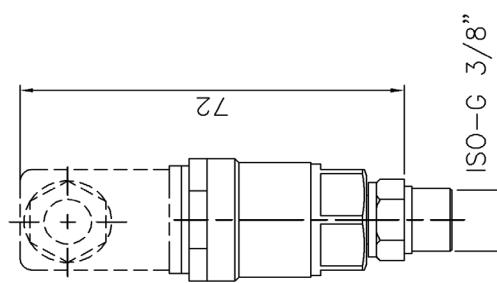

Basic

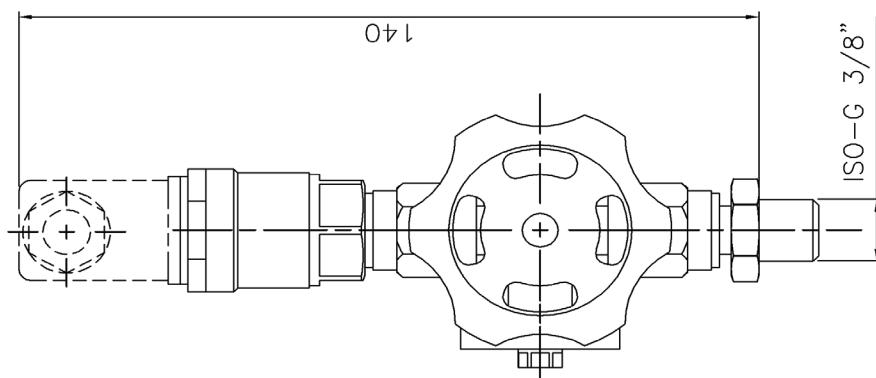


Option

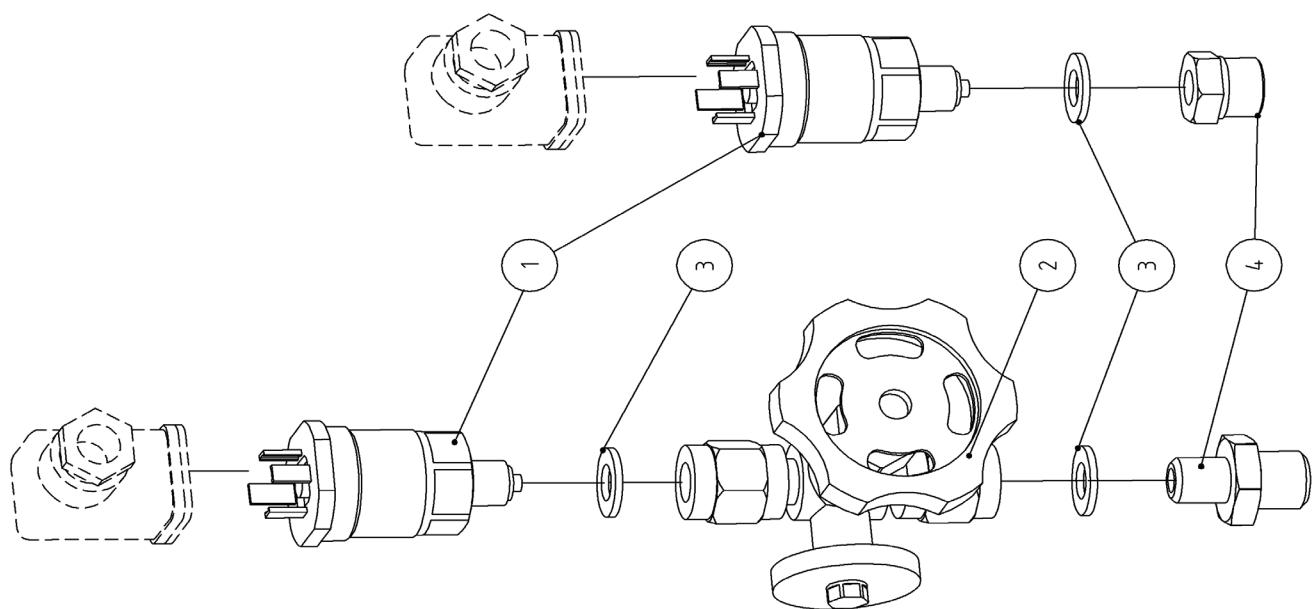


5 3-Way valve block

Ref.	Part. No.	Description	Subassembly description: 9001721 80	Notes
			Quantity	
1	597909 01	3-Way Valve DN25 DIN	1	
2	574409 83	3-way solenoid valve	1	
3	1763491 01	Nipple	1	G1/8-G1/4

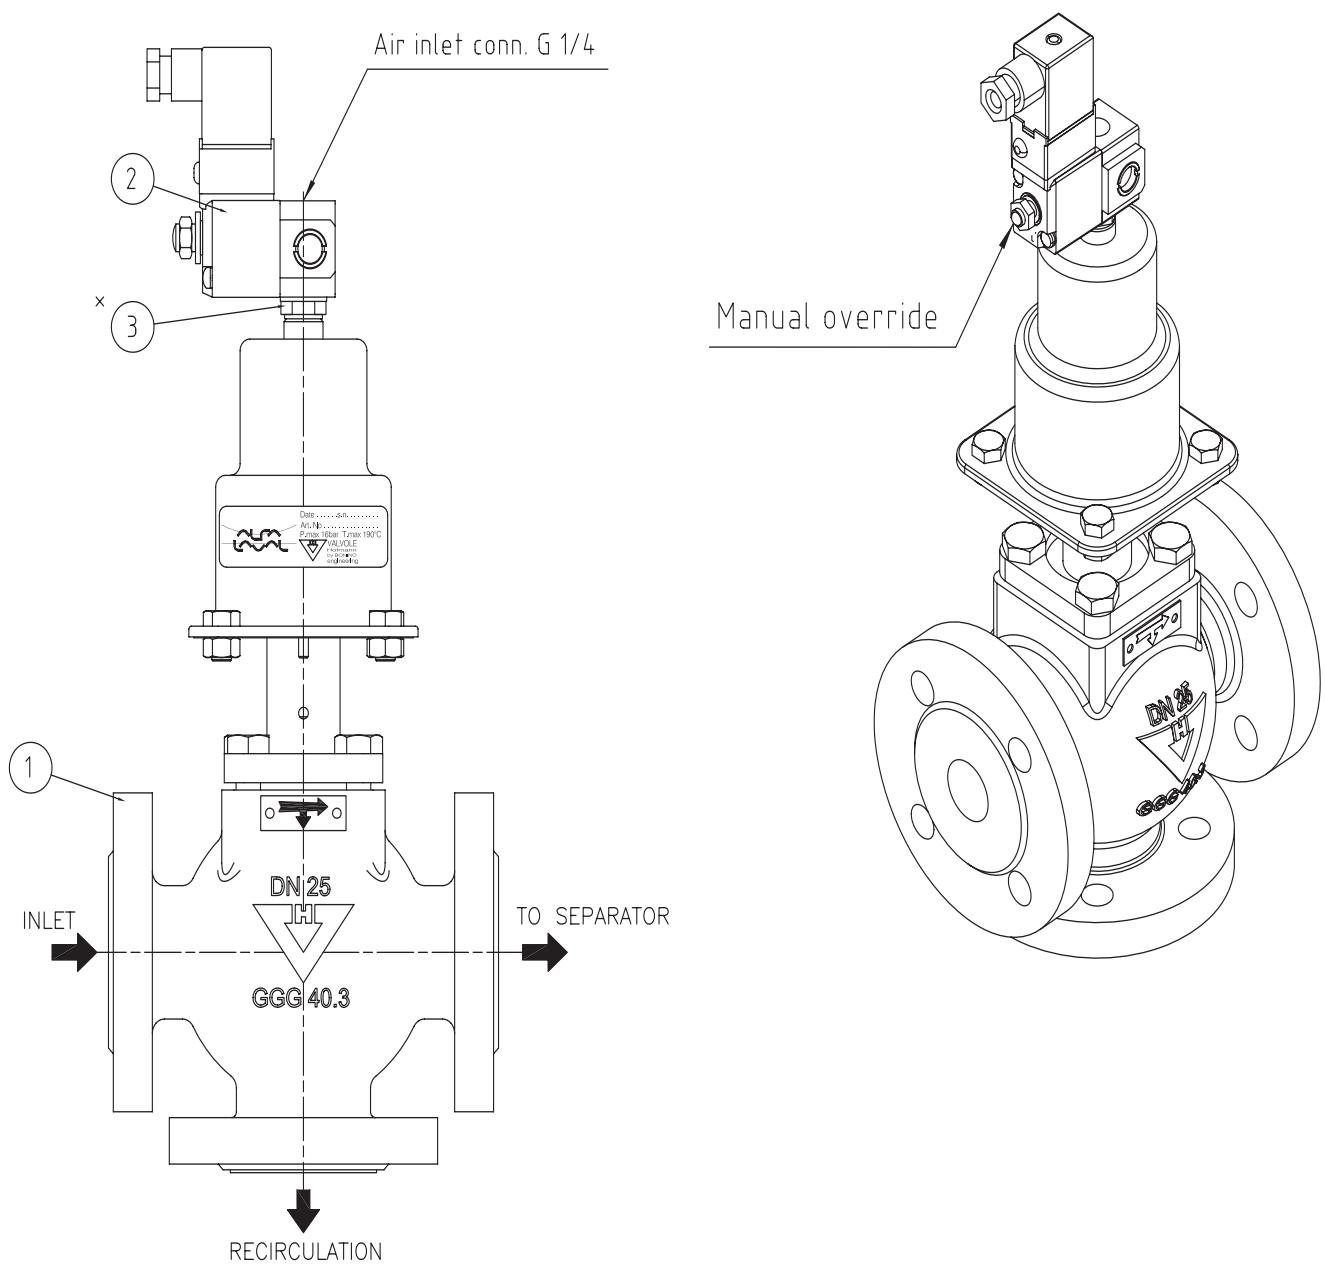


6 3-way valve Spare Parts

Ref.	Part. No.	Description	Subassembly description:	Notes
			598018-80	
Quantity				
1	598018 01	Gasket	1	SMC code: 00090/A
2	598018 02	Stuffing box	1	SMC code: 01184
3	598018 03	Body gasket	1	SMC code: MD2119/GRAF
4	598018 04	O-Ring	1	SMC code: 04185
5	598018 05	O-Ring	1	SMC code: 01047
6	598018 06	O-Ring	1	SMC code: 01053
7	598018 07	Plug gasket	2	SMC code: MD2106-PK
8	598018 08	Flat gasket	1	SMC code: 23180

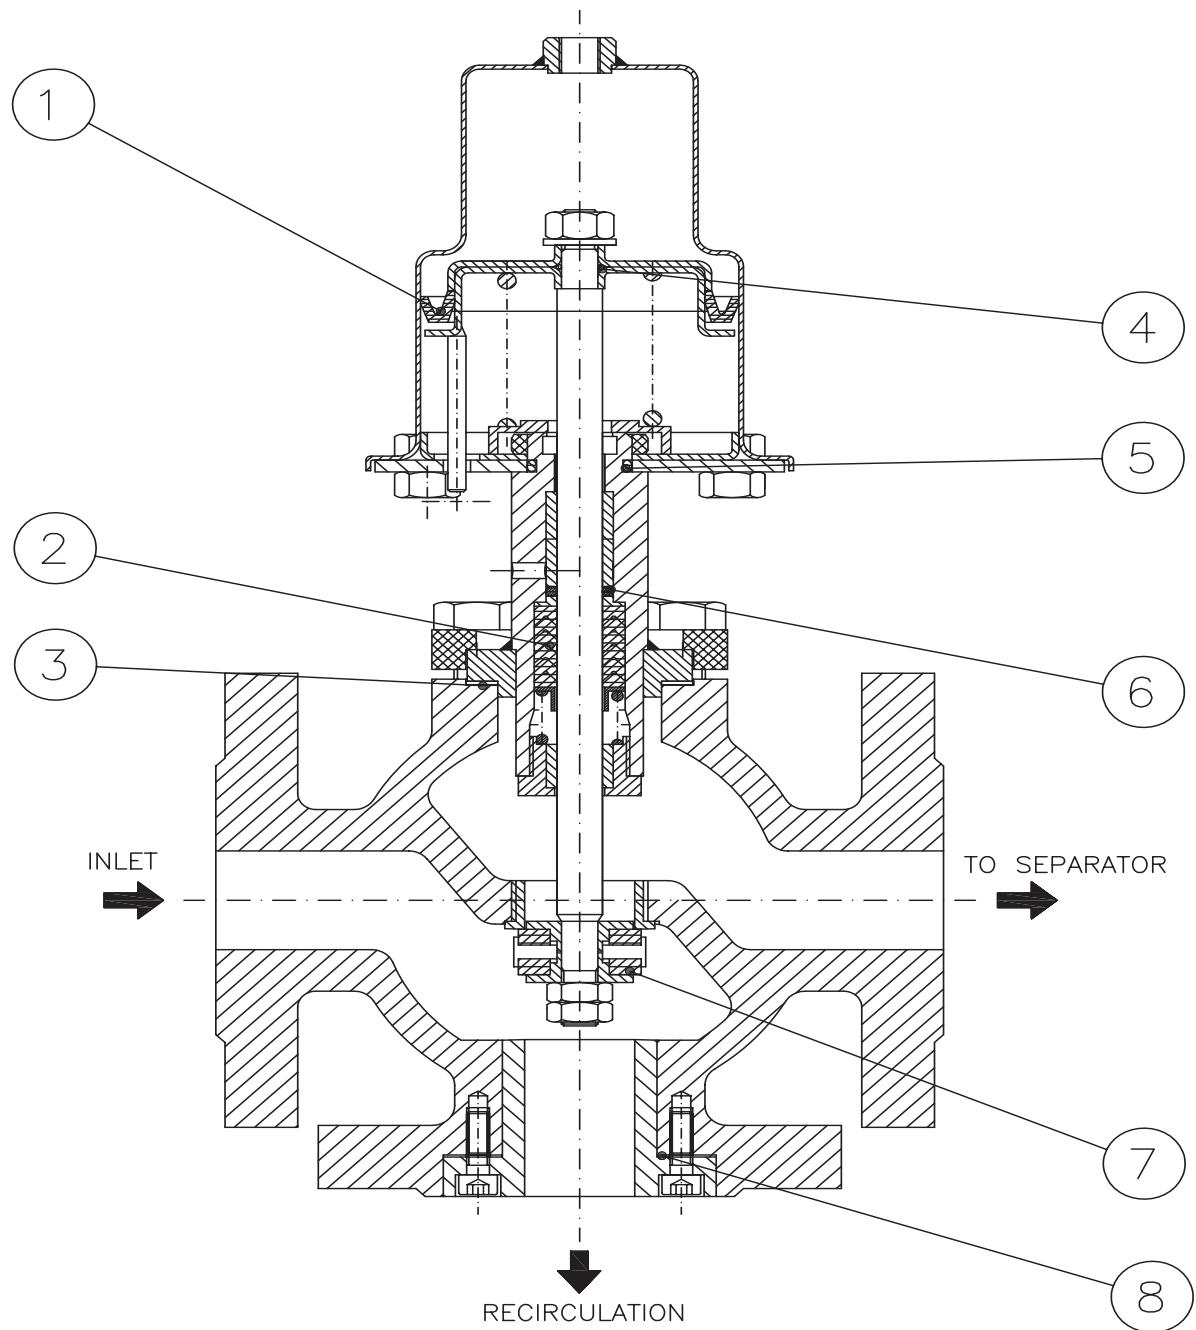

7 Flexible hoses block


Ref.	Part. No.	Description	Subassembly description: 9000428-AA	Notes
			Quantity	
1	9000188 01	Flexible hose kit	1	S805 - S815 ; IF 30, IF 40, IF60, IF100, MDO, GO
1	9000188 03	Flexible hose kit	1	S805 - S815 ; HFO 180, HFO 380, HFO 460, HFO 600, LO
2	582752 82	Pressure Transmitter	1	

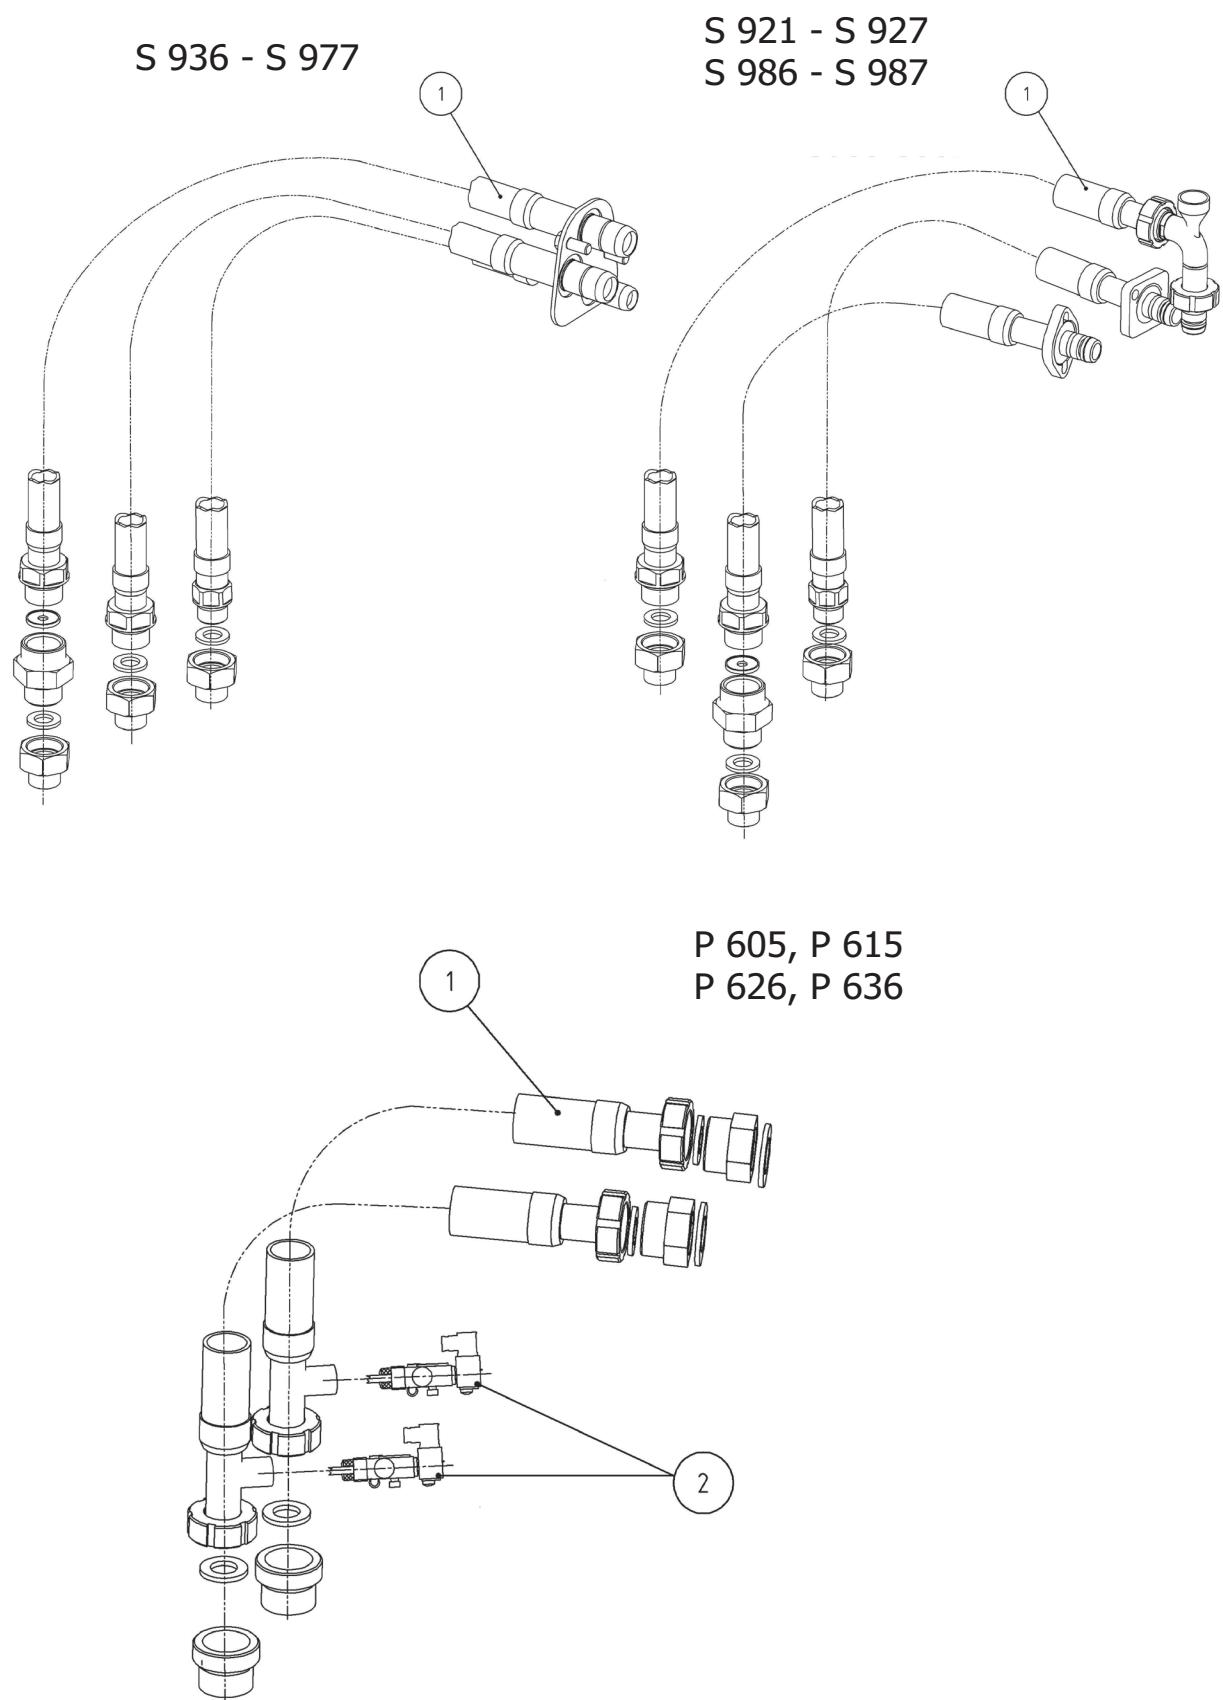

7.1 Flexible hoses kit

Ref.	Part. No.	Description	Subassembly description: 9000188-		Notes
			01	03	
			Quantity		
1	573695 80	Flexible hose	2	2	
2	582476 01	Throttle washer block kit	1		S805 - S815 ; IF 30, IF 40, IF60, IF100, MDO, GO
2	582476 03	Throttle washer block kit		1	S805 - S815 ; HFO 180, HFO 380, HFO 460, HFO 600, LO
9	1760926 01	Nipple	2	2	
10	546229 35	Rectangular ring	2	2	
11	576792 02	Nipple	1	1	
12	1760191 05	Cu-Washer 3/4"	2	2	
13	546229 35	Rectangular ring	2	2	


Alt. P 605, P 615
P 626, P 636

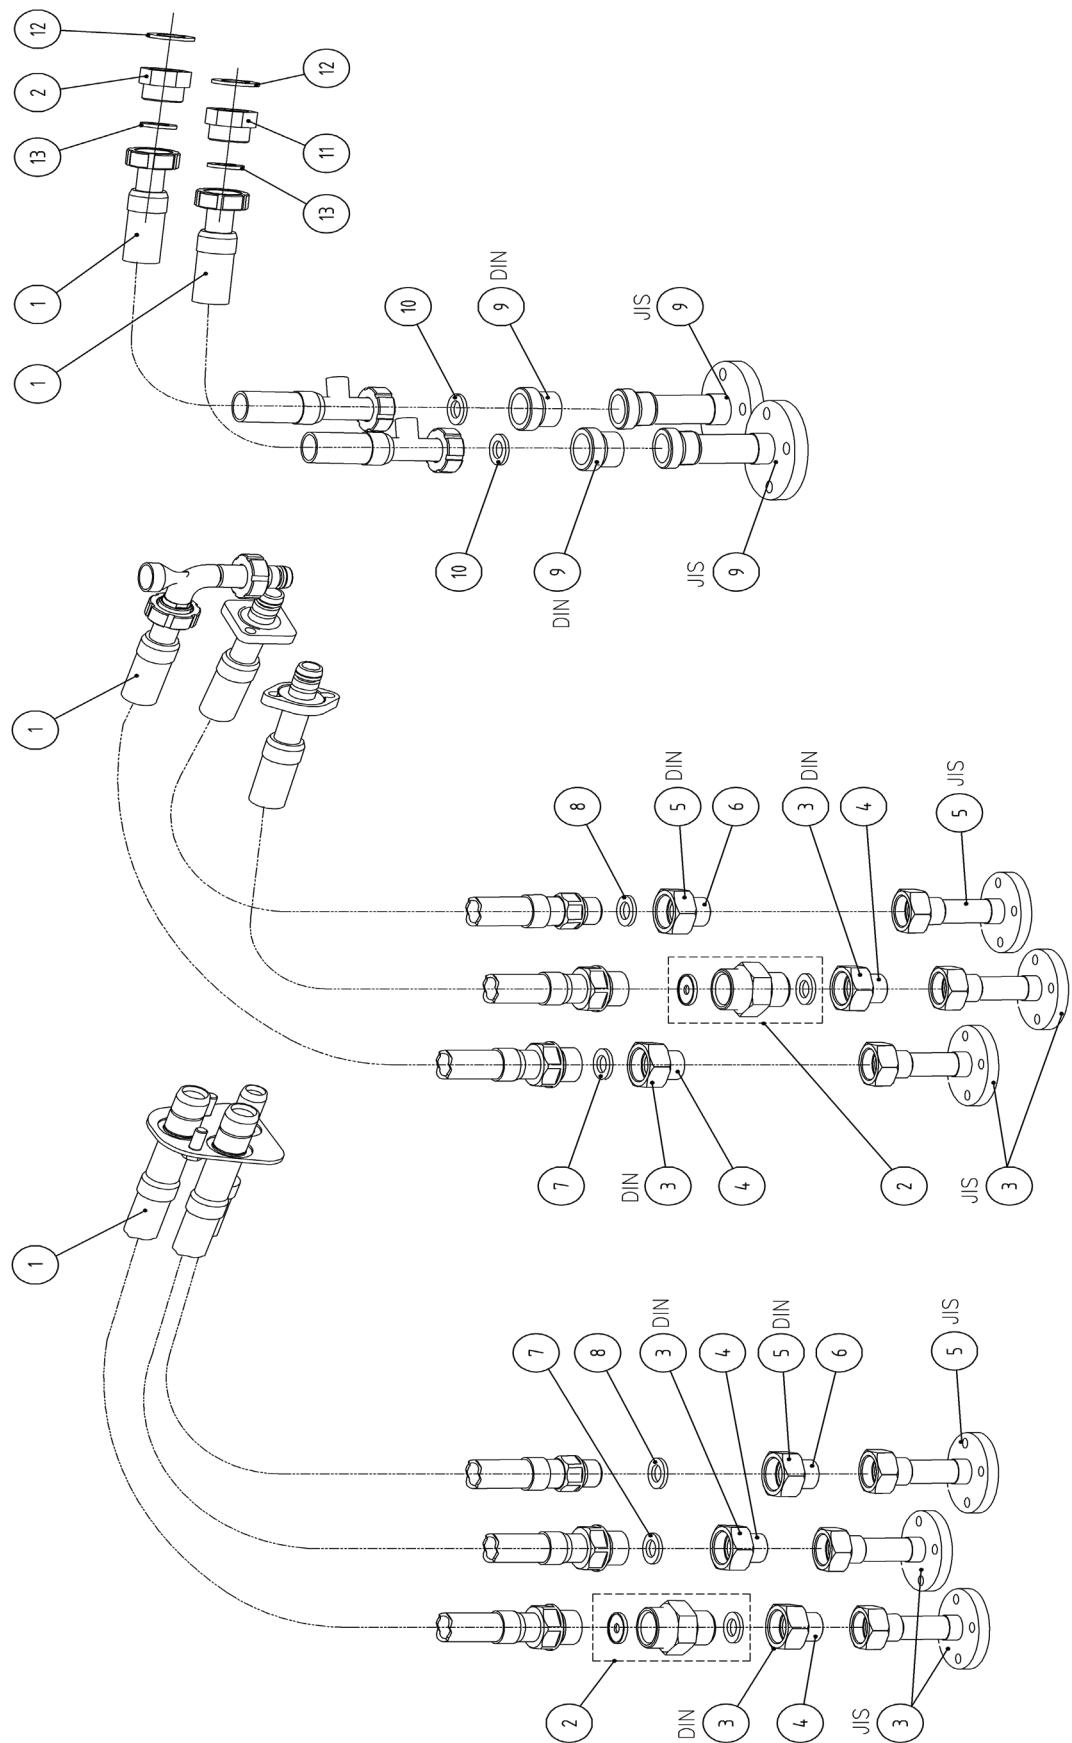

Alt. S 936 - S 977

8 Operating water valve block


Ref.	Part. No.	Description	Subassembly description:	Notes
			9000340 AA	
Quantity				
1	598371 08	Valve block water	01	Separator Type: S805, S815
	598372 01	Flexible connection kit	01	Separator Type: S805, S815
3	592550 80	SV10A Assembly	01	Only for LO Version

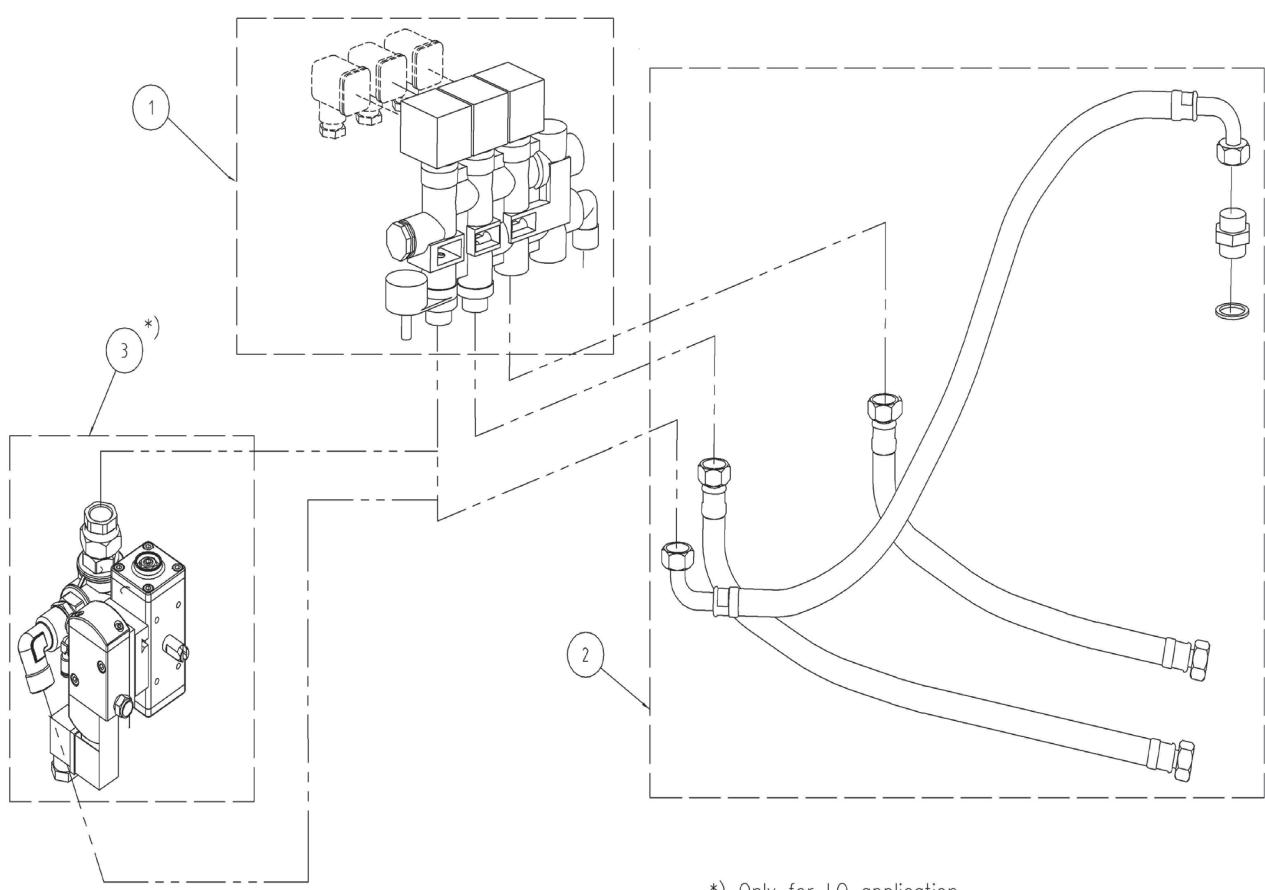

*) Only for LO application


8.1 Valve block water

Ref.	Part. No.	Description	Subassembly description: 598371-		Notes	
			08			
			Quantity			
1	582495 80	Valve block water	1		Separator Type: S805, S815	
2	1766037 01	Flow valve, 1.3 l/min	1		Separator Type: S805, S815	
3	1766037 05	Flow valve, 18.0 l/min	1		Separator Type: S805, S815	
4	1766037 04	Flow valve, 0.9 l/min	1		Separator Type: S805, S815	

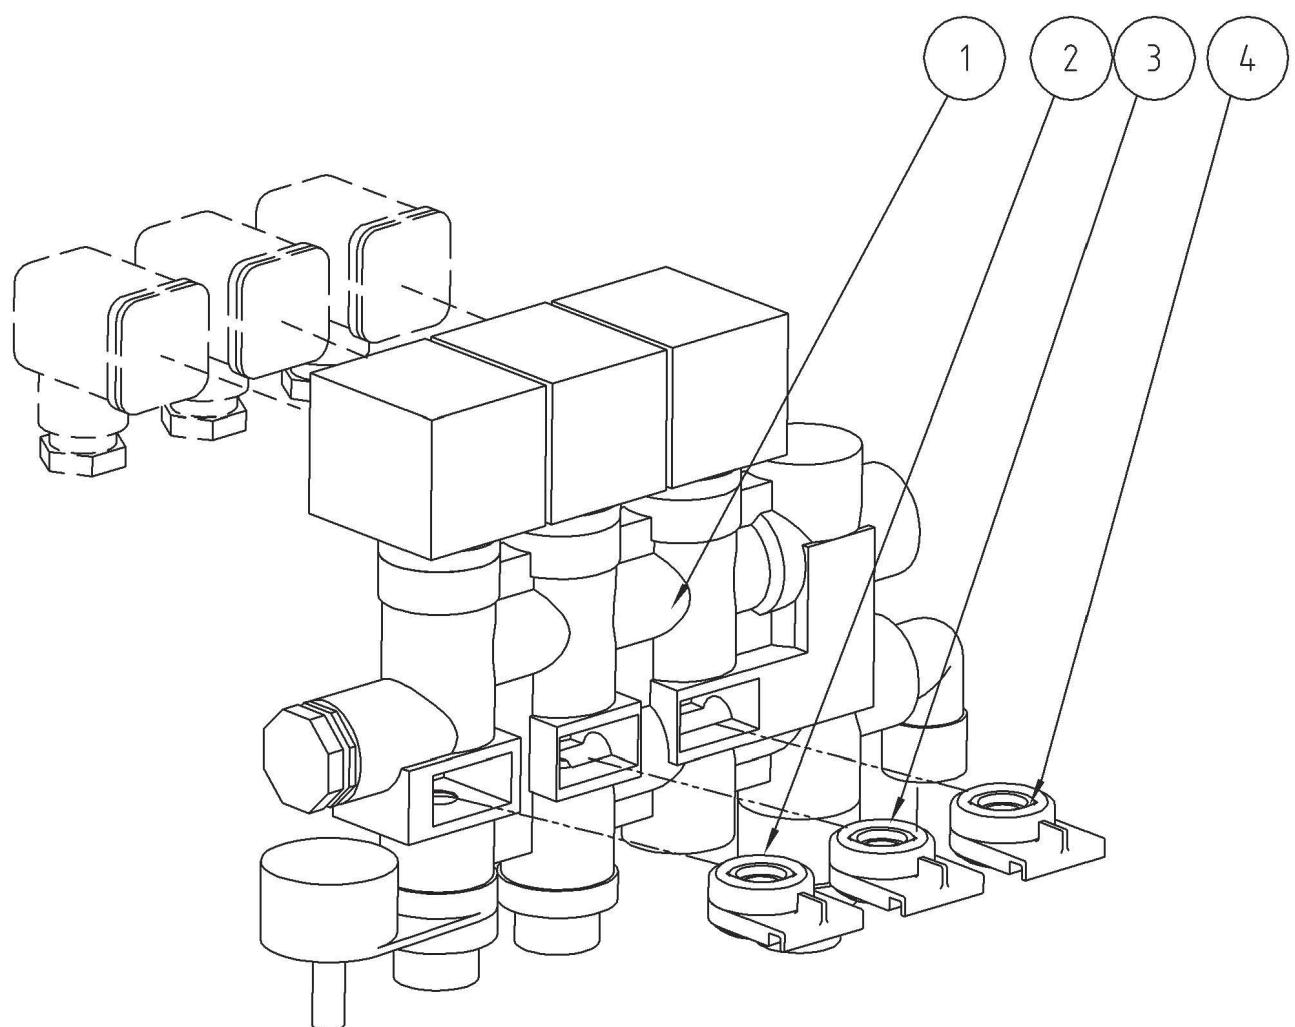

8.2 SV10A Assembly


Ref.	Part. No.	Description	Subassembly description:	Notes
			592550-80	
Quantity				
1	591719 80	Actuator assembly	01	
2	546600 06	Pipe union	01	
3	569197 01	Hose nipple	01	
4	1761834 09	Cu washer	01	
5	53551320 06	Hose	01	
6	1762020 01	Hose clip	01	

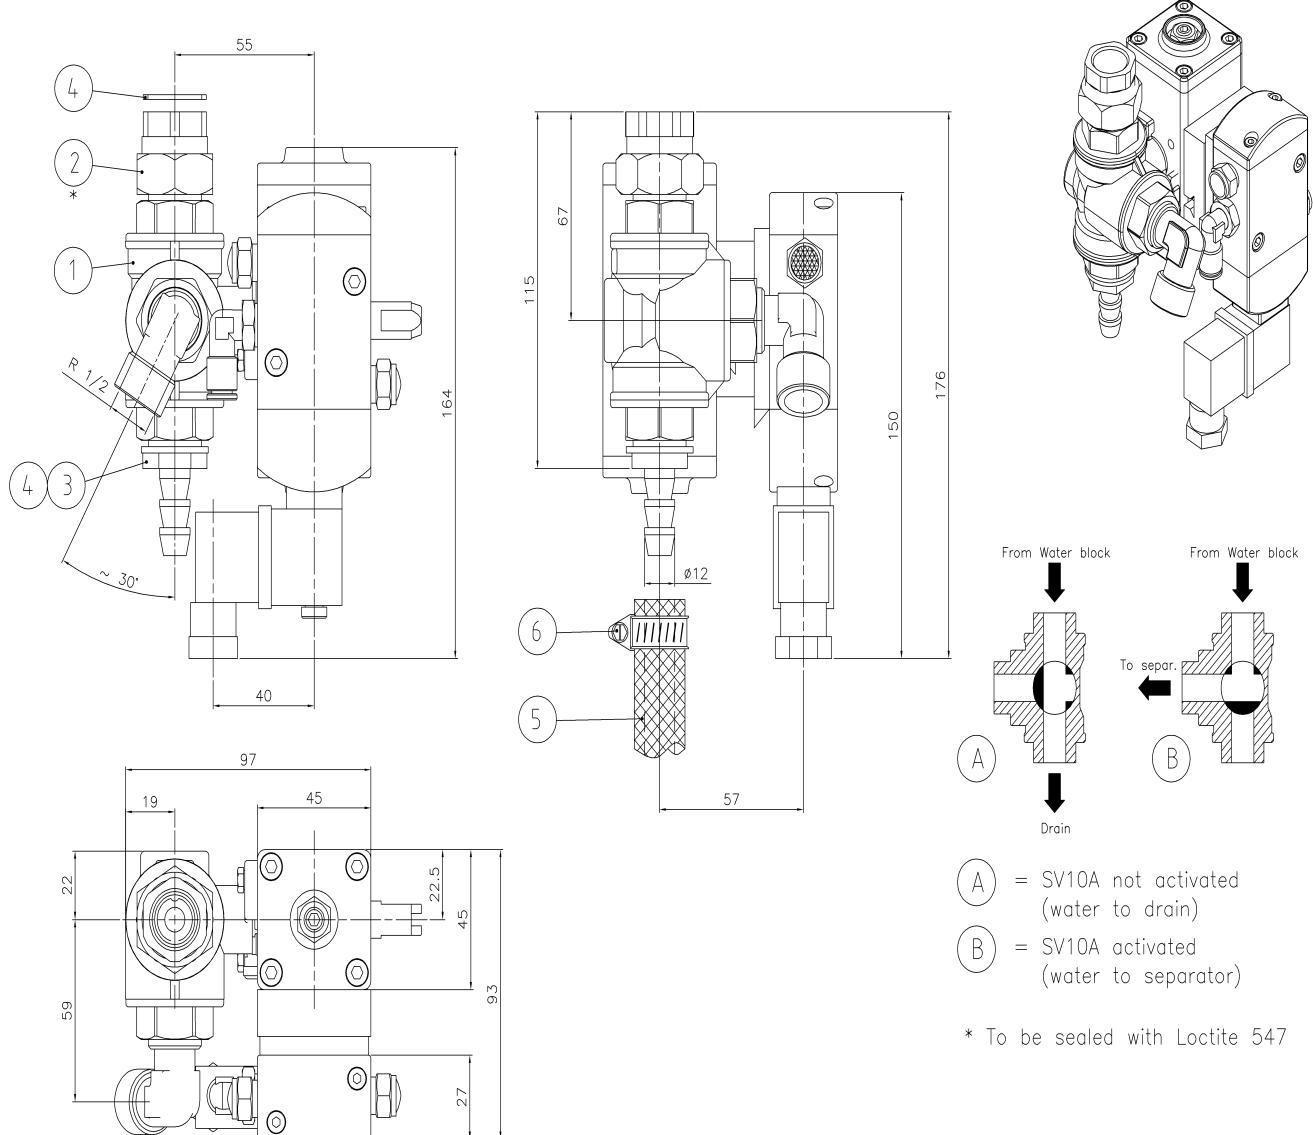

9 Air distributor kit

Ref.	Part. No.	Description	Subassembly description: 599044-		Notes
			80	81	
			Quantity		
1	1765931 01	Ball valve	1	1	
3	1765933 01	Pipe	1	1	
4	1763491 03	Nipple	1	1	
5	53551400 01	Flexible connection G 1/4	1		
5	53551400 02	Flexible connection		1	
7	582450 01	Air distributor G1/4"	1	1	
12	580769 02	Flexible hose, air D.6	3	3	
15	580769 03	Flexible hose, air D.8	1	1	
17	580769 02	Flexible hose, air D.6	1	1	Only for LO application
	599043 80	Air Pressure Regulator Kit	1	1	


WITHOUT AIR PRESSURE REGULATOR
(with or without heater)

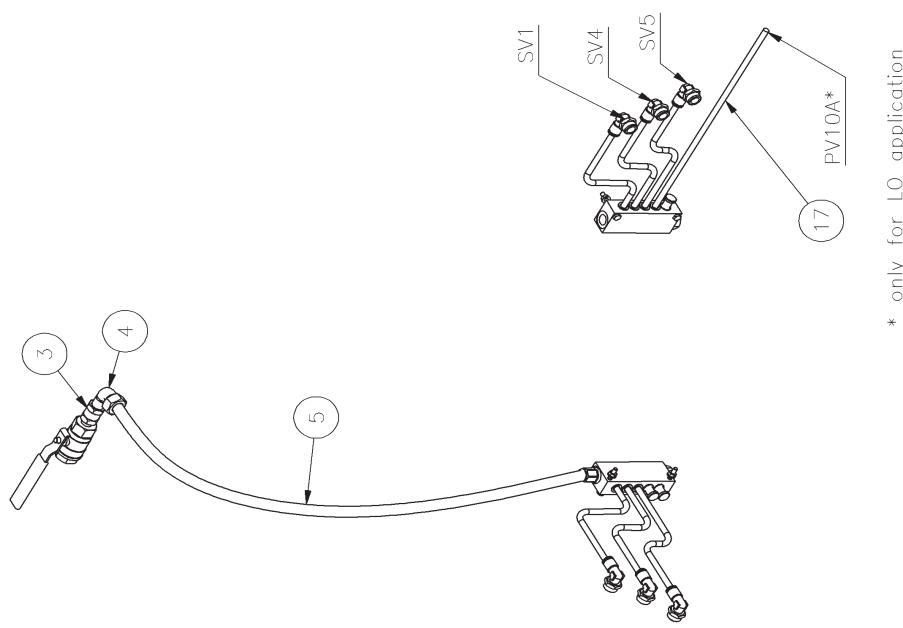


* only for LO application

WITH AIR PRESSURE REGULATOR

MODULE WITHOUT HEATER

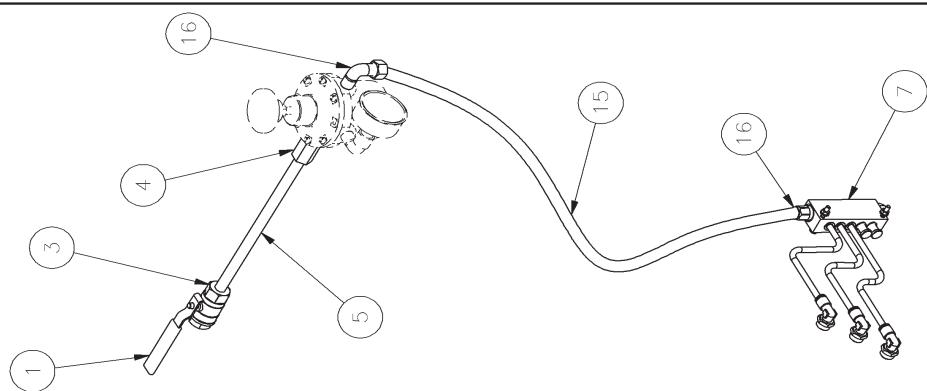


MODULE WITH HEATER

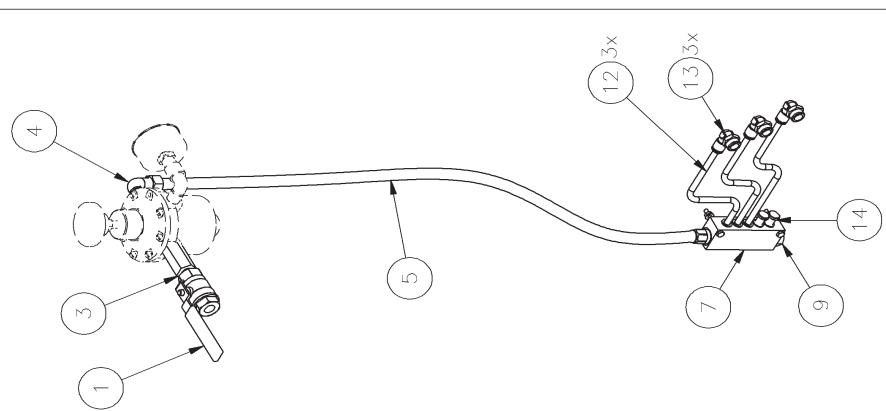

10 Control Block

* = On request only, contact your local Alfa Laval representative

Ref.	Part. No.	Description	Subassembly description	Notes
			9000341-AA*	
1	9000221 AA*	Control_Unit incl.Starter	1	See page 42
3	581009 01	Emergency stop	1	

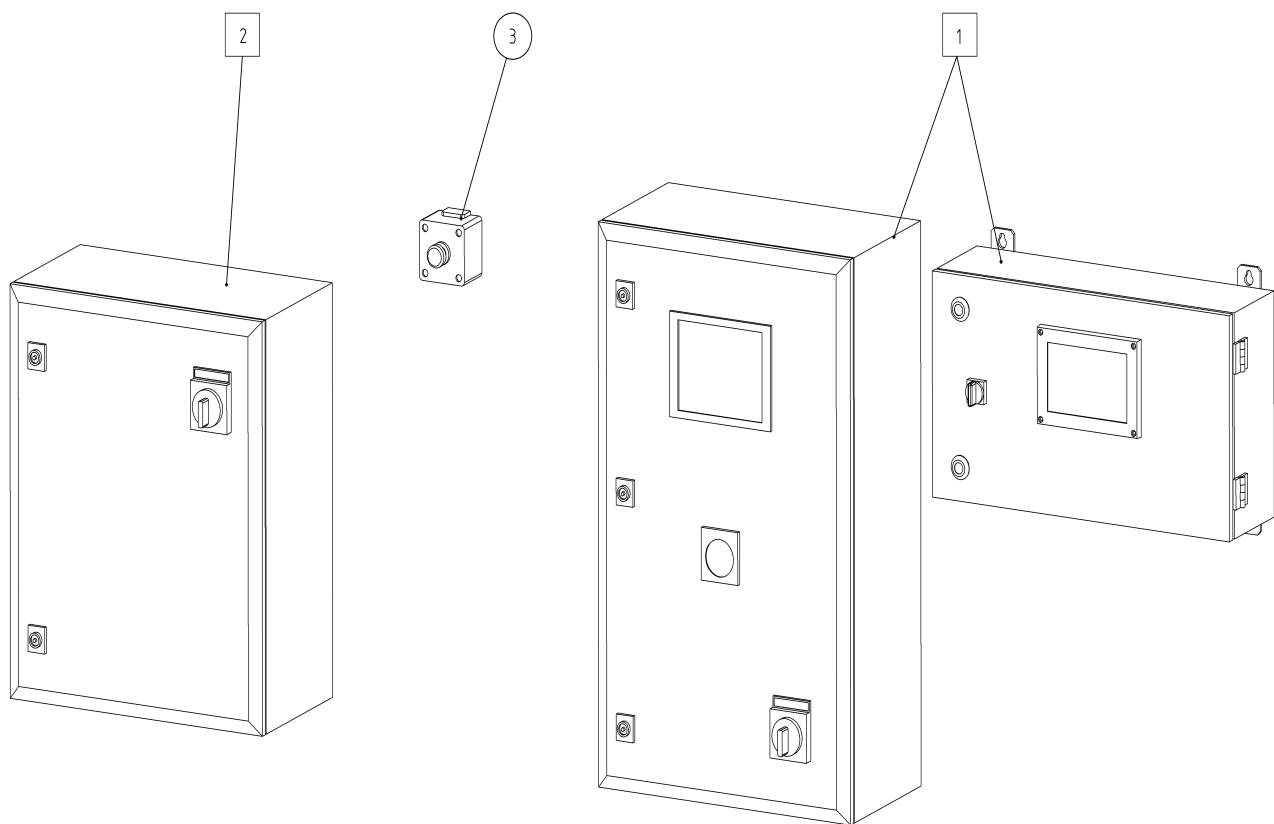


10.1 Control Unit incl. Starter


* = On request only, contact your local Alfa Laval representative

Ref.	Part. No.	Description	Subassembly description: 9000221-AA*	Notes
			Quantity	
1	581042 81	Control Cabinet	1	Separator Type(S 805,S 815)
3	581001 80	ESD kit	1	OPTIONAL - System Safety Stop [ESD]
4	580998 xx	Motor starter	1	See page 52
5	580998 xx	Motor starter	1	See page 52
6	581050 80	Heat tracing kit	1	OPTIONAL - Heat Tracing
7	591480 85	Relay kit 2c/o 24VAC	1	OPTIONAL - Oil Type(LO Trunk Piston Engine,LO Cross-Head Engine)
13	581005 84	Ammeter kit 10A	1	
13	581005 83	Ammeter kit 20A	1	
13	581005 81	Ammeter kit 40A	1	
13	581005 80	Ammeter kit 60A	1	
13A	580991 12	Cover for terminals		
13B	580991 04	Ammeter trans- former		Ammeter 10A, 20A, 40A
13B	580991 06	Ammeter trans- former		Only for Ammeter 60A
13C	580991 11	Ammeter 10A		
13C	580991 10	Ammeter 20A		
13C	580991 05	Ammeter 40A		
13D	580991 03	Rubber Seal		
14	581044 80	Steam Heater kit	1	OPTIONAL - Heating Media(Steam, Thermal Oil, Hot Water)
15.1	581052 80	Vibration Switch Kit	1	OPTIONAL - Separator Type(S 805,S 815); Vibration Sensor
17	581047 80	Extra I/O board kit	1	OPTIONAL - Remote Board(Local I/O)
18	581048 80	Electrical Heater kit	1	OPTIONAL - Electric Heater
19	580993 01	Transformer	1	Main Supply Voltage(380V, 400V, 415V, 440V, 460V, 480V, 500V, 575V, 660V, 690V); NO Electric Tracing
19	580993 02	Transformer	1	Main Supply Voltage(380V, 400V, 415V, 440V, 460V, 480V, 500V, 575V, 660V, 690V); with Electric Tracing
19	580993 04	Transformer	1	Main Supply Voltage(200V, 220V, 230V); NO Electric Tracing
19	580993 05	Transformer	1	Main Supply Voltage(200V, 220V, 230V); with Electric Tracing


Front View

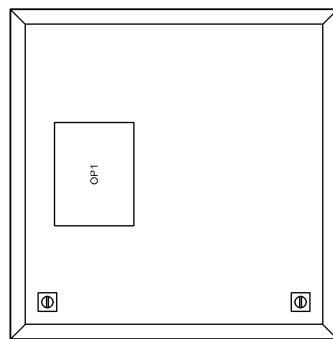


Internal View

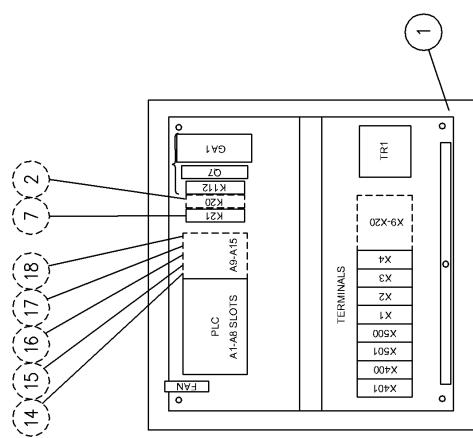

Front View



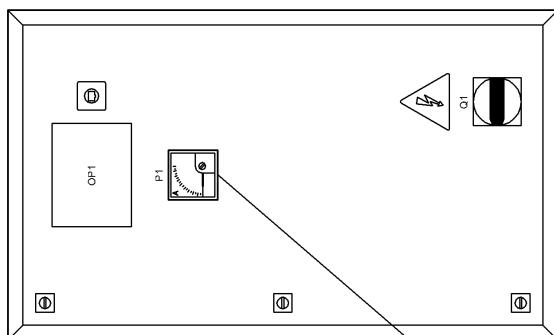


Internal View

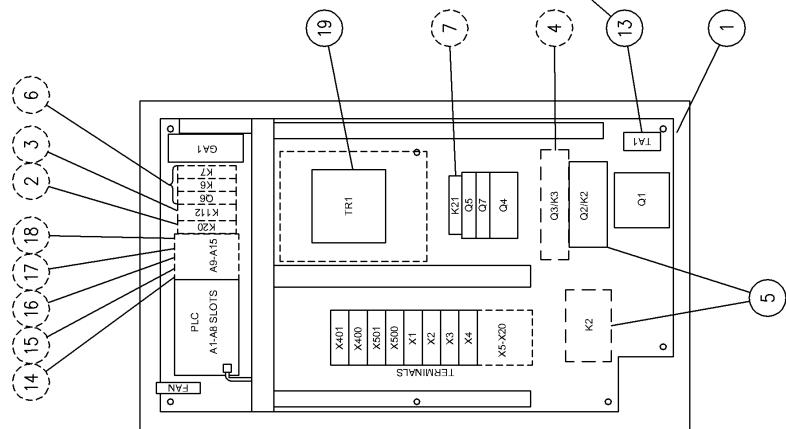

10.1.1 Control Cabinet


Ref.	Part. No.	Description	Subassembly description:	Notes
			581042-	
			82	
Ref.	Part. No.	Description	Quantity	Notes
1	581960 01	Enclosure box	1	
2	580999 80	PLC standard kit	1	See page 46
2.1	581058 02	Flex S805/815	1	
4	580992 26	Circuit Breaker	1	
5	580992 27	Circuit Breaker	1	
6	580994 01	Copper Plait	1	
7	580992 08	Circuit Breaker	1	
8	580992 09	3-pole busbar	1	
9	580992 80	Main switch	1	See page 48
10	580936 01	Cable	1	
11	581016 01	Fan	1	
12	580989 01	Terminal	14	
13	581040 80	RJ45 connector kit	1	See page 50

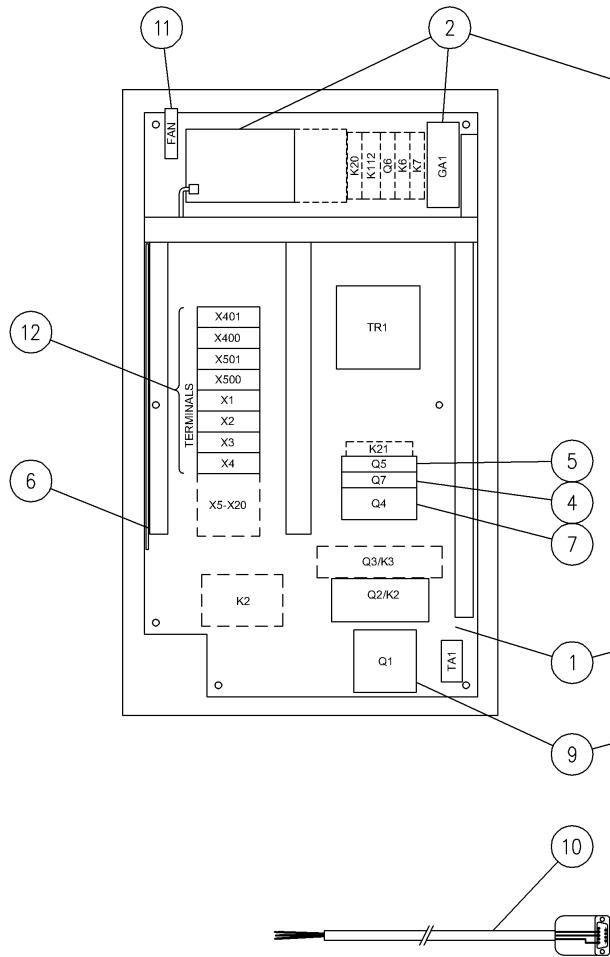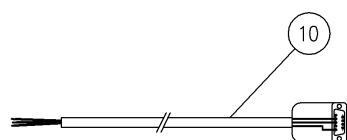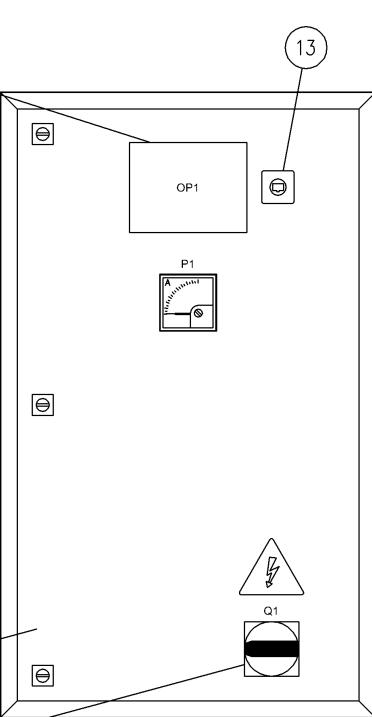Internal ViewFront View


10.1.2 PLC standard kit

Ref.	Part. No.	Description	Subassembly description:	Notes
			580999-80	
1	580986 01	Operator panel	1	4B1260.00-K07
2	580986 02	CPU	1	X20CP0292
3	580986 14	Supply module	1	X20PS9500
4	580986 26	Terminal block	1	OTB103.91
5	580986 04	6 Digital input	1	X20DI6371
6	580986 05	2 Relay output	1	X20DO2649
7	580986 06	6 Relay output	1	X20DO6529
8	580986 07	4 Relay output	1	X20DO4529
9	580986 08	4 Analogue input	1	X20AI4622
10	580986 09	2 Analogue input	1	X20AT2222
11	580986 17	Bus module	6	X20BM11
14	580986 16	Terminal block 12-pin	7	X20TB12
15	580986 03	Power supply	1	0AC524.9
16	580986 18	Bus module for CPU	1	X20BB22


Internal View

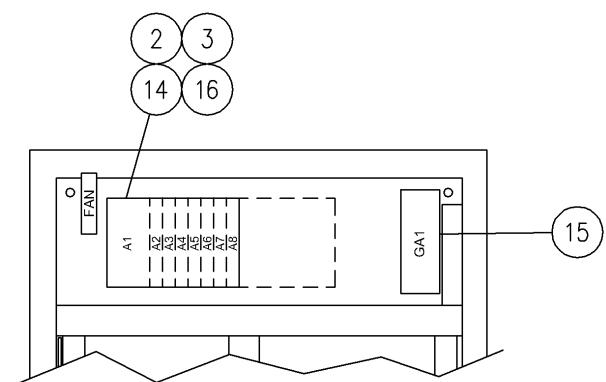

Front View

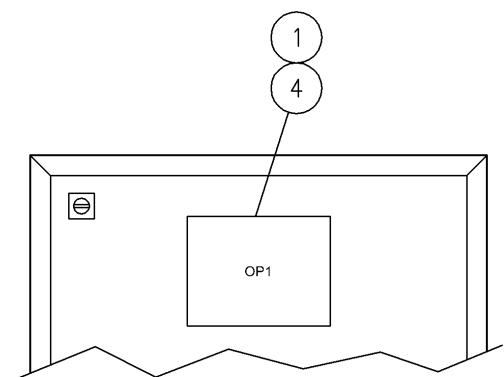


A2-A8

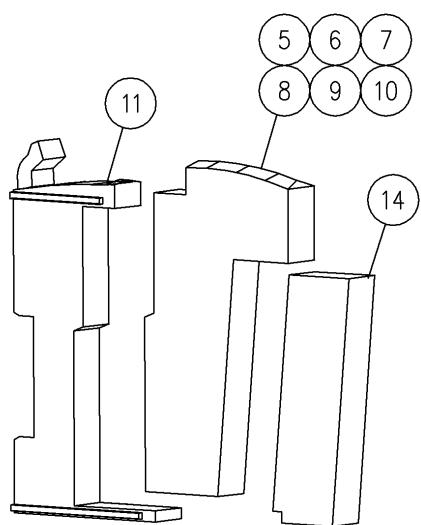

10.1.3 Main switch



Ref.	Part. No.	Description	Subassembly description:	Notes
			580992-80	
1	580992 01	Circuit Breaker	1	
2	580992 02	Handle and front	1	
3	580992 03	Shaft Extension	1	
4	580992 04	Door Interlock Plate	1	
5	580992 05	Input Terminal Protection	1	
6	580992 06	Auxiliary Contact Block	1	
7	580992 07	Input Terminal Protection	1	

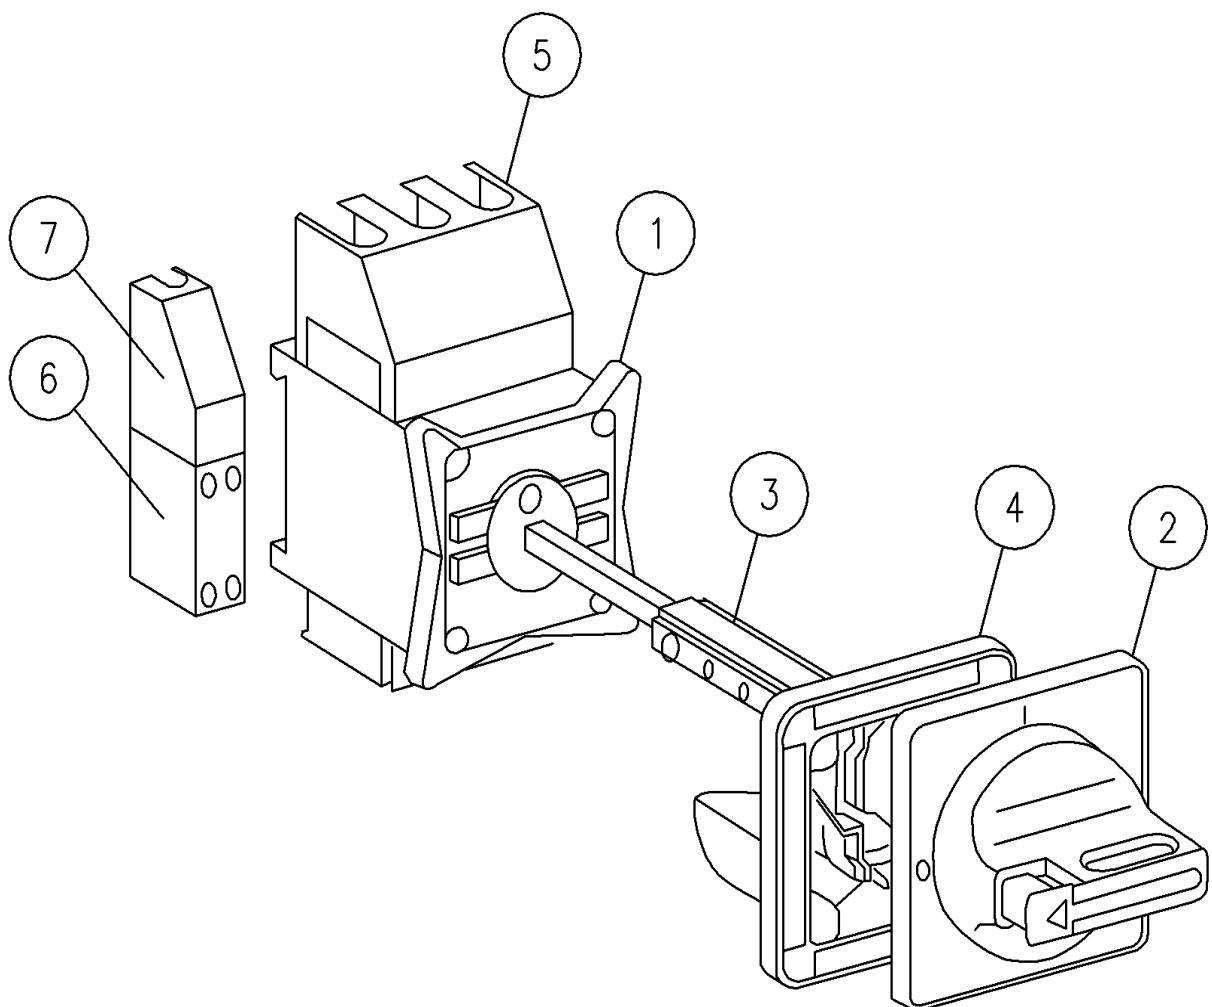

10.1.4 RJ45 connector kit

Ref.	Part. No.	Description	Subassembly description:	Notes
			581040-80	
1	580987 01	RJ45 cable	1	
2	580987 02	RJ45 connector	1	
3	580987 03	RJ45 mounting frame	1	
4	580987 04	RJ45 protective cover	1	


RJ45 connector Kit

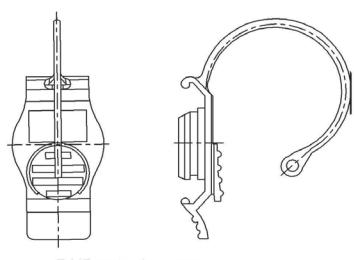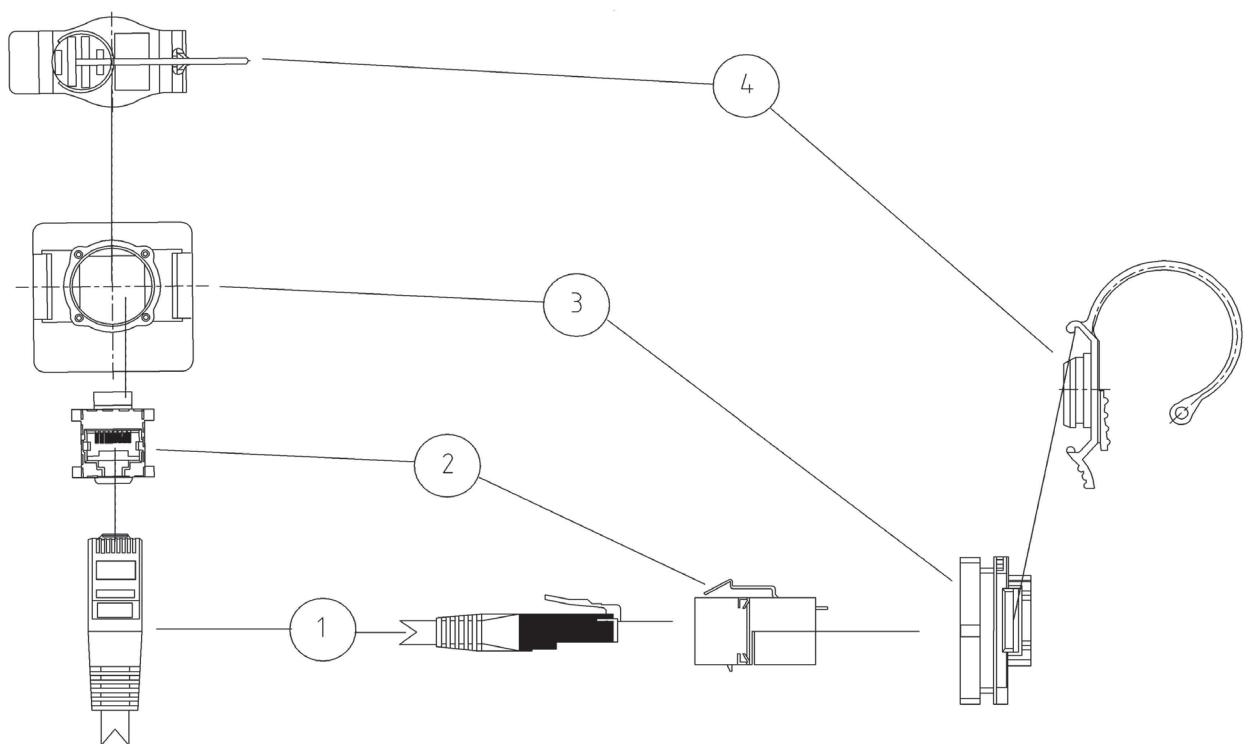


RJ45 protective cover



RJ45 cable, 2m




RJ45 female connector

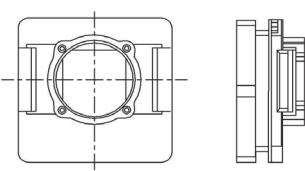

RJ45 panel mounting frame



10.1.5 Motor starter

Ref.	Part. No.	Description	Subassembly description: 580998 -				Notes
			81	82	84	85	
			Quantity				
1	580987 02	Base for Starter	1	1			
1	580987 01	Base for Starter			1	1	
2	580987 04	Control Unit	1				Motor Starter 4,5 - 18,0A
2	580987 05	Control Unit		1			Motor Starter 8,0 - 32,0A
2	580987 12	Control Unit			1		Motor Starter 1,25 - 5,0A
2	580987 13	Control Unit				1	Motor Starter 0,35 - 1,4A
3	580987 25	Auxiliary Contact Block	1	1	1	1	

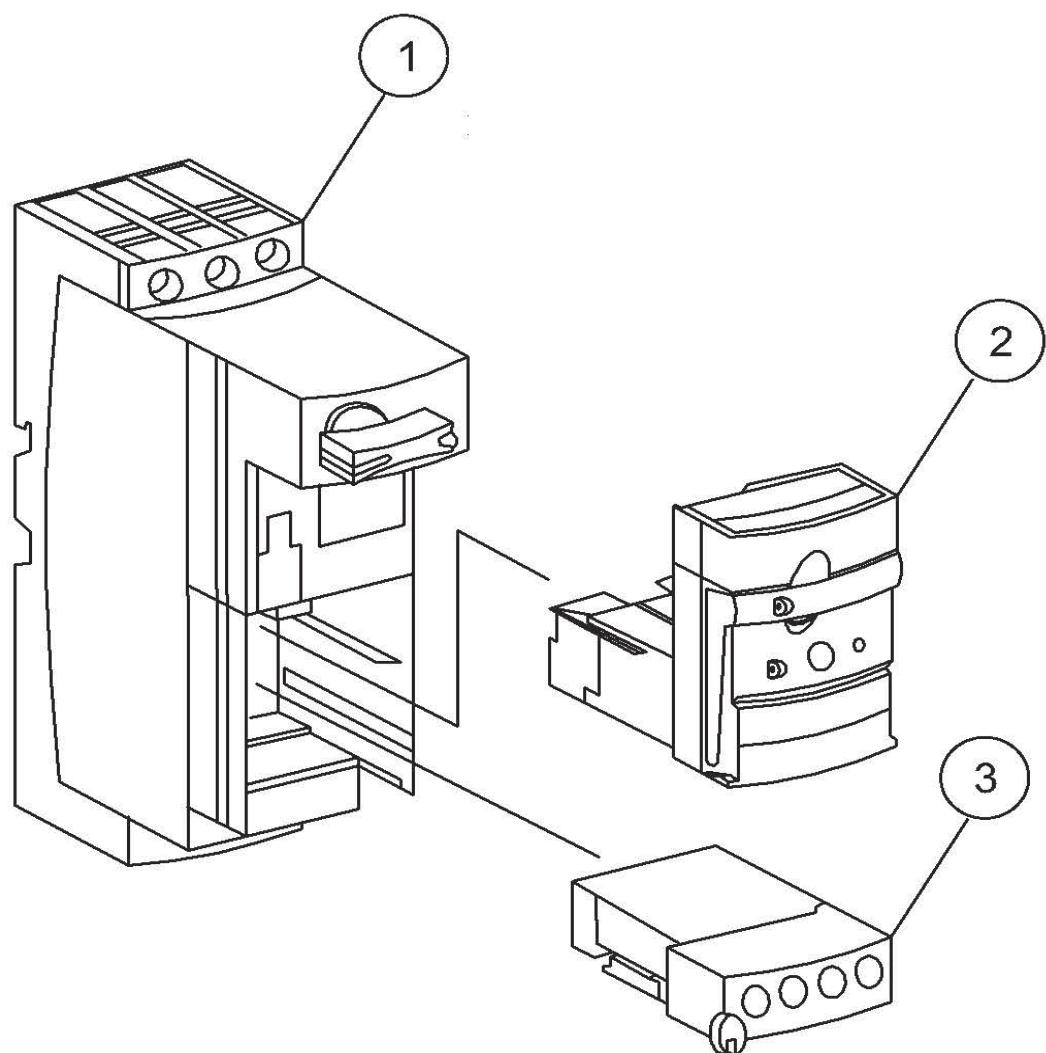

11 Water block spare parts

Ref.	Part. No.	Description	Subassembly description:	Notes
			1765993-87	
1	1765993 01	Retaining clip	1	
2	1765993 02	Spring	1	
3	1765993 03	Core	1	
4	1765993 04	Spring washer	1	
5	1765993 05	O-ring	1	
6	1765993 06	Piston	1	
7	1765993 07	Disc	1	
8	1765993 08	Non-return valve	1	
9	1765993 09	O-ring	1	
10	1765993 10	O-ring	1	
11	1765993 11	Coil, 24 V	1	
14	1765993 13	Drain valve	1	
15	1765993 16	Strainer	1	

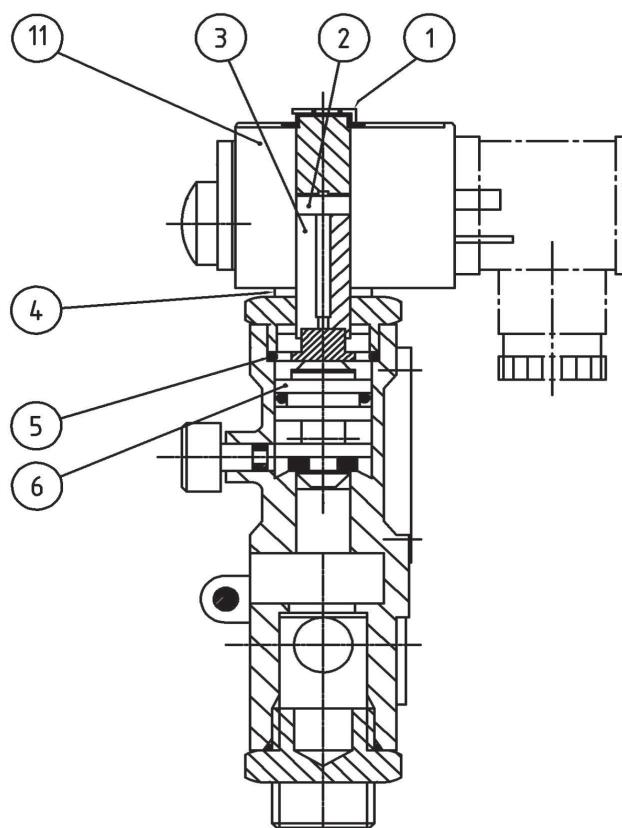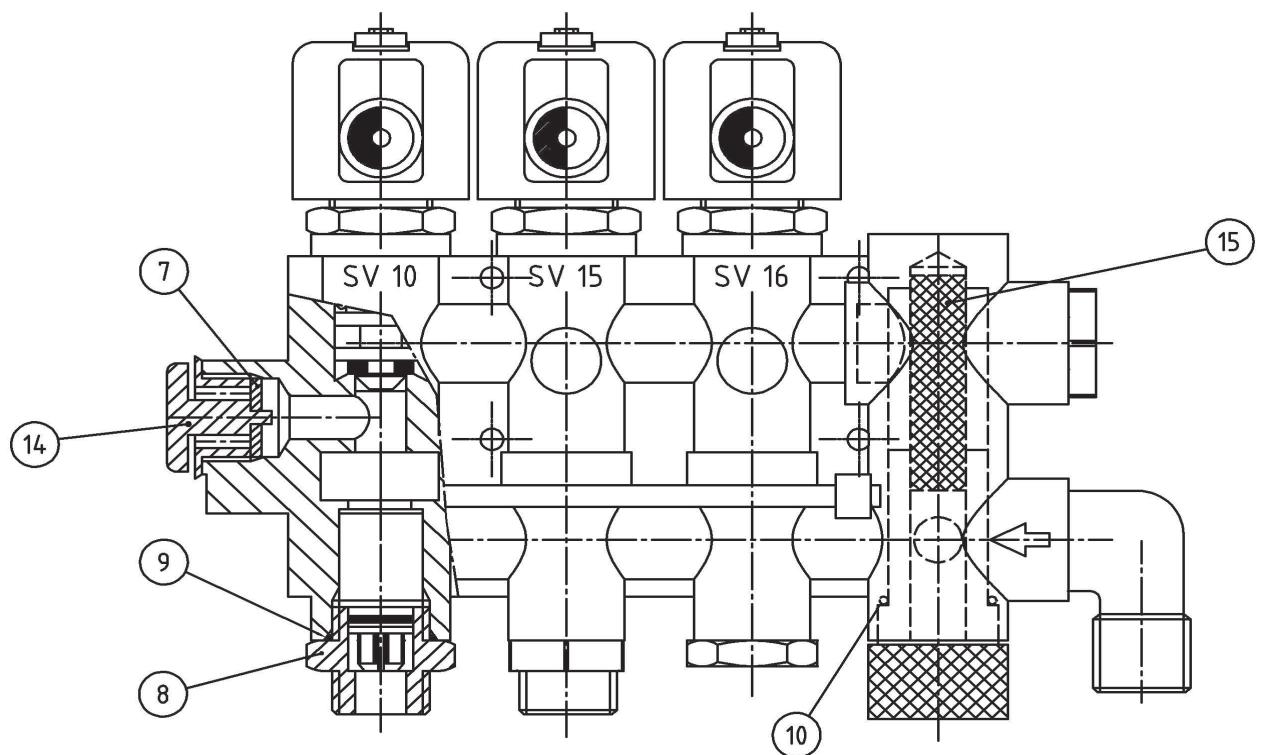

12 Cross reference list

Part. No.	Page	Ref	Part. No.	Page	Ref	Part. No.	Page	Ref
1760191 05	30	12	580986 01	46	1	580998 xx	42	4
1760926 01	30	9	580986 02	46	2	580998 xx	42	5
1761626 01	16	1	580986 03	46	15	580999 80	44	2
1761834 09	36	4	580986 04	46	5	581001 80	42	3
1762017 01	14	4	580986 05	46	6	581005 80	42	13
1762020 01	36	6	580986 06	46	7	581005 81	42	13
1762020 03	14	5	580986 07	46	8	581005 83	42	13
1763491 01	24	3	580986 08	46	9	581005 84	42	13
1763491 03	38	4	580986 09	46	10	581009 01	40	3
1763903 03	22	2	580986 14	46	3	581016 01	44	11
1765130 01	20	7	580986 16	46	14	581017 01	20	18
1765931 01	38	1	580986 17	46	11	581040 80	44	13
1765933 01	38	3	580986 18	46	16	581042 81	42	1
1765934 06	14	3	580986 26	46	4	581044 80	42	14
1765934 07	14	2	580987 01	50	1	581047 80	42	17
1765993 01	54	1	580987 01	52	1	581048 80	42	18
1765993 02	54	2	580987 02	50	2	581050 80	42	6
1765993 03	54	3	580987 02	52	1	581052 80	42	15.1
1765993 04	54	4	580987 03	50	3	581058 02	44	2.1
1765993 05	54	5	580987 04	50	4	581960 01	44	1
1765993 06	54	6	580987 04	52	2	582450 01	38	7
1765993 07	54	7	580987 05	52	2	582476 01	30	2
1765993 08	54	8	580987 12	52	2	582476 03	30	2
1765993 09	54	9	580987 13	52	2	582495 80	34	1
1765993 10	54	10	580987 25	52	3	582554 01	20	28
1765993 11	54	11	580989 01	44	12	582585 01	20	29
1765993 13	54	14	580991 03	42	13D	582752 82	18	3
1765993 16	54	15	580991 04	42	13B	582752 82	28	2
1766037 01	34	2	580991 05	42	13C	584372 05	18	5
1766037 04	34	4	580991 06	42	13B	586248 03	20	30
1766037 05	34	3	580991 10	42	13C	589700 80	18	1
1766096 01	14	6	580991 11	42	13C	591480 85	42	7
53551320 06	36	5	580991 12	42	13A	591719 80	36	1
53551400 01	38	5	580992 01	48	1	592550 80	32	3
53551400 02	38	5	580992 02	48	2	595084 80	12	1
53551716 02	22	3	580992 03	48	3	595085 80	14	1
543054 05	18	5	580992 04	48	4	597255 02	22	1
546229 35	30	10	580992 05	48	5	597256 01	16	3
546229 35	30	13	580992 06	48	6	597909 01	24	1
546600 06	36	2	580992 07	48	7	598018 01	26	1
569197 01	36	3	580992 08	44	7	598018 02	26	2
569304 01	18	4	580992 09	44	8	598018 03	26	3
573695 80	30	1	580992 26	44	4	598018 04	26	4
574409 83	24	2	580992 27	44	5	598018 05	26	5
576792 02	30	11	580992 80	44	9	598018 06	26	6
580769 02	38	12	580993 01	42	19	598018 07	26	7
580769 02	38	17	580993 02	42	19	598018 08	26	8
580769 03	38	15	580993 04	42	19	598371 08	32	1
580920 81	18	2	580993 05	42	19	598372 01	32	
580936 01	44	10	580994 01	44	6	598546 80	12	3

Part. No.	Page	Ref
599043 80	38	
9000188 01	28	1
9000188 03	28	1
9000221 AA*	40	1