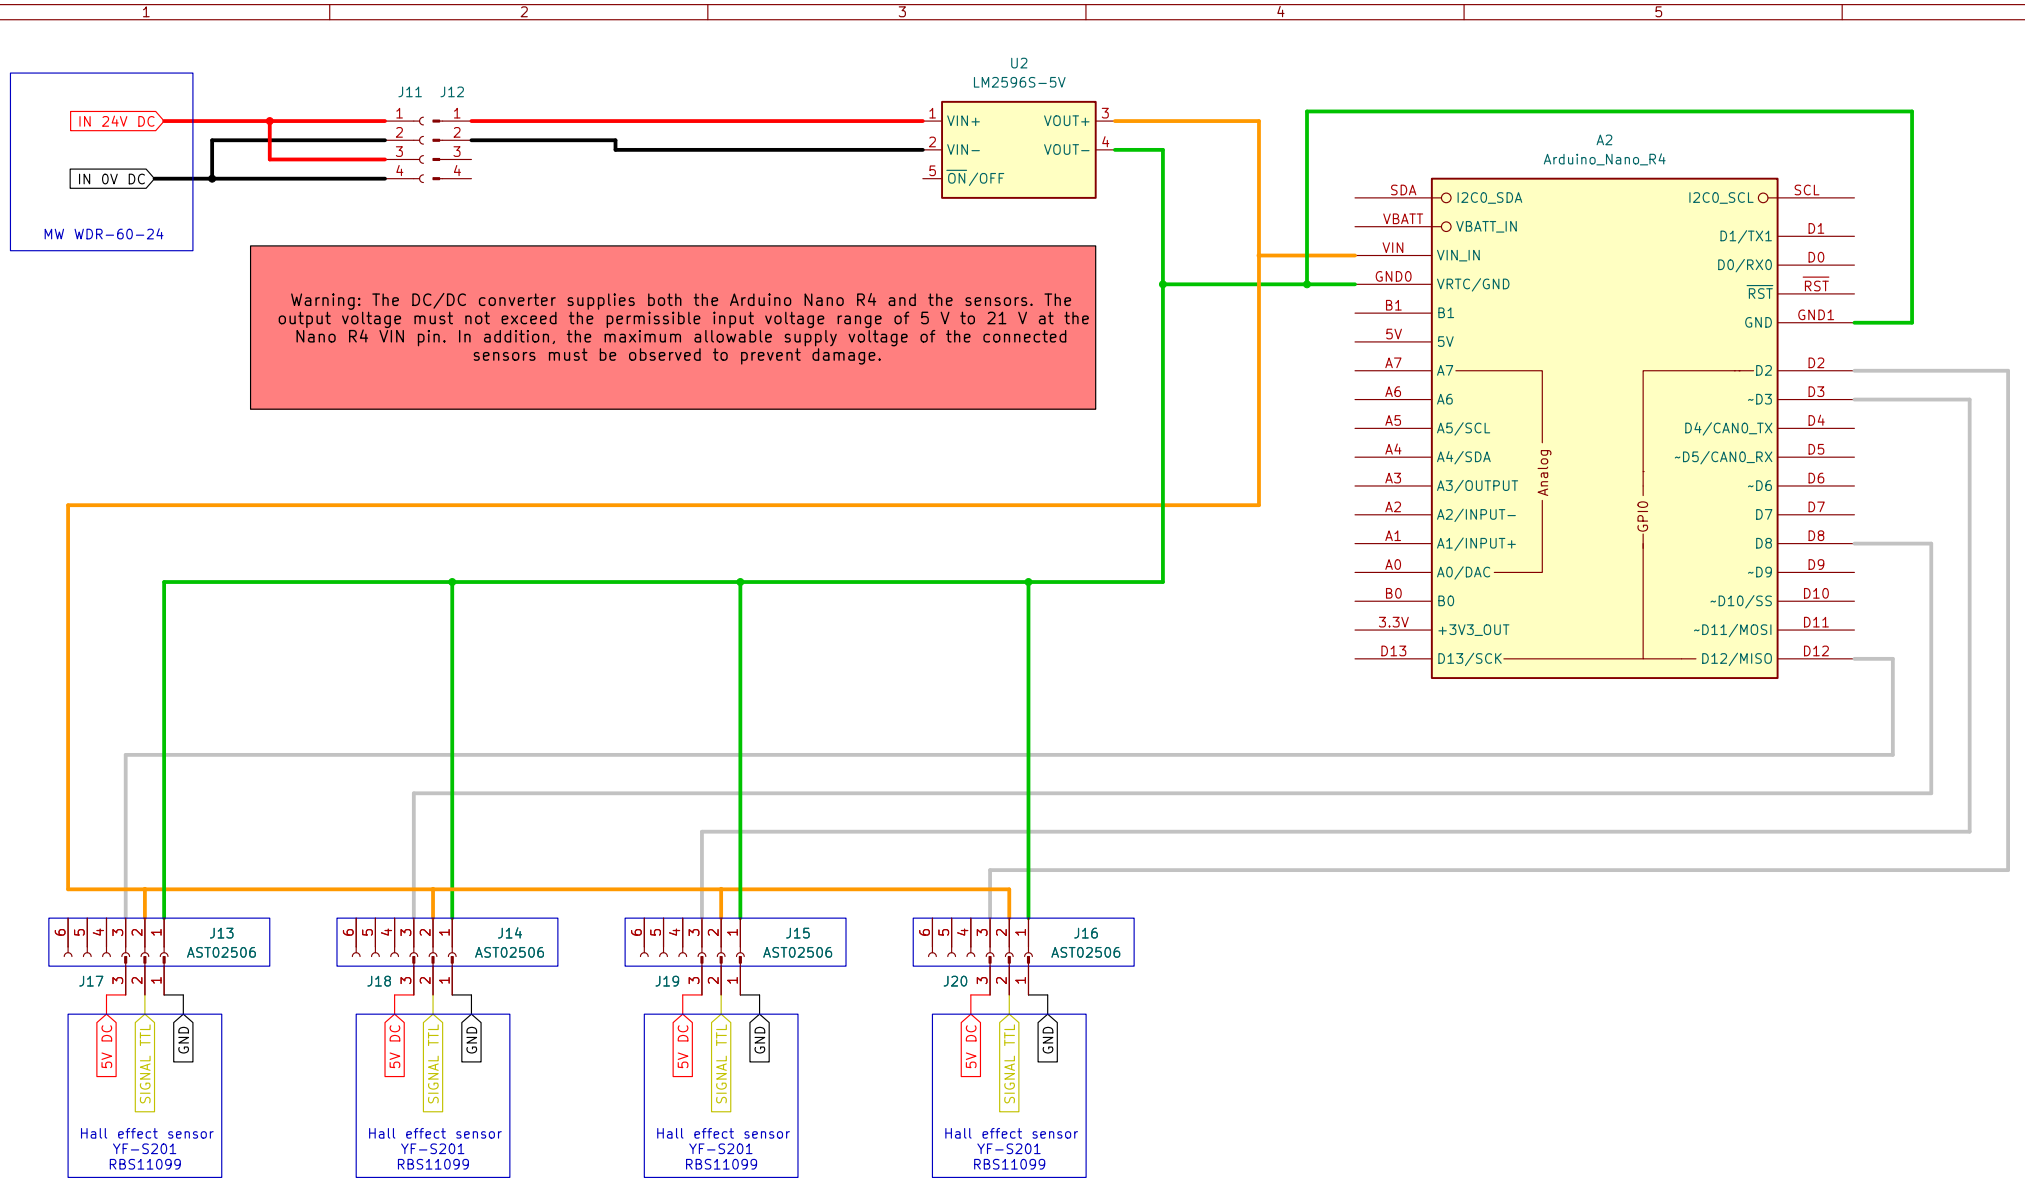

MW WDR-60-24
IN 24V DC
IN 0V DC
J11
J12
U2
LM2596S-5V
VIN+
VIN-
ON/OFF
VOUT+
VOUT-
Warning: The DC/DC converter supplies both the Arduino Nano R4 and the sensors. The output voltage must not exceed the permissible input voltage range of 5 V to 21 V at the Nano R4 VIN pin. In addition, the maximum allowable supply voltage of the connected sensors must be observed to prevent damage.
A2
Arduino_Nano_R4
SDA
VBATT
VIN
GND0
B1
5V
A7
A6
A5
A4
A3
A2
A1
A0
B0
3.3V
D13
I2C0_SDA
VBATT_IN
VIN_IN
VRTC/GND
B1
5V
A7
A6
A5/SCL
A4/SDA
A3/OUTPUT
A2/INPUT-
A1/INPUT+
A0/DAC
B0
+3V3_OUT
D13/SCK
Analog
I2C0_SCL
D1/TX1
D0/RX0
RST
GND
D2
~D3
D4/CAN0_TX
~D5/CAN0_RX
~D6
D7
D8
~D9
~D10/SS
~D11/MOSI
D12/MISO
GPIO
SCL
D1
D0
RST
GND1
D2
D3
D4
D5
D6
D7
D8
D9
D10
D11
D12
J13
AST02506
J14
AST02506
J15
AST02506
J16
AST02506
J17
J18
J19
J20
5V DC
SIGNAL TTL
GND
Hall effect sensor
YF-S201
RBS11099
HTWG Konstanz
Sheet: /
File: di-4x-5V.kicad_sch
Title: di-4x-5V
Size: A4
Date: 2026-10-02
Rev:
KiCad E.D.A. 10.0.3
Id: 1/1