


Arduino Mega 2560

www.TheEngineeringProjects.com

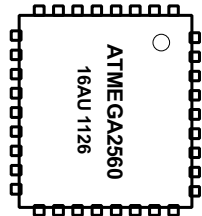

ANALOG IN

Reset BTN

PWM

COMMUNICATION

DIGITAL


AREF

- PB7/OC0A/OC1C/PCINT7
- PB6/OC1B/PCINT6
- PB5/OC1A/PCINT5
- PB4/OC2A/PCINT4
- PH6/OC2B
- PH5/OC4C
- PH4/OC4B
- PH3/OC4A
- PE3/OC3A/AIN1
- PG5/OC0B
- PE5/OC3C/INT5
- PE4/OC3B/INT4
- TX0 PE1/TXD0/PDO
- RX0 PE0/RXD0/PCINT8
- TX3 PJ1/TXD3/PCINT10
- RX3 PJ0/RXD3/PCINT9
- TX2 PH1/TXD2
- RX2 PH0/RXD2
- TX1 PD3/TXD1/INT3
- RX1 PD2/RXD1/INT2
- SDAPD1/SDA/INT1
- SCLPD0/SCL/INT0

- RESET
- VCC
- GND
- A0 PF0/ADC0
- A1 PF1/ADC1
- A2 PF2/ADC2
- A3 PF3/ADC3
- A7 PF7/ADC7/TDI
- A6 PF6/ADC6/TDO
- A5 PF5/ADC5/TMS
- A4 PF4/ADC4/TCK
- A8 PK0/ADC8/PCINT16
- A9 PK1/ADC9/PCINT17
- A10 PK2/ADC10/PCINT18
- A11 PK3/ADC11/PCINT19
- A12 PK4/ADC12/PCINT20
- A13 PK5/ADC13/PCINT21
- A14 PK6/ADC14/PCINT22
- A15 PK7/ADC15/PCINT23

- PB0/SS/PCINT0
- PB1/SCK/PCINT1
- PB2/MOSI/PCINT2
- PB3/MISO/PCINT3
- PL0/ICP4
- PL1/ICP5
- PL2/T5
- PL3/OC5A
- PL4/OC5B
- PL5/OC5C
- PL6
- PL7
- PG0/WR
- PG1/RD
- PG2/ALE
- PD7/T0
- PC0/A8
- PC1/A9
- PC2/A10
- PC3/A11
- PC4/A12
- PC5/A13
- PC6/A14
- PC7/A15
- PA7/AD7
- PA6/AD6
- PA5/AD5
- PA4/AD4
- PA3/AD3
- PA2/AD2
- PA1/AD1
- PA0/AD0


L1
L298 MOTOR DRIVER

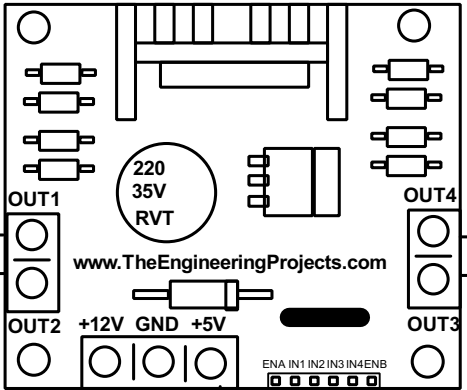

www.TheEngineeringProjects.com

POWER_SUPPLY
12V

ENCODER_CAR

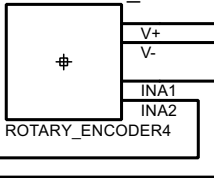

ENCODER_PENDULUM

