
Home Coffee Bean Roaster

User Manual

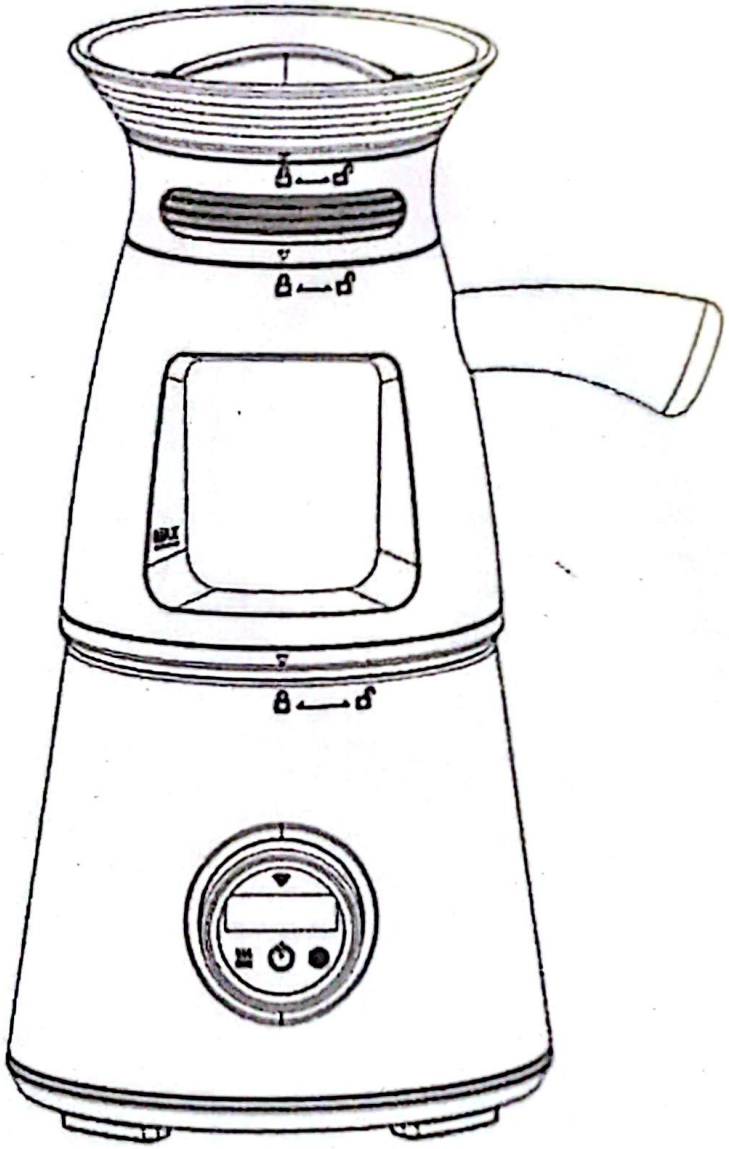

CBR-120POT

Be sure to read this manual carefully before using this appliance.
Keep this manual for future reference.

Contents

Important Safeguards ---------- 1-3

Parts Identification ---------- 4

Operating Steps ---------- 4-5

Using the Control Panel / Settings ---------- 5-8

Roasting Tips ---------- 8-9

Technical Specifications ---------- 9

Troubleshooting ---------- 10

Cleaning and Maintenance ---------- 11-12

Disposal ---------- 12

Important Safeguards:

To reduce the risk of fire, electric shock, or injury to persons, always follow basic safety precautions. Pay attention to the following when using this appliance:

⚠ WARNING!

- Misuse may result in personal injury.
- During operation or before cooling is complete, the air outlet and the surface of the appliance may be hot. Do not touch or approach.
- The appliance must be used under supervision.
- The weight of coffee beans loaded shall be ≤120 g and shall not exceed the Max fill line; otherwise, hot air cannot circulate properly, causing internal overheating and damage.
- Do not cover or block the bottom air inlet or the air outlet while the roaster is in use.
- Do not use the appliance near or in areas containing flammable or combustible liquids (e.g., gasoline). Place the appliance on a flat table, and keep a distance of at least 30 cm from any flammable materials.

Other precautions for use:

- Unplug the power cord before servicing or when not in use.
- Do not use as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only accessories recommended by the manufacturer.
- Do not pull or carry the appliance by the cord, or use the cord as a handle.
- Do not use an extension cord or an outlet with insufficient current capacity.
- Do not use a voltage converter or adapter, or plug the appliance into an

outlet with mismatched voltage.

- Do not unplug by pulling on the power cord. To unplug, grasp the plug.
- Do not handle the plug or appliance with wet hands.
- Do not put any object into the air inlet or outlet. Do not use with the air inlet or outlet blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Periodically clean the lid, the Coffee Chaff Bin, and the air intake screen to remove dust or debris, so as to maintain smooth airflow in the appliance. This will extend the service life and improve performance stability. Refer to the cleaning instructions for cleaning methods.
- When not in use, store the appliance indoors in a cool, dry place.

When using electrical appliances, always follow basic safety precautions, including the following:

1. Read all instructions, including the manual you are reading now.
2. Do not touch hot surfaces.
3. To prevent electric shock, do not immerse the Power Cord, Plug, or electrical parts of the Appliance in water or other liquid.
4. This Appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning use of the Appliance in a safe way and understand the hazards involved. Cleaning and maintenance shall not be performed by children unless they are older than 8 and supervised by an adult. Keep the Appliance and its Power Cord out of reach of children under 8 years. Persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, may use this Appliance if they have been given supervision or instruction concerning use of the Appliance in a safe way and understand the hazards involved.
5. Unplug from the outlet when not in use and before cleaning. Allow the Appliance to cool before assembling or disassembling parts.
6. Do not operate any Appliance with a damaged Cord or Plug. If the

Appliance malfunctions or is damaged in any way, do not use it. For assistance, contact the after- sales service of the retailer.

7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.

8. Do not let the Cord hang over the edge of a table or counter. Do not let the Cord touch hot surfaces.

9. Do not place the Appliance on or near a hot gas or electric burner, or in a heated oven.

10. Do not move the Appliance while it is still operating.

11. Do not unplug the Appliance while it is running.

12. Do not use the Appliance for other than its intended use.

13. Do not insert any objects or fingers into the gaps of the product.


14. This product is best suited for household use. Commercial or industrial use is not recommended.

This product is for household use only.

- This product is NOT suitable for use in the following locations:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farmhouses;
  - Guest rooms in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.

15. After unpacking the product, handle the plastic bags carefully and keep them out of reach of children.

Parts Identification:

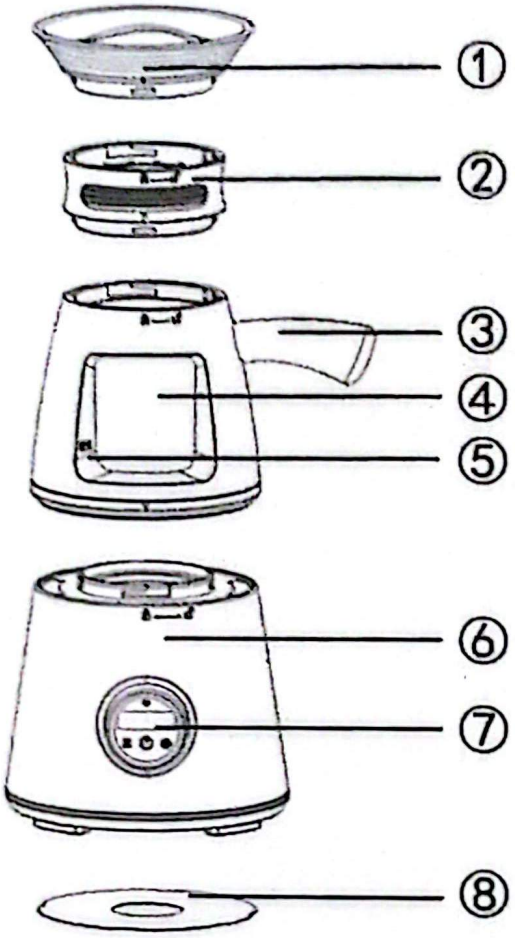

① Lid

② Coffee Chaff Bin

③ Handle

④ Coffee Bean Hopper

⑤ Max Fill Line (120 g)

⑥ Base

⑦ Control Panel

⑧ Air Intake Screen

Operating Steps:

1. Pour coffee beans into the Roasting Chamber

- Remove the Lid from the Coffee Chaff Bin, then remove the Coffee Chaff Bin from the Roasting Chamber. (Turn counterclockwise between the two until the ▽ allgns with the 🔓 position, then lift off.)

- Pour coffee beans into the Roasting Chamber. (Note: The weight of coffee beans shall be ≤120 g and shall not exceed the MAX line marked on the Roasting Chamber.)


- Correctly attach the Coffee Chaff Bin onto the Roasting Chamber, place the Lid onto the Coffee Chaff Bin, then connect the Roasting Chamber to the Main Unit. (Turn clockwise between the two until the ▽

aligns with the position. This indicates proper installation.)

2. Start operation


- Connect the power plug. (Note: Use a properly matched outlet.)
- Press and hold the Power Button on the Control Panel for 3 seconds to turn on the appliance.

Using the Control Panel / Settings:

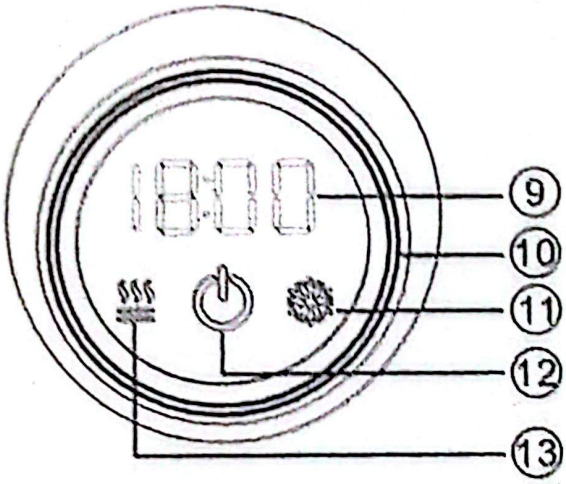

⑨ Display
⑩ +/- Adjustment Knob
⑪ Cooling Indicator
⑫ Power Button
⑬ Heating Indicator

1. Power on: Press and hold the Power Button ⑫ for 3 seconds to turn on the appliance. After power-on, the Display ⑨ shows Roasting Mode P01.

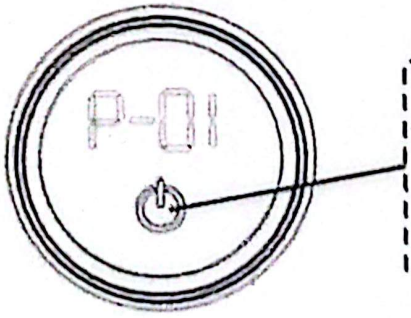

Press and hold the Power Button for 3 seconds to turn on.

2. Select roasting mode and set:

Step 1: Rotate the +/- Adjustment Knob ⑩ to select a roasting mode: P01, P02, or P03. After selecting the roasting mode, press the Power Button ⑫ once to confirm and proceed to the next step.

Step 2: Rotate the +/- Adjustment Knob ⑩ to set the desired target time/temperature. Then press the Power Button ⑫ once to start. During heating, the Heating Indicator ⑬ lights up, and the Display ⑨ counts down. When the heating countdown reaches 0, the appliance automatically switches to cooling mode, and the Cooling Indicator ⑪ lights up. Wait until the cooling cycle is complete and the appliance returns to standby mode before removing the coffee beans.

3. **Manually switch to cooling mode:** When the appliance is running in heating mode, the roasting time cannot be reset and the appliance cannot be forced to turn off. To reset the roasting time or turn off the appliance, press the Power Button ⑫ once to manually switch the appliance to cooling mode. After the cooling cycle is complete, resetting or turning off the appliance is possible.

Roasting Mode Selection:

For different coffee beans, the recommended modes are as follows:

Mode	Coffee Bean Types	Settings Tips
P01	Suitable for: peeled green coffee beans or green beans with less chaff residue, such as washed processed green coffee beans, sun-dried specialty green coffee beans, and all polished and peeled green coffee beans.	Set time range: 2–18 minutes. (For the corresponding time-temperature reference, please refer to the Time-Temperature Reference Chart in the Roasting Tips section of this manual.)
P02	Suitable for: unpeeled green coffee beans or green beans with more chaff residue, such as ordinary sun-dried green coffee beans, honey-processed green coffee beans, etc.	Set time range: 2–18 minutes. (For the corresponding time-temperature reference, please refer to the Time-Temperature Reference Chart in the Roasting Tips section of this manual.)
P03	Suitable for:1.DIY professional roasting of peeled green coffee beans.2.Re-roasting or drying of roasted coffee beans.	Set temperature range: 140°C–240°C. Roasting time: 10 minutes.

Note: Since the appliance cannot identify coffee bean types, please use the appropriate roasting mode correctly. If you are unsure which mode to

use, or if you cannot achieve the desired results during roasting, you may use the P02 + P03 combination for more professional roasting. Procedure:


① Use P02 mode to dehydrate and remove chaff from the beans: set the time to 10 minutes in P02 mode. After the cycle is complete, remove the Lid and the Coffee Chaff Bin, clean out the chaff and residue, then reassemble them onto the Appliance.

② Use P03 mode, set your desired roasting temperature, and wait until the P03 cycle is complete.

Roasting Tips:

Time-Temperature Reference Chart

This Roaster features a built-in temperature curve design. By simply setting different roasting times, the appliance will follow corresponding temperature curves to achieve various roasting results. The time-temperature reference chart is as follows:

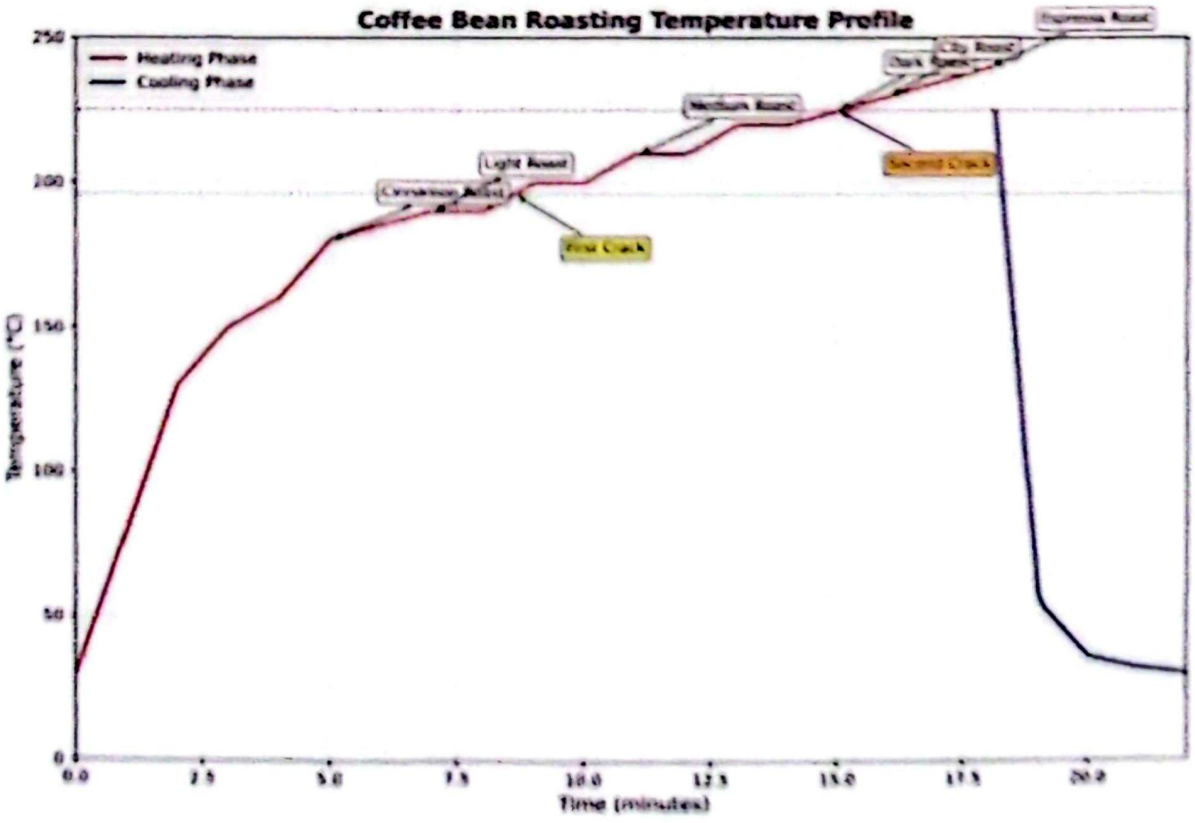

Time - Roast Degree:(Applicable to P01/P02 modes only)

Roast Degree	Time	Maximum Temperature
Light Roast	6-8 minutes	180℃
Medium Roast	9-11 minutes	195℃
Dark Roast	12-14 minutes	215℃
City Roast	14-16 minutes	225℃
Italian Roast	17-18 minutes	240℃

Note: The roasting data above are based on the roaster's test results from coffee professionals and are for reference only. Factors such as coffee bean variety, size, shape, and moisture content may vary. Users may adjust the settings based on their own experience to achieve the desired roasting results.

Technical Specifications:

Product Name: Coffee Bean Roaster
Model: CBR-120POT
Input Voltage: AC220-240V~ 50/60Hz
Power: 1500W
Capacity: 120g
Set Time Range: 2-18 minutes
Maximum Temperature: 240°C

Troubleshooting:

Symptom	Possible Cause	Solution
E1	Temperature Sensor Open Circuit	Turn off the appliance and restart. If the problem persists, contact after-sales service.
E2	Excessive Coffee Beans Loaded	Check the weight and volume of the Coffee Beans loaded. Ensure that the Coffee Bean weight is ≤120 g and the fill level does not exceed the Max Fill Line.
	Airflow Obstructed (Air Intake Screen or Exhaust Screen is Clogged)	Please clean the Air Intake Screen and Exhaust Screen according to the cleaning instructions.
E3	No Heating	Contact after-sales service for resolution.
	Temperature Sensor Failure	Contact after-sales service for resolution.
Coffee Beans are not being agitated by the hot air.	Excessive Coffee Beans Loaded	Check the weight and volume of the Coffee Beans loaded. Ensure that the Coffee Bean weight is ≤120 g and the fill level does not exceed the Max Fill Line.
	Airflow Obstructed (Air Intake Screen or Exhaust Screen is Clogged)	Please clean the Air Intake Screen and Exhaust Screen according to the cleaning instructions.
Unit Does Not Power On / Does Not Start		Disconnect the Power Supply for more than 20 seconds, then reconnect and try to power on/start again. If the problem persists, contact after-sales service.

Cleaning and Maintenance:

⚠ WARNING!

* Disconnect the power supply before cleaning. (Be sure to disconnect the power supply when not in use for an extended period.)
* Allow the Appliance to cool down before cleaning.
* Do not immerse the Base or Power Cord Plug in water. This may cause malfunction or even hazard.
* Do not use detergents, metal brushes, bleach, or similar substances to clean any part of the Appliance. Doing so may cause damage or discoloration.

Parts Identification	Cleaning and Maintenance Methods
Base	Wipe the surface with a damp microfiber cloth. If it is particularly dirty, wipe with mild soapy water or a neutral detergent.**CAUTION:** Do not allow water to enter the interior of the Power Socket during cleaning! Do not clean in a Dishwasher! Do not rinse directly with water!
Lid	• Use a brush to remove dust, chaff, and other debris. • Wipe with a damp microfiber cloth. • Rinse directly with water. • May be cleaned in a dishwasher.
Coffee Chaff Bin	
Coffee Bean Hopper	
Air Intake Screen	First remove the Screen from the Base: • Use a brush to remove dust, chaff, and other debris. • Wipe with a damp microfiber cloth. • Rinse directly with water. • May be cleaned in a dishwasher.

IMPORTANT: The Main Unit contains electrical parts. Do not allow water to enter the interior. If water enters the interior, subsequent use may cause malfunction or even hazard.

If water enters the interior, do not attempt to power on or operate the appliance, and do not shake it. Place it on a flat surface in a cool, dry place and allow it to dry completely for 5-7 days, or have a professional disassemble and dry it to ensure safety before use.

Disposal:

Proper Disposal of This Product.

This marking indicates that this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle responsibly to promote sustainable reuse of material resources. To return your used appliance, please use the return and collection system, or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.