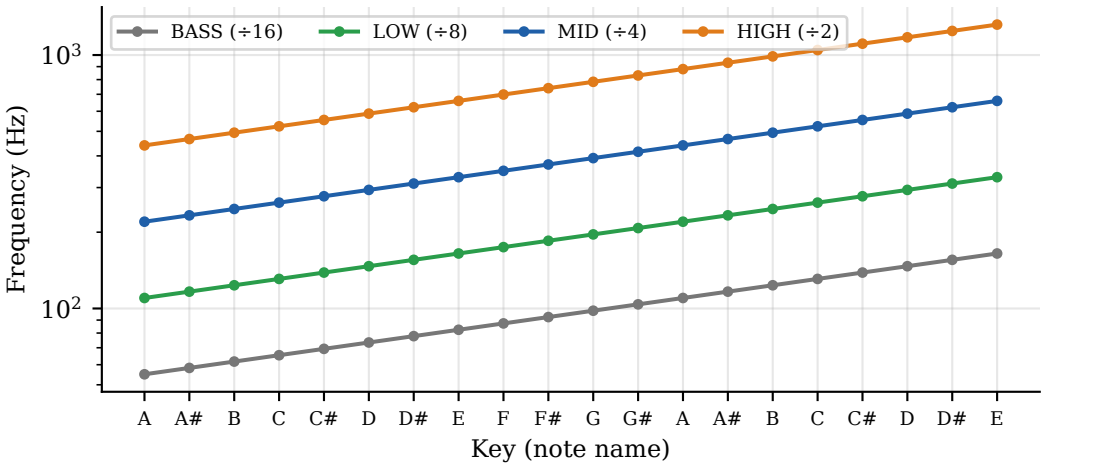
Note map: 20 keys × 4 octave settings (exact ×2 steps from the CD4040)
BASS (÷16)
LOW (÷8)
MID (÷4)
HIGH (÷2)
10^3
10^2
Frequency (Hz)
A
A#
B
C
C#
D
D#
E
F
F#
G
G#
A
A#
B
C
C#
D
D#
E
Key (note name)