
Fold Stand v4: hinge test


Print this first: both new joints at full size, on a short plate. About 30 minutes.

1 What's in the print

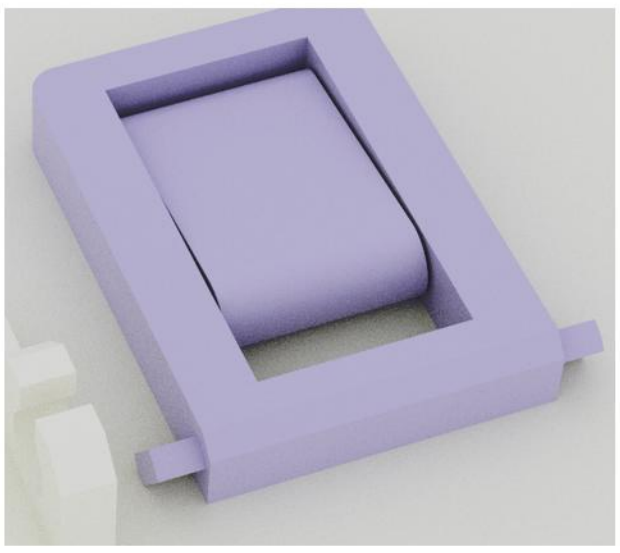


- **The small base (white here), with its two lugs.**
- **The small plate (purple), with its prop (pink) printed inside it, already on its hinge.**
- Nothing to glue, and nothing extra to buy.

2 Free the prop

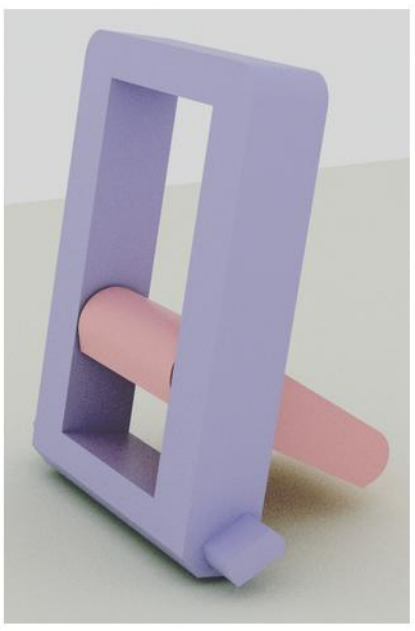

- Push the prop out from the plate's back. It turns on two small cones, one each side.
- If it's stiff the first time, work it back and forth a few times.

3 Put the plate on the lugs

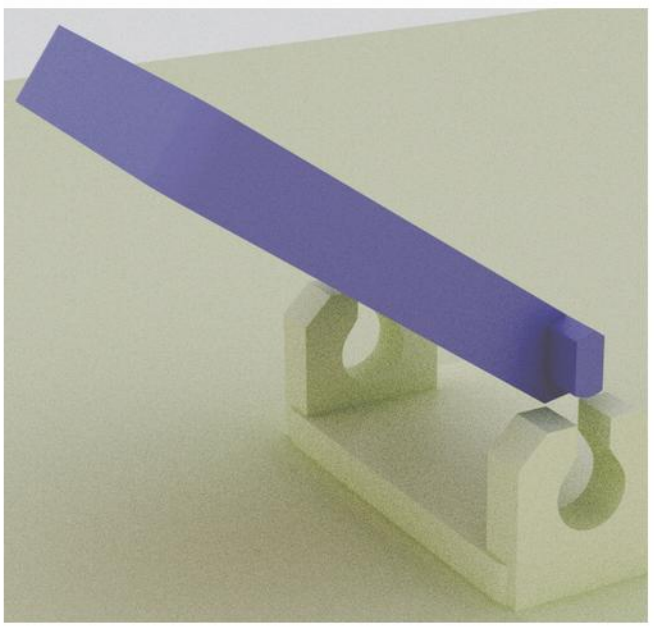

- **Fold the prop back into the plate first.**
- Tip the plate forward, well past upright, top end leaning out over the front: about 145 degrees.
- Lower its two side pins straight down into the lugs' slots. It only fits at this angle.

4 Tilt it back



- Now it turns, but can't lift out: at every angle from flat to upright the pins are locked in.

Design-review renders of the real parts, not photos. Colours are only to tell the parts apart.

Fold Stand v4: test the hinges

Both joints have to move freely and never come apart.

1 Try each joint

- **The prop: swing it in and out. Does it stay on? Try to wiggle it off sideways.**
- **The plate: tilt it from flat to upright. Lift it at each angle: it must not come off.**
- Tip it to about 145 again: it should lift straight off.

Good

- The prop swings freely and won't come off.
- The plate turns smoothly in the lugs.
- It only comes off at the tipped-forward angle.

Tell me


- if the prop was stuck, fused, or snapped freeing it;
- if either joint feels loose or rattles;
- if the plate came off at any angle except tipped forward.

Design-review renders of the real parts, not photos. Colours are only to tell the parts apart.

Fold Stand v4: put it together


Three pieces that stay together. Print it once the hinge test works.

1 What's in the box

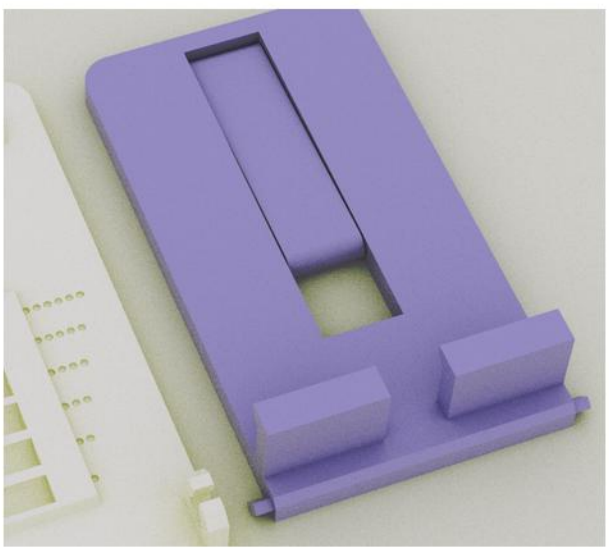


- **The base (white here).**
- **The plate (purple), with the prop (pink) printed inside it, folded flush.**

2 Put the plate on

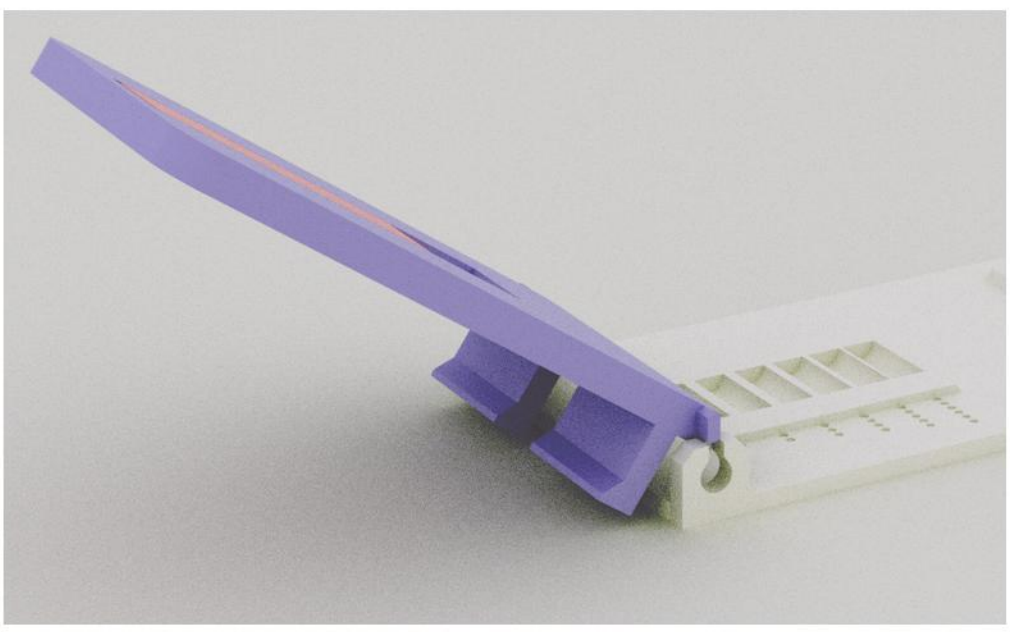


- Prop folded in. Tip the plate forward, top end out over the front (about 145 degrees).
- Lower its two side pins straight down into the lugs' slots.

3 Tilt it back

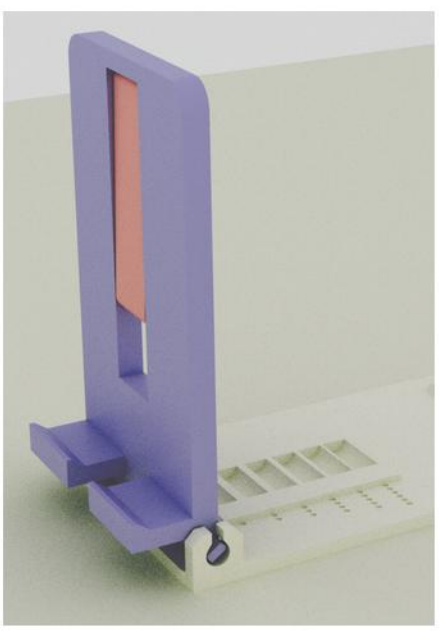

- Bring it back to upright. From here on it's locked in: it turns, but won't lift out.

4 Swing the prop out and set it in a notch

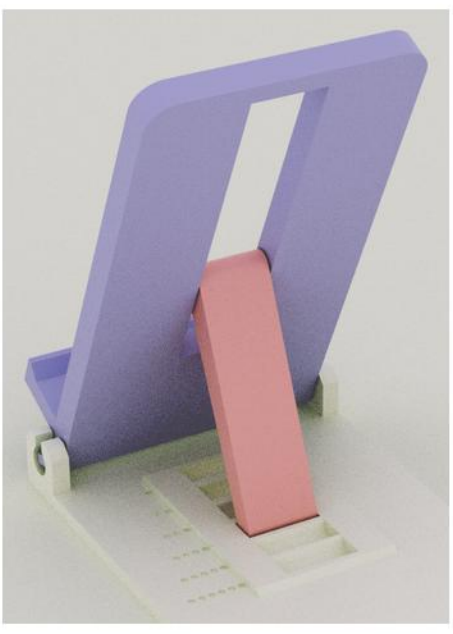

- Push the prop out from the plate's back. Set its rounded foot in one of the six notches on the base.
- The notch nearest the plate is the steepest angle.

Design-review renders of the real parts, not photos. Colours are only to tell the parts apart.

Fold Stand v4: use it and fold it

Six angles from 80 to 55 degrees.

1 Stand your phone on the shelf




- Its bottom edge on the shelf, its back against the plate.

2 Change the angle




nearest notch: 80 deg

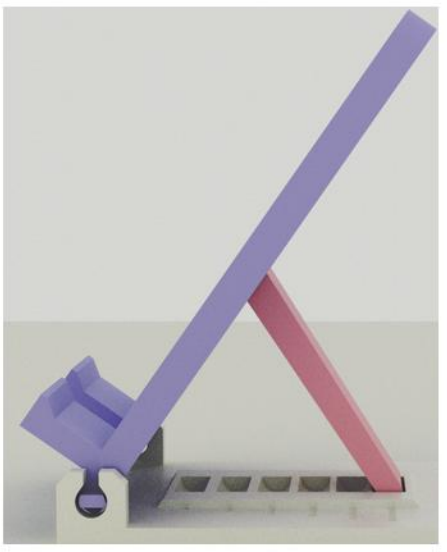

farthest notch: 55 deg

- Lift the phone, move the prop's foot to another notch.

3 Fold it

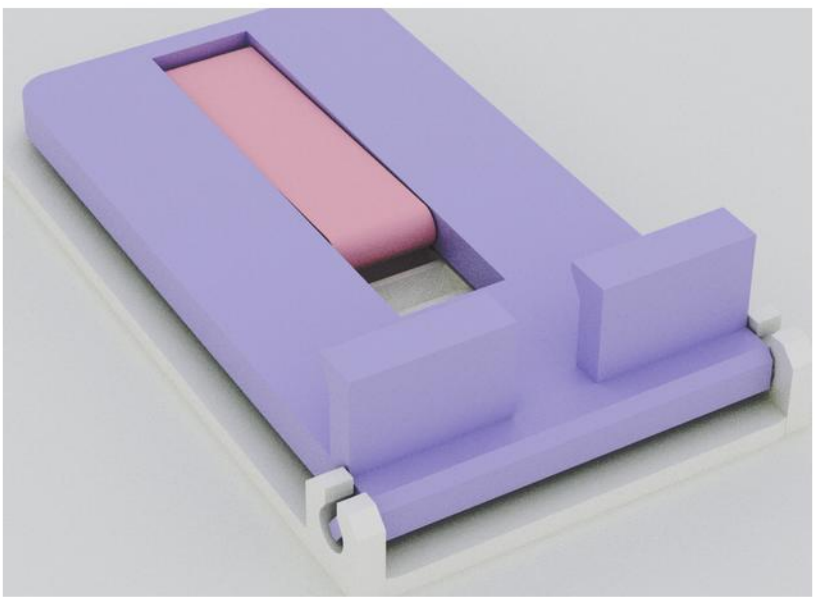

- Lift the prop's foot out of its notch and fold the prop flush into the plate.
- Lay the plate down flat onto the base. Folded it's 34 mm tall, and still one piece.

Good

- Each angle holds when you tap the screen.
- Folds flat and nothing comes loose when you carry it.

Tell me

- if any angle slips or the stand tips;
- if the prop won't fold flush;
- if the plate rubs the base anywhere.

Design-review renders of the real parts, not photos. Colours are only to tell the parts apart.