
Fold Stand


A phone stand that clicks to **five angles** and **folds flat** for your bag. Put it together once, then it's open, phone on, done.

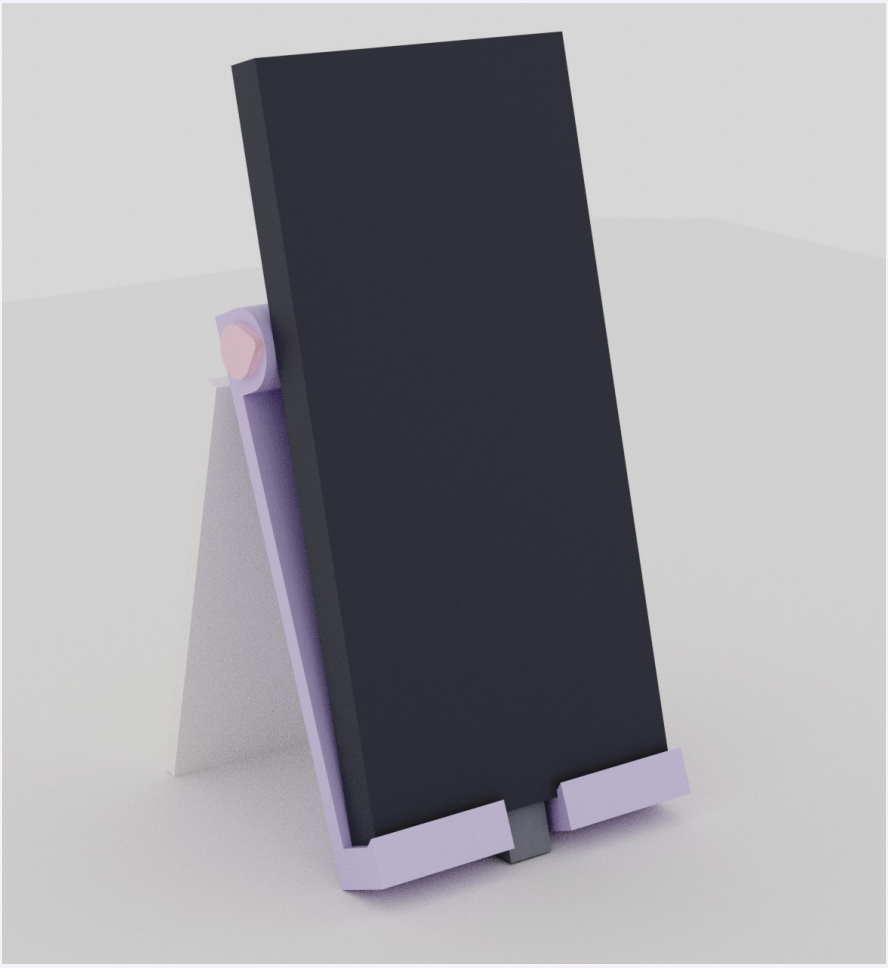

Pictures in this guide are renders of the real parts, not photos. The colours just tell the parts apart: yours may all be one colour.

In the bag

- **Front plate** the one with the lip
- **Back plate** the leg
- **Two pins** they hold the hinge together

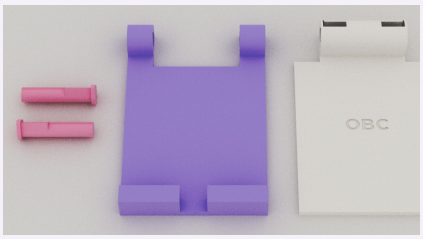

At a glance

• Five click-stops: the phone leans 81°, 75°, 69°, 63° or 57°.
• Folded: 80 × 113 × 20 mm, and it clicks shut.
• The lip takes a phone in a case up to about 10.5 mm thick.
• A 14 mm slot in the lip for a charging lead.


Once only

Put it together


Two steps, about a minute. After this the pins stay in: you never take it apart to use it.

1. **Fold the back plate onto the front plate.** Lay the front plate down, lip side up. Bring the back plate up under it, flat face to flat face, so the back plate's barrel slots into the gap between the front plate's two barrels.

Line up
the back plate's barrel under the gap

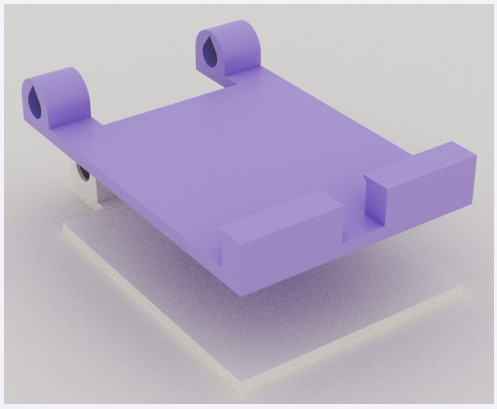


Together
three barrels in a row

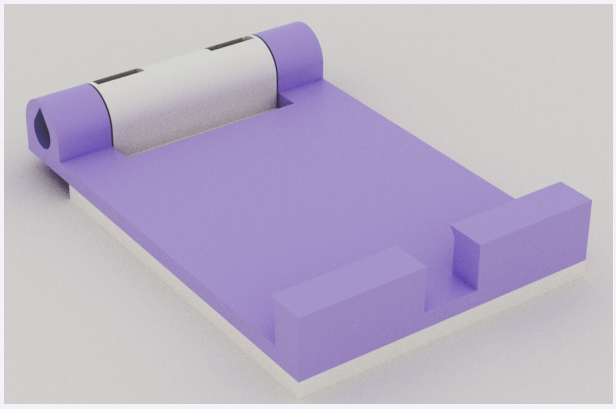


2. **Push a pin into each end of the hinge.** The hole is teardrop-shaped, and so is the pin just under its head, so it only goes in one way: **point toward the lip side**. Press it in until the head sits flat on the end of the barrel. Then the other end.

Line up
teardrop point toward the lip side

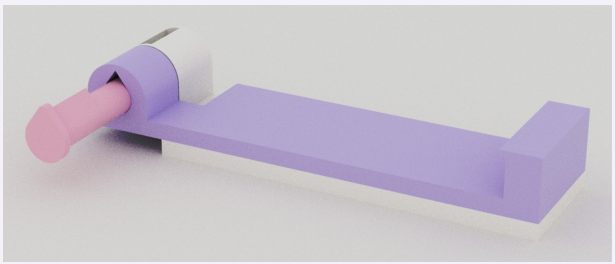


Pressed home
head flat on the barrel

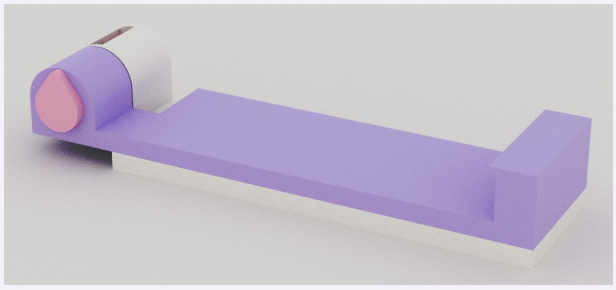

Won't start? Turn the pin until its point lines up with the hole's point. It's a snug fit on purpose, so the pins don't fall out: press firmly and evenly.

Stand it up

Stand it like an A, lip toward you. Pull the back leg away from the front plate: it clicks at each stop. **The more clicks, the further back your phone leans.**

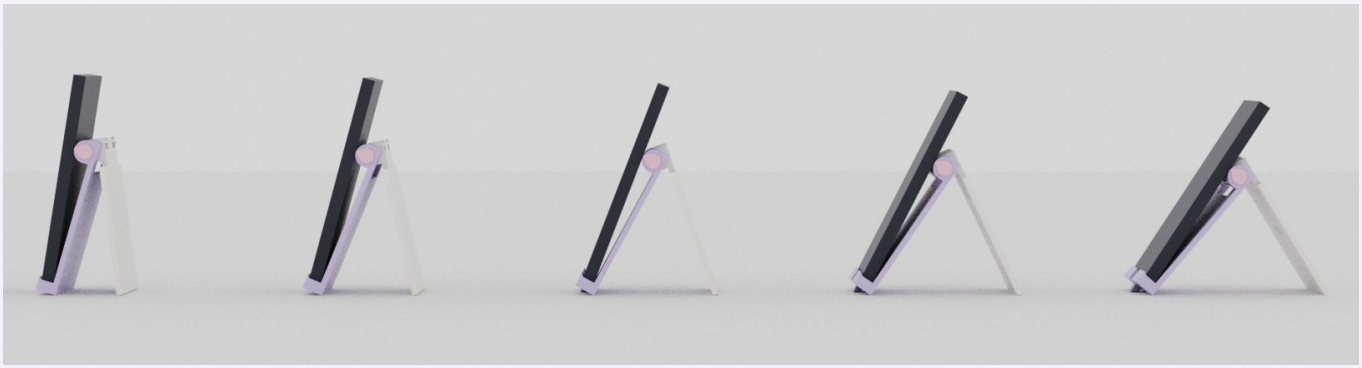

81°	75°	69°	63°	57°
click 1	click 2	click 3	click 4	click 5


Put your phone on

1. Choose an angle: open the leg to that click.
2. **Charging?** Thread the lead up through the slot in the middle of the lip first. The slot is 14 mm wide.
3. Stand the phone in the lip, screen toward you, and let it lean back onto the hinge. It sits a little steeper than the front plate because it rests on the hinge.

> **On a shiny surface, use the steeper clicks.** Standing up, an A is held mostly by the grip under its feet. The flatter it opens, the more grip it needs, so the two flattest clicks (63° and 57°) may slide open on glass or gloss. On wood, a mat or a desk pad they should be fine. There is no click past the fifth, so don't open it further.

Fold it away

Lift the phone off and push the leg back against the front plate. It clicks shut, so it stays folded in a bag or a pocket: 80 × 113 × 20 mm.

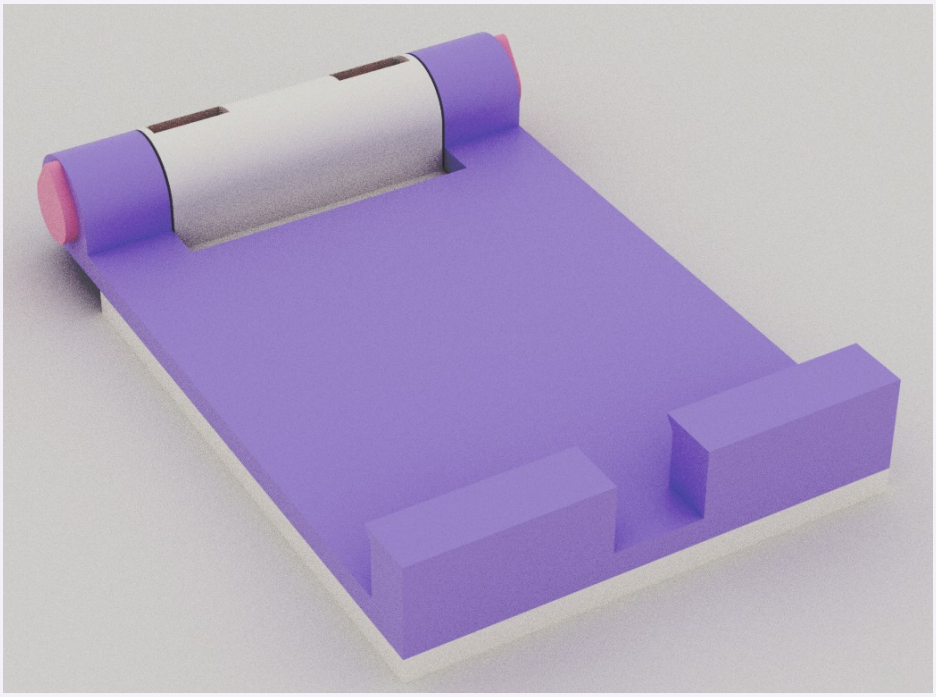

If something's not right

A pin came out. Push it back in, point toward the lip side. If it keeps working loose, put a small drop of glue in the end of the front plate's barrel only: the part of the pin past it turns inside the leg and has to stay free, or the clicks stop.

It slides open. Use a steeper click, or stand it on something with more grip than glass.

My phone won't fit in the lip. It takes a phone in a case up to about 10.5 mm thick. A thicker case won't sit in it.

The click is too weak or too stiff. Let us know. The click's strength is set by one number in the design, and it can be tuned.

Keep it out of the heat. It's printed in PLA, which softens in a hot car or on a sunny dashboard.