
Fold Stand


A phone stand that **locks at five angles** and **folds flat** for your bag. Pinch the two buttons on the hinge to open it, push it to the angle you want, done.

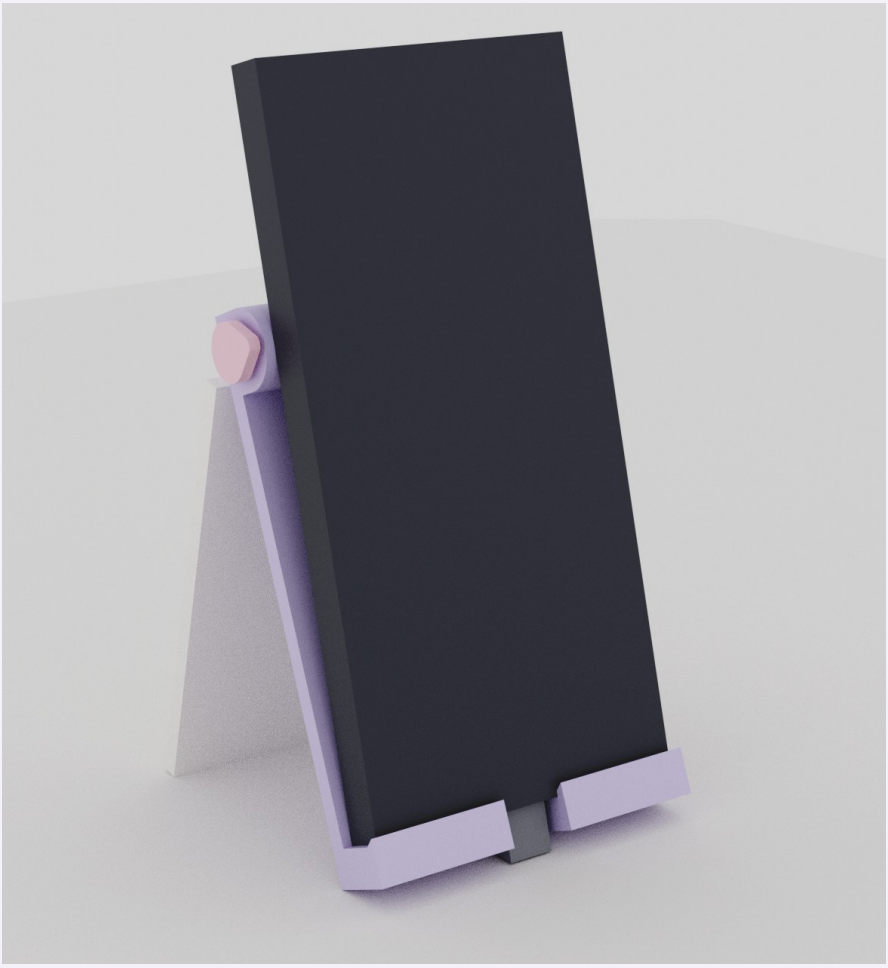

Pictures in this guide are renders of the real parts, not photos. The colours just tell the parts apart: yours may all be one colour.

In the bag

- **Front plate** the one with the lip
- **Back plate** the leg
- **Two pins** the hinge's buttons

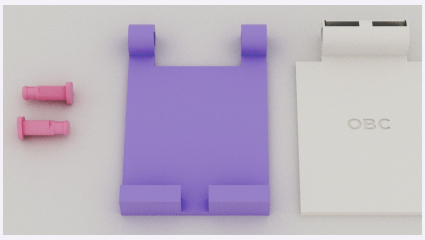

At a glance

• Five angles: the phone leans 81°, 75°, 69°, 63° or 57°.
• It locks at each one, so the legs can't spread.
• Folded: 80 × 113 × 20 mm, locked shut.
• The lip takes a phone in a case up to about 10.5 mm thick.
• A 14 mm slot in the lip for a charging lead.


Once only

Put it together


Two steps, about a minute. After this the pins stay in: you never take it apart to use it.

1. **Fold the back plate onto the front plate.** Lay the front plate down, lip side up. Bring the back plate up under it, flat face to flat face, so the back plate's barrel slots into the gap between the front plate's two barrels.

Line up
the back plate's barrel under the gap

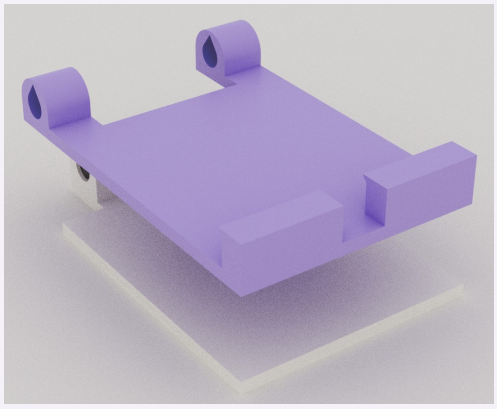


Together
three barrels in a row

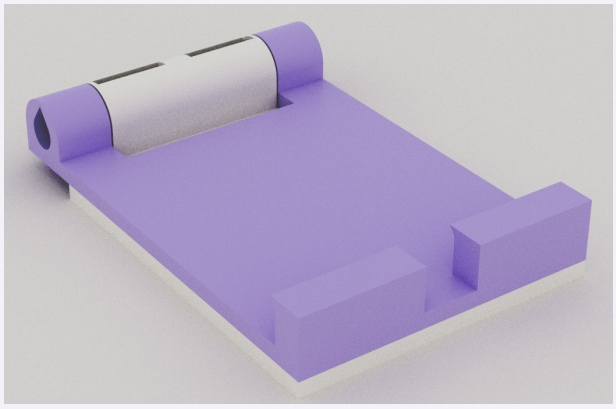


2. **Push a pin into each end of the hinge.** The hole is teardrop-shaped, and so is the pin just under its head, so it only goes in one way: **point toward the lip side**. Near the end it goes stiff, then **clicks in**: now it can't fall out. Its head stands about 1 mm proud: that's a button. Then the other end.

Line up
teardrop point toward the lip side

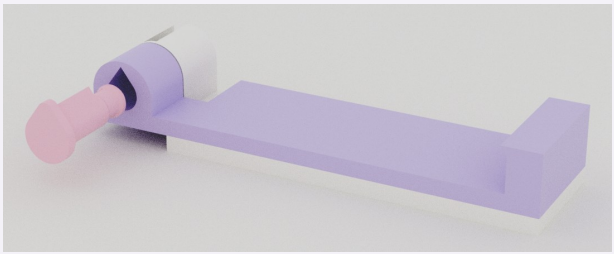


Clicked in
the head is a button

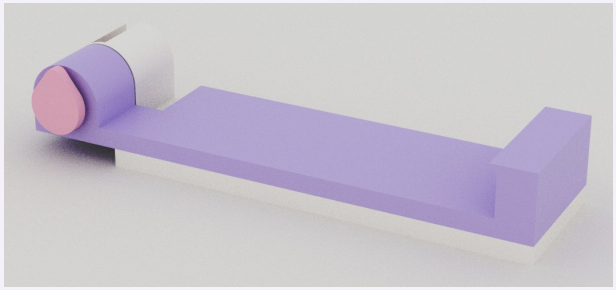

Won't start? Turn the pin until its point lines up with the hole's point. The stiff part is on purpose: it's riding over the catch that keeps the pin in. Press firmly and evenly.

Stand it up

Pinch the two buttons on the ends of the hinge and swing the leg out, past the angle you want. Let go, then **push the leg back toward the front plate**: it clicks at each angle and locks there. Each click is steeper.

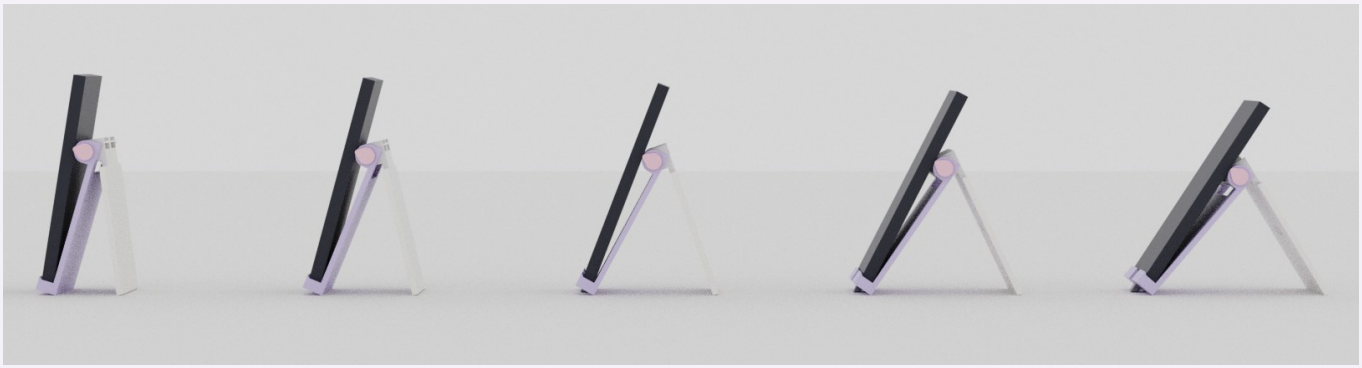

81°	75°	69°	63°	57°
steepest				flattest


Put your phone on

1. Set the angle: pinch, open past it, let go, push back to the click.
2. **Charging?** Thread the lead up through the slot in the middle of the lip first. The slot is 14 mm wide.
3. Stand the phone in the lip, screen toward you, and let it lean back onto the hinge. It sits a little steeper than the front plate because it rests on the hinge.

> **It holds its angle by itself.** Each click is a catch, not just a bump: the phone's weight can't push the legs apart, even on glass. To lay it back further, pinch the buttons again.

Fold it away

Lift the phone off and push the leg flat against the front plate. It clicks shut and locks, so it stays folded in a bag or a pocket: 80 × 113 × 20 mm. Pinch the buttons to open it again.

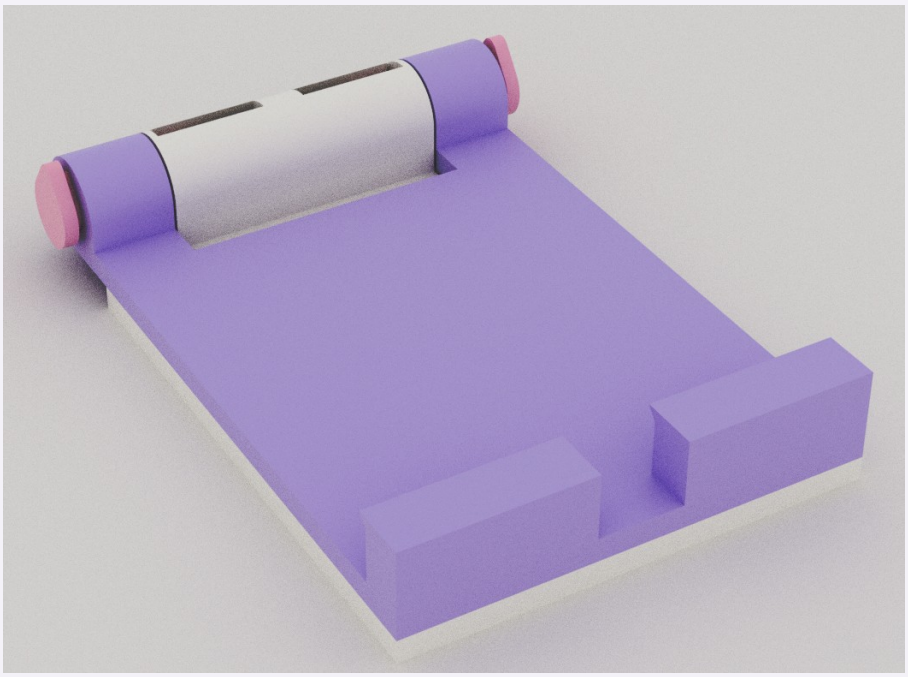

If something's not right

It won't open. Pinch both buttons at once: each end of the hinge has its own catch.

The buttons stay pushed in. Push the leg toward the front plate until it clicks; that brings them back out. If it keeps happening, let us know: their spring-back is set by one number in the design.

A pin came out. Push it back in, point toward the lip side, until it clicks. Don't glue it: the pin has to slide for the button to work.

My phone won't fit in the lip. It takes a phone in a case up to about 10.5 mm thick. A thicker case won't sit in it.

The click or the buttons feel too weak or too stiff. Let us know. Each is set by one number in the design, and can be tuned.

Keep it out of the heat. It's printed in PLA, which softens in a hot car or on a sunny dashboard.