Lesson 16:

User Administration



IGSS

Interactive Graphical
SCADA System

YouTube
Broadcast Yourself™

Contents of this lesson



Topics:


- **What is User Administration ?**
- **Where do I find it?**
- **How do I use it?**

What is User Administration ?



- The **User Administration** module is the (optional) security module in **IGSS**.
- It consists of three types of security schemes:
  1. **User Groups/Users and Passwords**
  2. **Protect object -** security for individual objects in the project
  3. **Exclusive control -** string for permitting specific workstations to control a protected object


User Administration in the IGSS menu

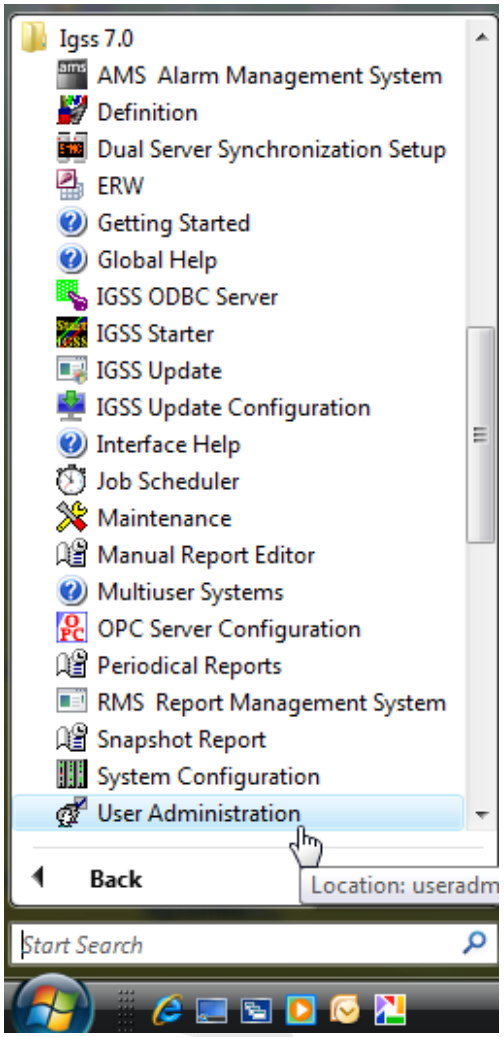

User Groups/Users and Passwords


- The **User Administration** module is set up for the IGSS project, which is loaded in the **System Configuration** module, which is also known as the *active configuration*.

- We'll start by looking at the first protection scheme, **User Groups/Users and Passwords**.

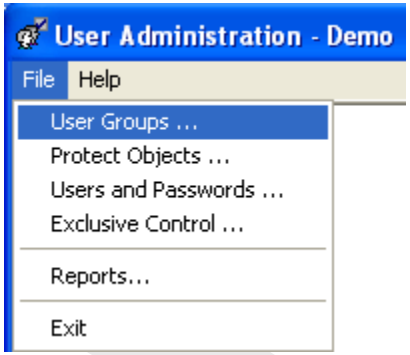


User Groups set-up

- Groups are created one at a time by using the **Add Group** button
  - ▲ A new group is displayed in the **All defined groups** box as a question mark ? followed by 4 digits.
  - ▲ This notation can be overwritten with text by highlighting it and then keying in text in the **Group Name** field.
- **Default diagrams** – select a start-up diagram for each user group.
- **Global Rights –** select one or more rights for each group (next slide).
- **Protect object rights** level can be selected for each user group (later slide).

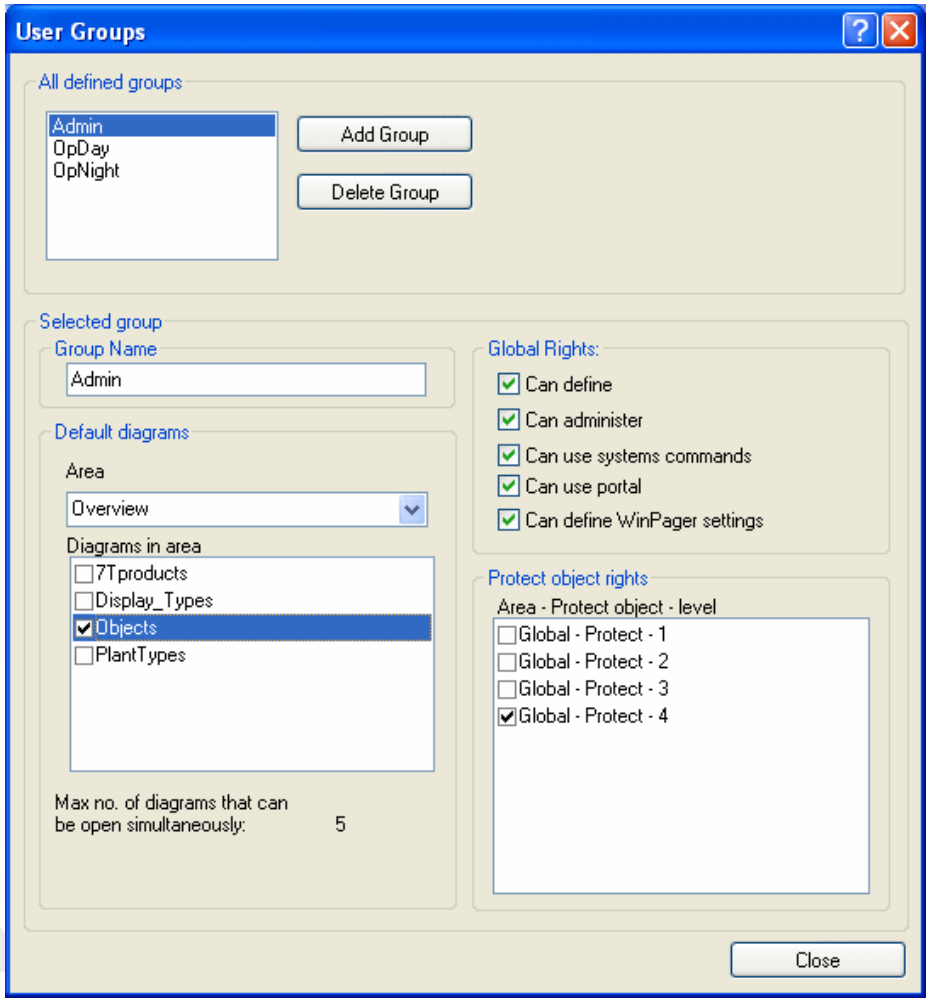


User Groups: Global Rights


Admin group
(Bob)

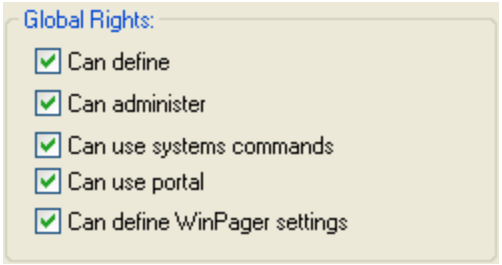

OpDay group
(Jim)

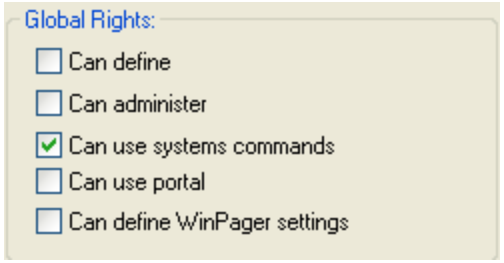

OpNight group
(Pat)

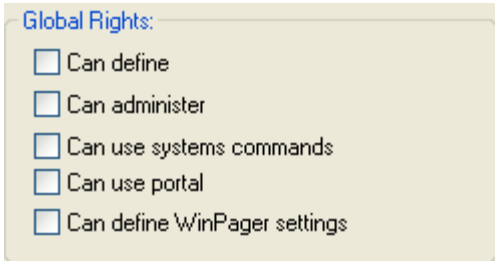

Can define
Can start the **Definition** program, change settings in System Configuration and create/edit Maintenance jobs.


Can administer
Can start the **User Administration** program.

Can use system commands
Can start and stop the configuration. Start/stop of data collection and logging.


Can use portal
Can access the IGSS Internet Portal.

Can define WinPager settings
Can access the WinPager program to create users, change settings, etc.

Users and Passwords

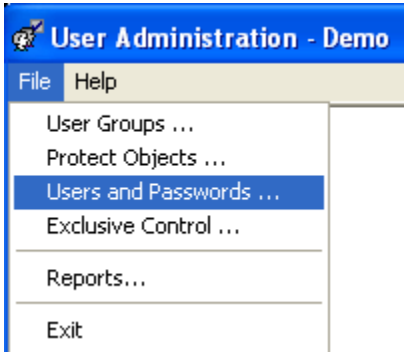

STEP 1:
Click **New User** to create a new user.

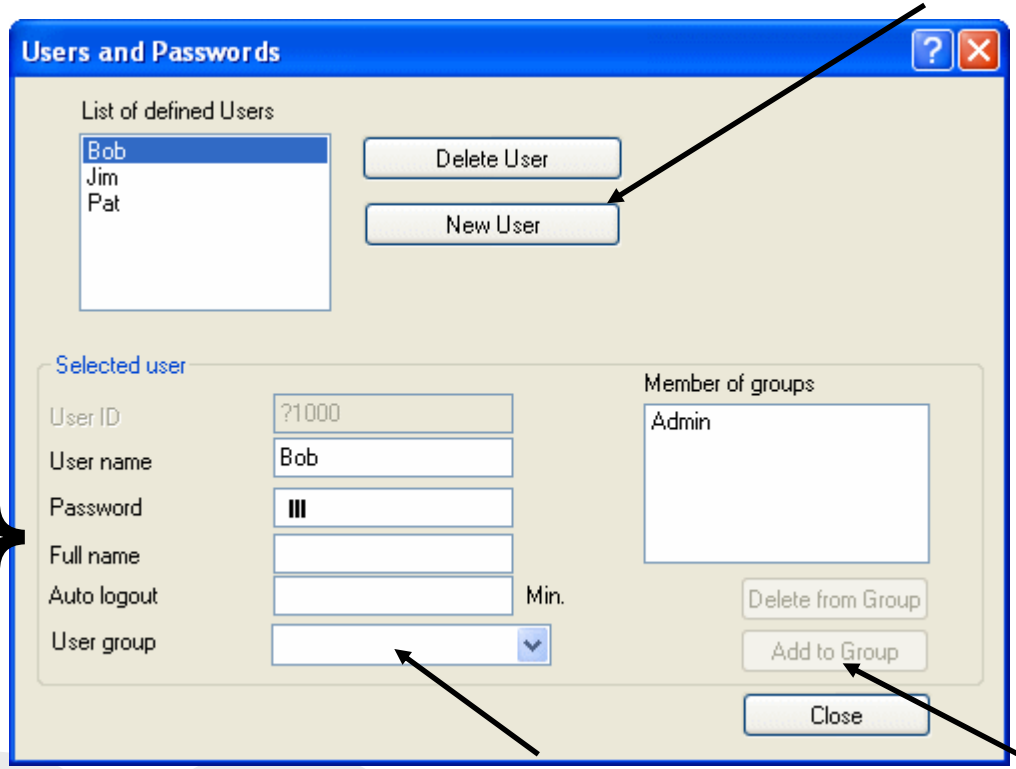


STEP 2:
Enter the user's details. **Auto logout** will log the user out after xx minutes of inactivity; if necessary, the inactive user can also be disconnected from the server (setting in **System Configuration**).

STEP 3:
Remember to select a group for the user in the **User group** drop-down list and complete by clicking **Add Group**.


Users and Passwsords: set up complete


- The first security scheme has now been set up and can be enabled *without* using the two other schemes:
  - ▲ Protect object
  - ▲ Exclusive control
- To enable security, ***clear*** the check mark for **Disable access control** on the **Access Control** tab in **System Configuration**
  - NOTE: Always remember the Admin name and password; other-wise access to the module is denied.

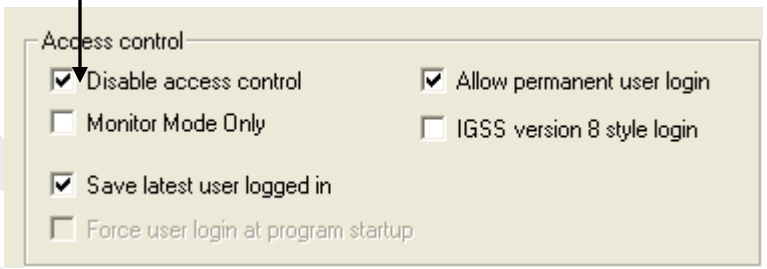

Protect object: setting up in Definition (1)


- You must make sure that the **Protect object** is properly set up in the **Definition** program.
- Use **Open by Name…**to call up the **Object Browser** and locate and open the Properties tabs for the object called **Protect**.
- Go to the **Change State** tab and under **States:** select **Security level 4** and click **OK**.
- Remeber to **Save** and **Install Configuration.**

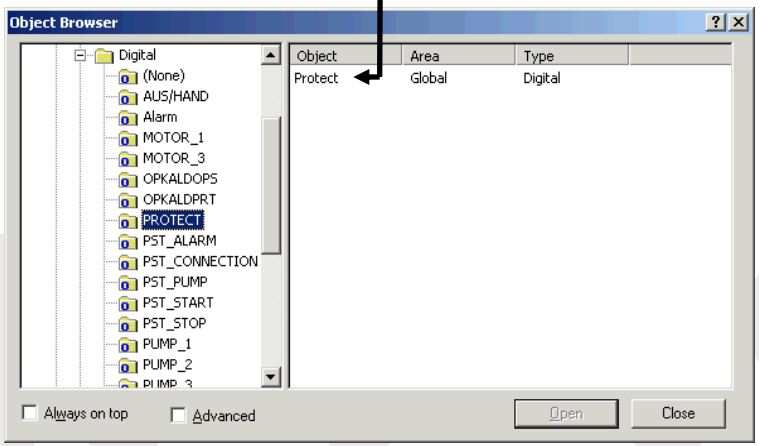

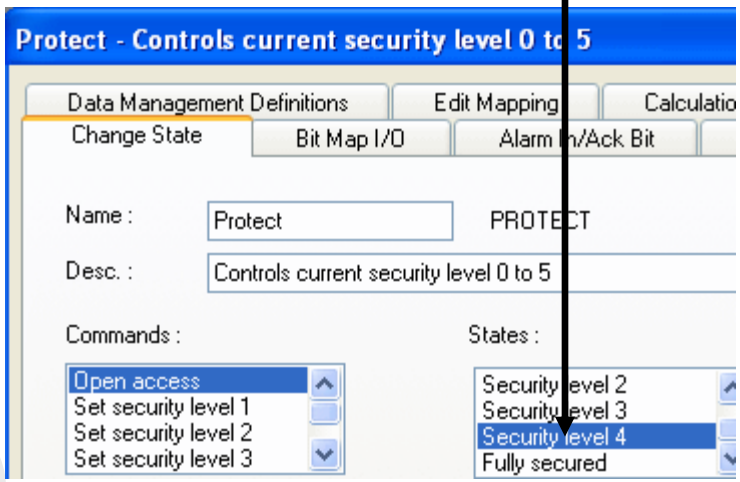


Protect object: setting up in Definition (2)

STEP 1:
Double-click the object symbol.

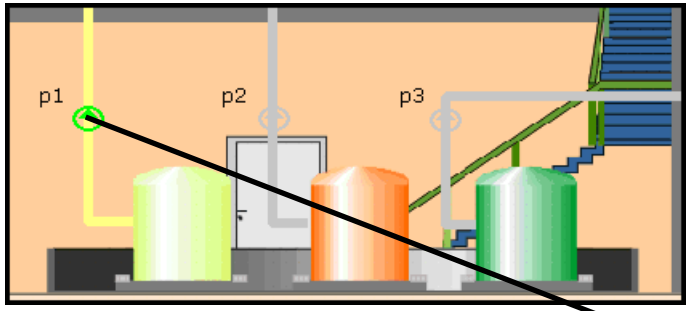



IMPORTANT:
Only objects that are actively protected are covered by the user administration rights. You can thus choose to leave some objects unprotected.

STEP 2:
On the **Data Management Definitions** tab, select the **Protect** object in the **Protection** drop-down list.

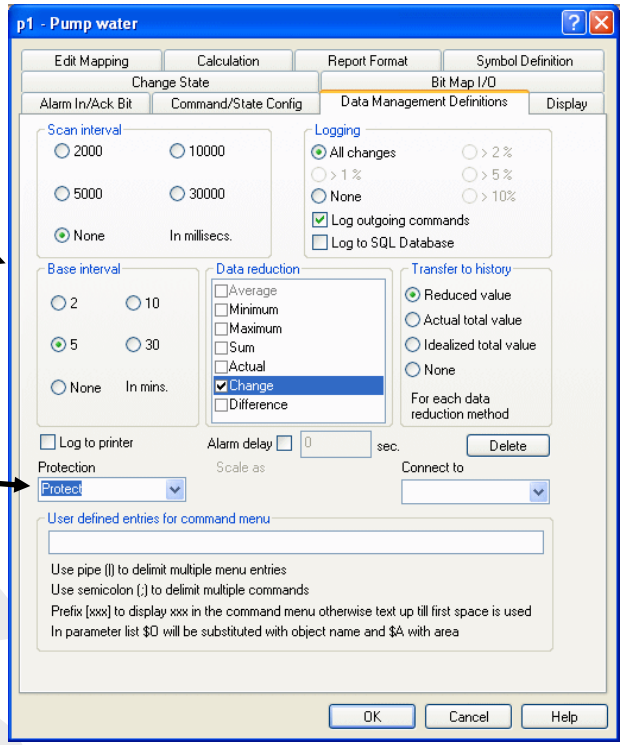


Protect Objects menu

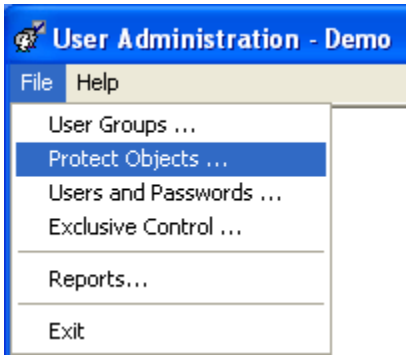

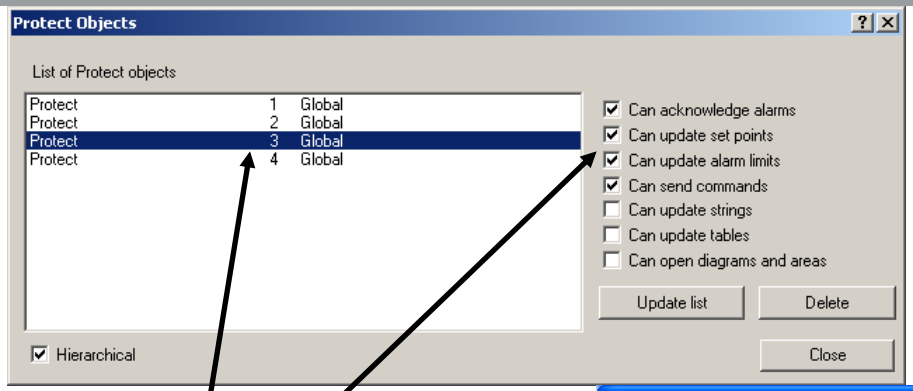


Protect Objects dialog box:
User group rights are defined here.
For each level select the rights to allocate.

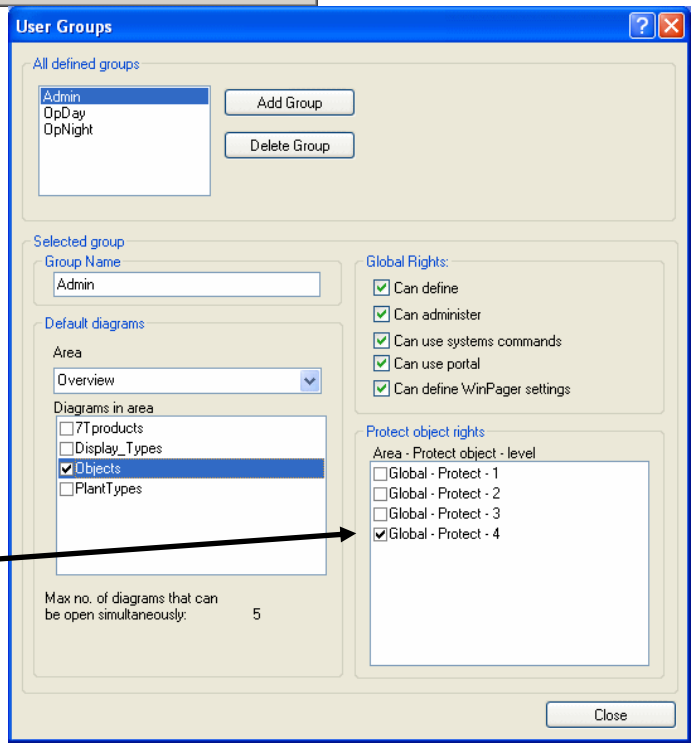

In **User Groups,** the appropriate security level is assigned to each user group by selecting the level under **Protect object rights**

User Administration enabled and Protect object used: How it works



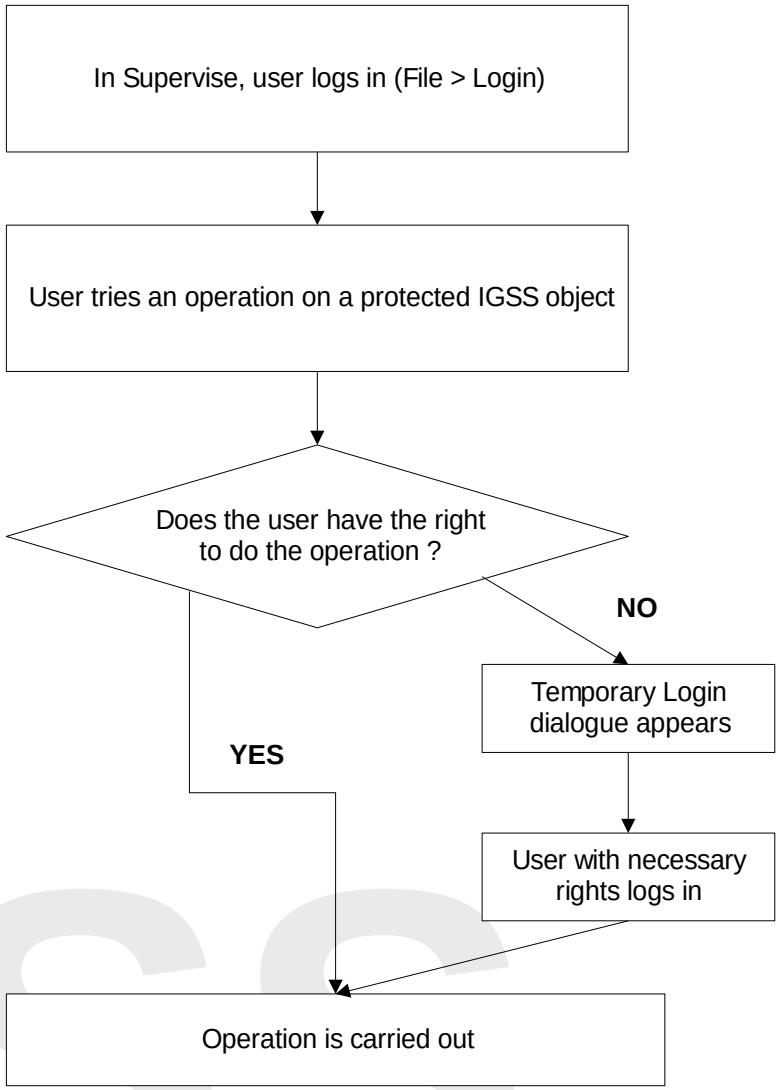

Try it yourself ...



Exercise: Create Users and User Privileges

This exercise requires loading the IGSS Demo configuration.
If you have IGSS Free50 installed, you must switch license file as follows:

1. Close all IGSS programs.
2. Go the [IGSS InstallPath]\Gss and rename the active license file Options.txt to Options_original.txt.
3. In the same folder, rename the file Options.DEMO to Options.txt. (When IGSS is online, it always uses the license file called Options.txt)
4. The Demo license is now active in your system. (If you need to go back to Free50, reverse the naming procedure described above.)
5. In System Configuration, open the **File** menu and choose **Open Demo Configuration**.