HYDROGENOLYSIS SYSTEM CONTROL DESCRIPTION

GENERAL OPERATION - the system is currently designed so that each control loop runs independently of the rest of the system. There is not (at this point in time) a sequence of operation for the system. There is not a startup nor a shutdown process.


Each control loop is set to run in automatic mode maintaining a certain, operator-proveded setpoint based on the parameters set for each, individual loop. Loops can also be run in manual mode which allows the operator to designate a specific output.

This system offers full manual control of all digital devices via the HMI (Human Machine Interface / screen).

A full range of alarms (Low Low, Low, High and High High) can be set for each analog input, along with a delay timer for each. Unnecessary alarms (which do not trigger partial or full shutdowns of the system) can also be disabled at the operator's discretion. Each alarm consists of two bits (one for the actual alarm condition and another used to trigger notifications or alerts). This enables alarm notifications to be silenced without the system forgetting that an alarm condition still exists.

A full set of data registers is incorporated into the program for a dedicated modbus interface. All data points are simplex (unidirectional) and include the complete scope of inputs and outputs available on the HMI.

MAIN SCREEN

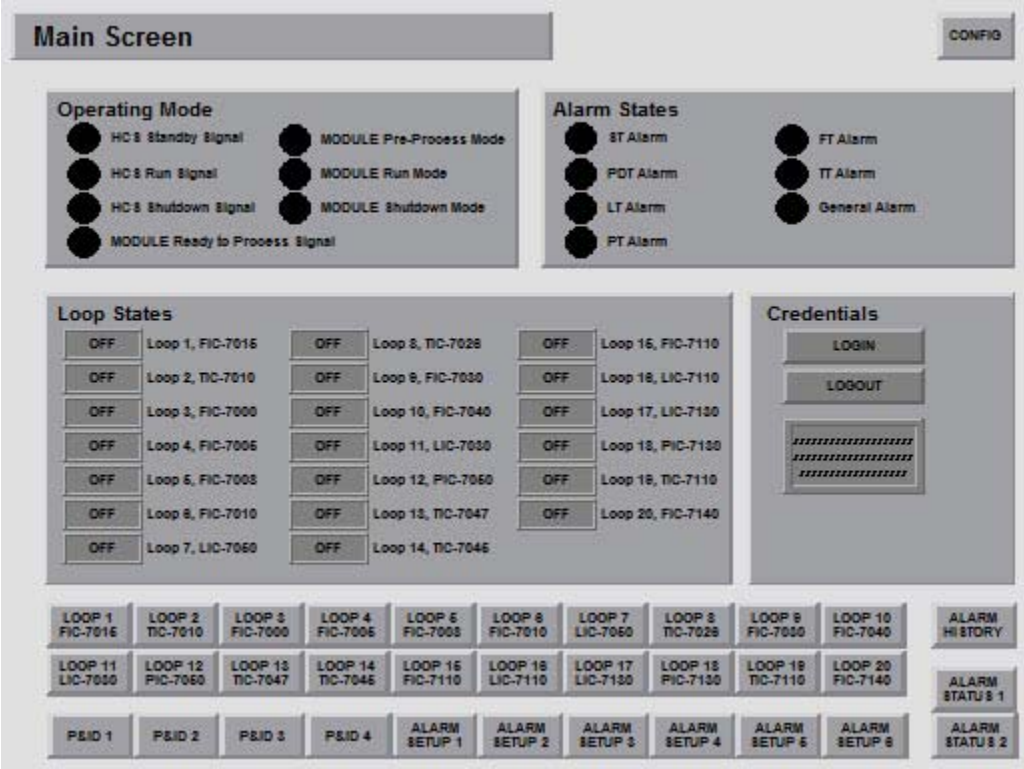

This screen is broken down into five sections, Operating Mode, Alarm States, Loop States, Credentials and Navigation (unlabeled, bottom of the screen).

Operating Mode displays the current state of the control bits between this system and DeltaV. Currently, these states are not logically tied to the actual operation of the individual loops (pending the incorporation of a sequence of operation).

Alarm States shows at a glance what types of alarm conditions exist throughout the system.

Loop States shows whether each of the 20 control loops are in MANUAL or AUTO control mode.

Credentials is the section where an operator can enter a login and password to access protected system configurations.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

CONFIG (Program Exit) - button at the top/right of the screen allows the operator to exit the HMI program and put the touchscreen into configuration mode (Note – this is not necessary for normal operation of the system.)

HCS Standby Signal (Status Indicator) – turns green when the HCS Standby Signal is absent, and red when the signal is present

HCS Run Signal (Status Indicator) – turns green when the HCS Run Signal is absent, and red when the signal is present

HCS Run Signal (Status Indicator) – turns green when the HCS Run Signal is absent, and red when the signal is present

HCS Shutdown Signal (Status Indicator) – turns green when the HCS Shutdown Signal is absent, and red when the signal is present

Module Ready to Process Signal (Status Indicator) – turns green when the Module Ready to Process Signal is absent, and red when the signal is present

Module Pre-Process Mode (Status Indicator) – turns green when the system is out of Pre-Process mode, and red when the system is in Pre-Process mode

Module Run Mode (Status Indicator) – turns green when the system is out of Run mode, and red when the system is in Run mode

Module Shutdown Mode (Status Indicator) – turns green when the system is out of Shutdown mode, and red when the system is in Shutdown mode

ST Alarm (Status Indicator) - turns green when no ST (Speed Transmitter) alarms are present, and red when there is at least one, active ST alarm

PDT Alarm (Status Indicator) - turns green when no PDT (Pressure Differential Transmitter) alarms are present, and red when there is at least one, active PDT alarm

LT Alarm (Status Indicator) - turns green when no LT (Level Transmitter) alarms are present, and red when there is at least one, active LT alarm

PT Alarm (Status Indicator) - turns green when no PT (Pressure Transmitter) alarms are present, and red when there is at least one, active PT alarm

FT Alarm (Status Indicator) - turns green when no FT (Flow Transmitter) alarms are present, and red when there is at least one, active FT alarm

TT Alarm (Status Indicator) - turns green when no TT (Temperature Transmitter) alarms are present, and red when there is at least one, active TT alarm

General Alarm (Status Indicator) - turns green when no alarms of any type are present, and red when there is at least one, active alarm of any type

LOOP 1, FIC-7015 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 2, TIC-7010 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 3, FIC-7000 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 4, FIC-7005 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 5, FIC-7008 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 6, FIC-7010 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 7, LIC-7050 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 8, TIC-7026 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 9, FIC-7030 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 10, FIC-7040 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 11, LIC-7030 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 12, PIC-7050 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 13, TIC-7047 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 14, TIC-7045 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 15, FIC-7110 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 16, LIC-7110 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 17, LIC-7130 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 18, PIC-7130 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 19, TIC-7110 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOOP 20, FIC-7140 (Mode Indicator) – Displays “MAN” when the loop is in Manual control mode, and “AUTO” when the loop is in automatic control mode

LOGIN (Control Activation Button) – Brings up a keyboard allowing the operator to enter a user name and password

LOGOUT (Control Activation Button) – ends the currently logged in user’s session

USER (Display) (unlabled, below logout button) – displays the user name of the currently logged in user

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

P&ID 1 (Navigation Button) – navigates to the first of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 2 (Navigation Button) – navigates to the second of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 3 (Navigation Button) – navigates to the third of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 4 (Navigation Button) – navigates to the fourth of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input


ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

P&ID 1 SCREEN

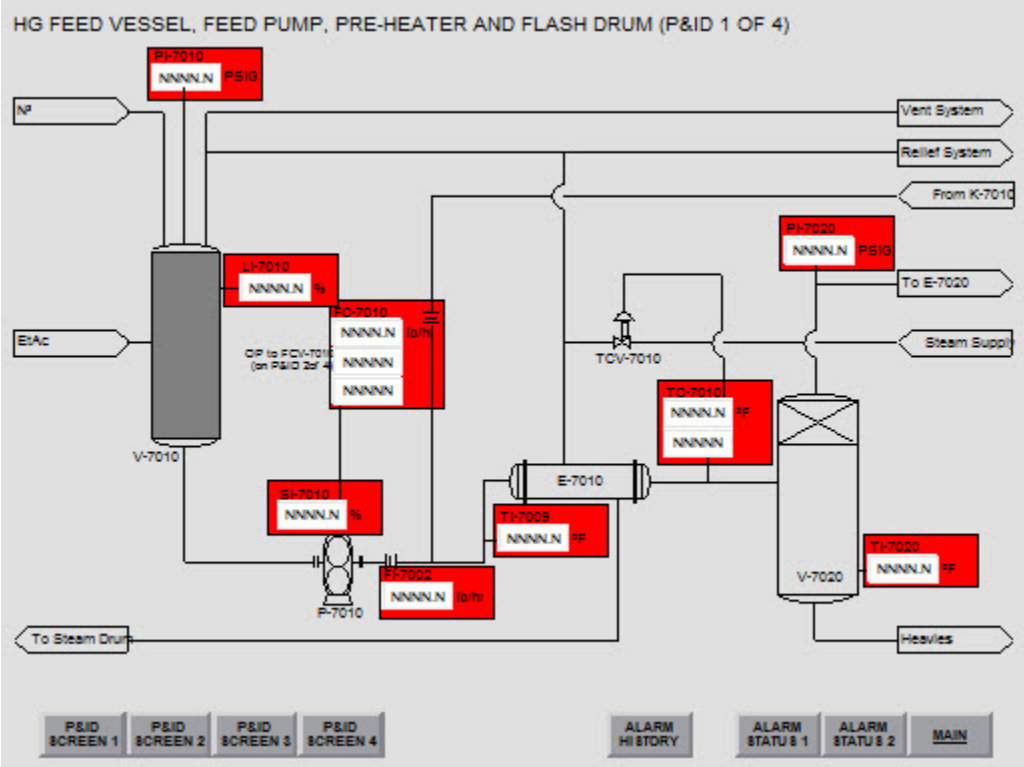

This screen is the first of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system.

The main part of this screen is the process overview. Descriptions of the various controls and indicators can be found below. Some controls (faceplates) are hidden and cannot be seen unless activated, at which time they appear above the screen shown above. For that reason, these controls are shown and explained seperately, below.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

PI-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

LI-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

SI-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


FI-7002 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7009 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


PI-7020 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7020 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FC-7010 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) values of the control loops driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplates (shown below) for these control loops. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

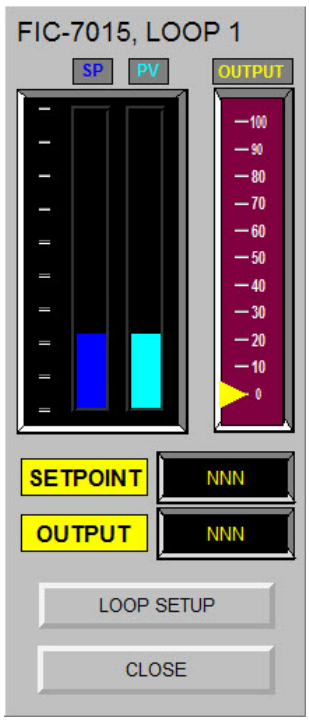


FIC-7015, LOOP 1 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

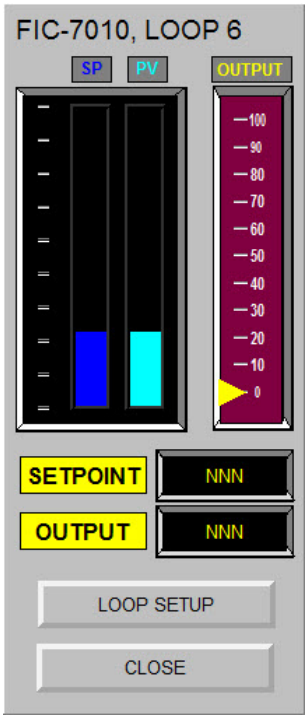

FIC-7010, LOOP 6 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.


TC-7010 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

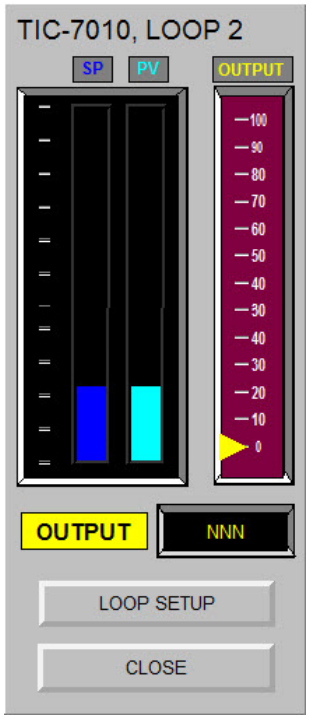

TIC-7010, LOOP 2 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

V-7010 (Device) – This representation is a dynamic graphic. It will fill with color proportionate to the reading of the level inside.

P-7010 (Device) – This representation is a dynamic graphic. The gears will turn red when the pump is running (even if the output is set to zero). Touching this device on the screen will spawn the faceplate (shown below) which allows manual control of this device.

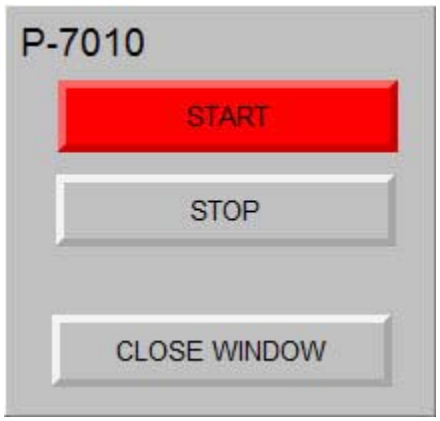

P-7010 (Faceplate) – This houses the manual controls for the device. Touching the START button will cause the device to run (at 0% output if this device is variable speed, and 100% output otherwise). Touching the STOP button will deactivate the device. Touching the CLOSE WINDOW button will cause this faceplate to disappear revealing the P&ID screen below.

P&ID 1 (Navigation Button) – navigates to the first of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 2 (Navigation Button) – navigates to the second of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 3 (Navigation Button) – navigates to the third of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 4 (Navigation Button) – navigates to the fourth of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system


ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

MAIN (Navigation Button) – navigates to the Main Screen

P&ID 2 SCREEN

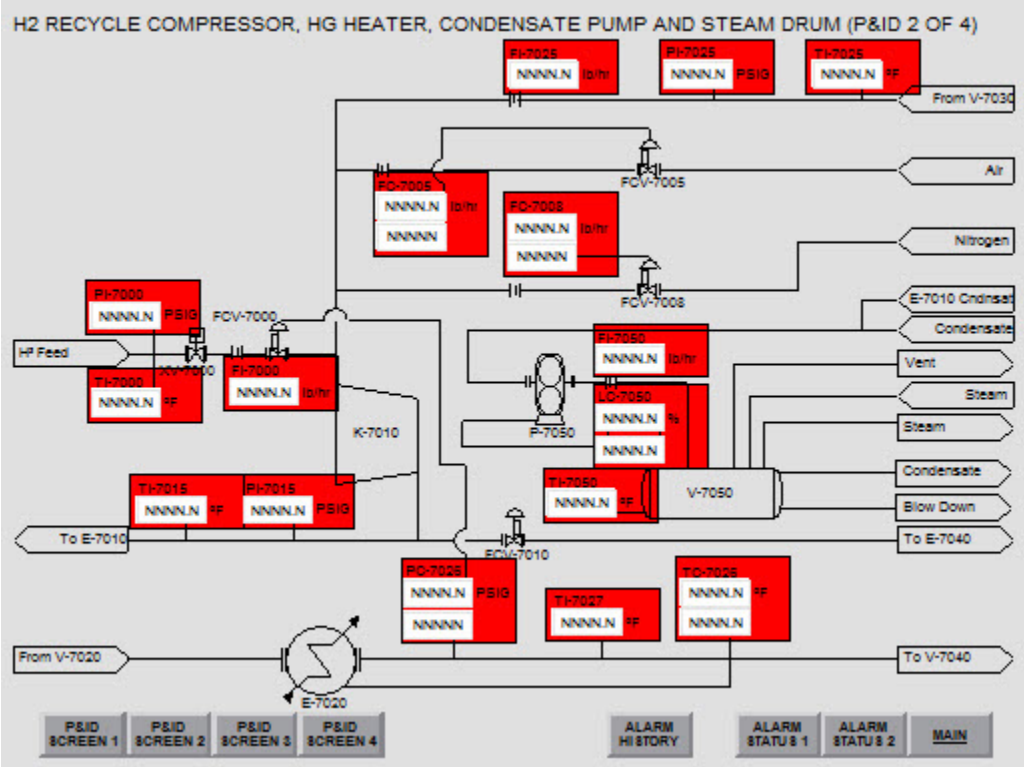

This screen is the second of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system.

The main part of this screen is the process overview. Descriptions of the various controls and indicators can be found below. Some controls (faceplates) are hidden and cannot be seen unless activated, at which time they appear above the screen shown above. For that reason, these controls are shown and explained seperately, below.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

PI-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FI-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7015 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

PI-7015 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FI-7025 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

PI-7025 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7025 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


FI-7050 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7050 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the

indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7027 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


FC-7005 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

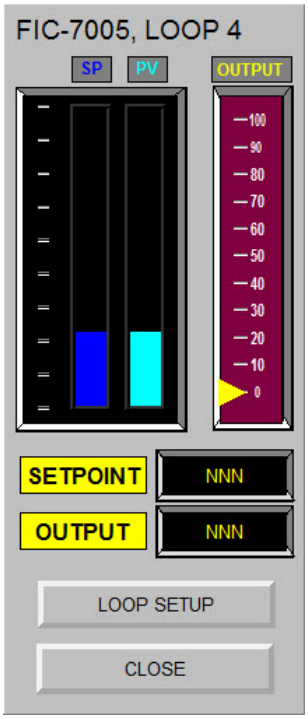

FIC-7005, LOOP 4 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.


FC-7008 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for

this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

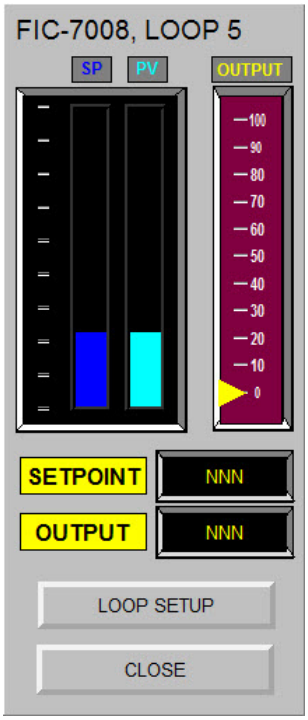


FIC-7008, LOOP 5 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

LC-7050 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

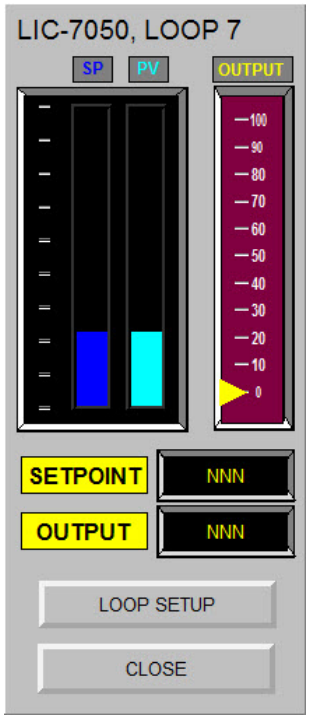


LIC-7050, LOOP 7 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

PC-7026 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

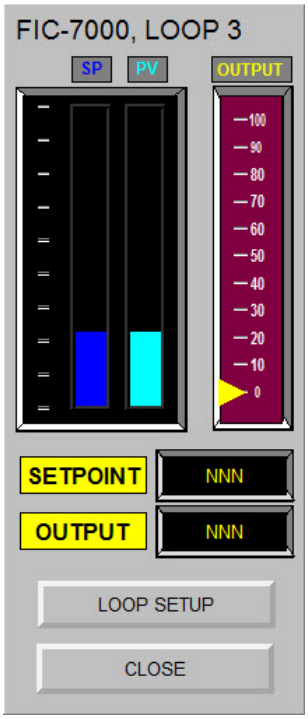


FIC-7000, LOOP 3 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

TC-7026 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

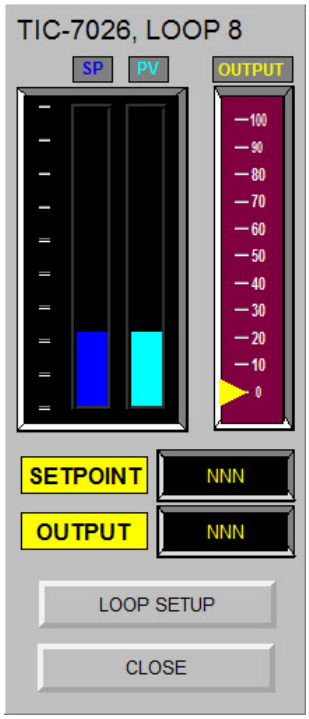

TIC-7026, LOOP 8 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

XV-7000 (Device) – This representation is a dynamic graphic. The valve will turn red when it is energized, and green otherwise. Touching this device on the screen will spawn the faceplate (shown below) which allows manual control of this device.

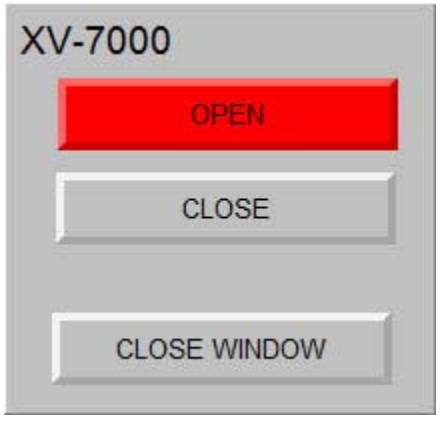

XV-7000 (Faceplate) – This houses the manual controls for the device. Touching the OPEN button will cause the device to energize open. Touching the CLOSE button will

de-energize the valve. Touching the CLOSE WINDOW button will cause this faceplate to disappear revealing the P&ID screen below.

P-7050 (Device) – This representation is a dynamic graphic. The gears will turn red when the pump is running (even if the output is set to zero). Touching this device on the screen will spawn the faceplate (shown below) which allows manual control of this device.



P-7050 (Faceplate) – This houses the manual controls for the device. Touching the START button will cause the device to run (at 0% output if this device is variable speed, and 100% output otherwise). Touching the STOP button will deactivate the device. Touching the CLOSE WINDOW button will cause this faceplate to disappear revealing the P&ID screen below.

P&ID 1 (Navigation Button) – navigates to the first of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 2 (Navigation Button) – navigates to the second of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 3 (Navigation Button) – navigates to the third of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 4 (Navigation Button) – navigates to the fourth of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system


ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

MAIN (Navigation Button) – navigates to the Main Screen

P&ID 3 SCREEN

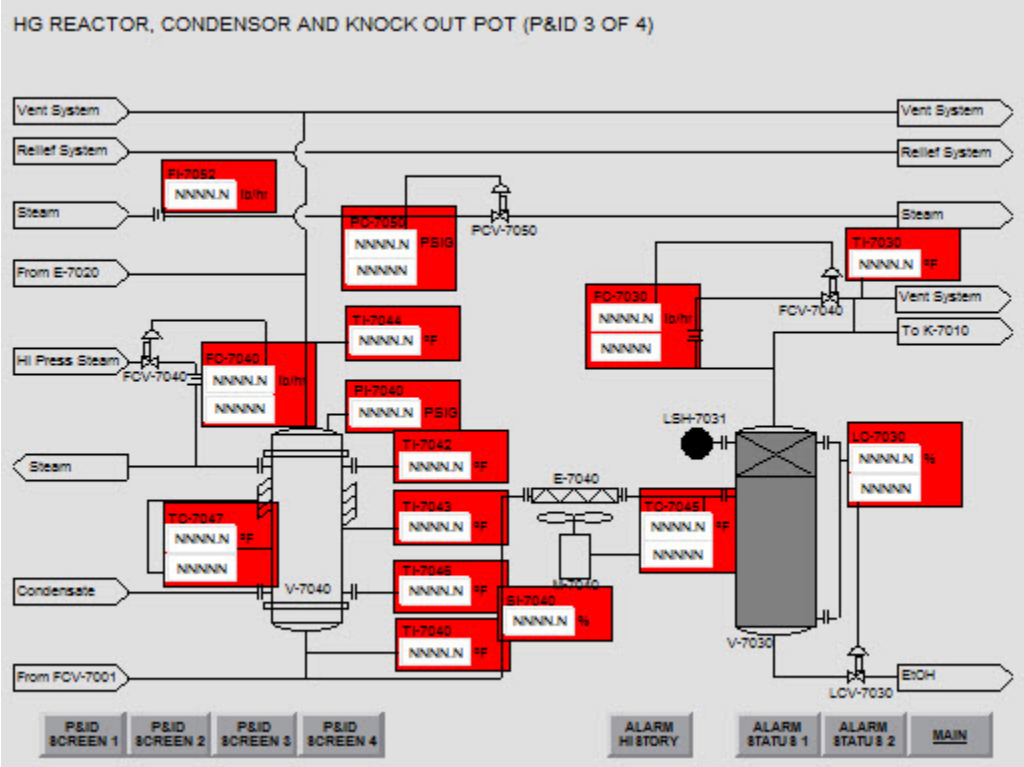

This screen is the third of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system.

The main part of this screen is the process overview. Descriptions of the various controls and indicators can be found below. Some controls (faceplates) are hidden and cannot be seen unless activated, at which time they appear above the screen shown above. For that reason, these controls are shown and explained seperately, below.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

FI-7052 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7044 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FI-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

PI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7042 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7043 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7046 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


TI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

SI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7030 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the


indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FC-7040 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

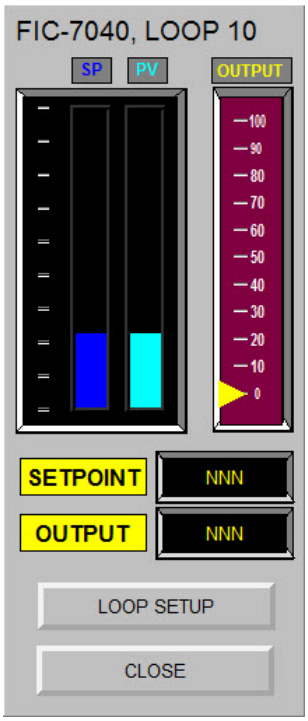


FIC-7040, LOOP 10 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

TC-7047 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

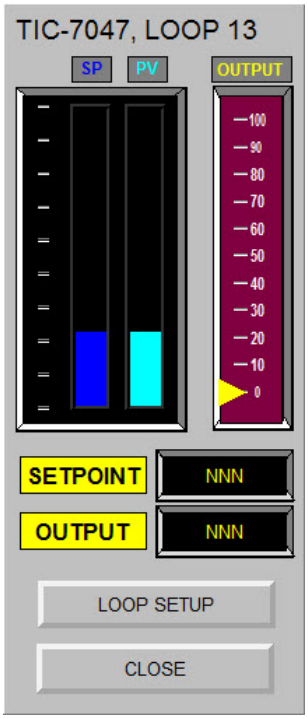


TIC-7047, LOOP 13 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

PC-7050 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

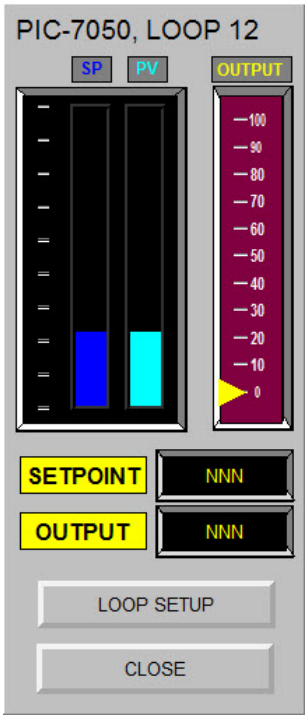


PIC-7050, LOOP 12 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

FC-7030 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

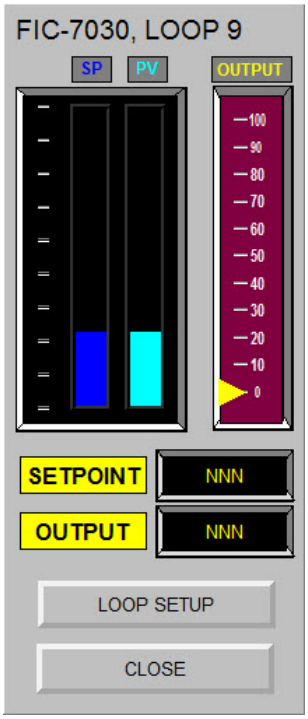


FIC-7030, LOOP 9 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

TC-7045 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

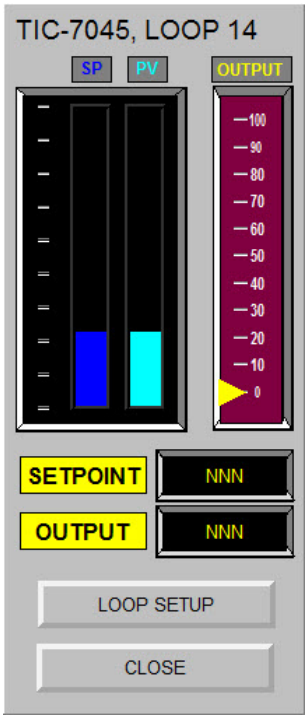

TIC-7045, LOOP 14 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

LC-7030 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

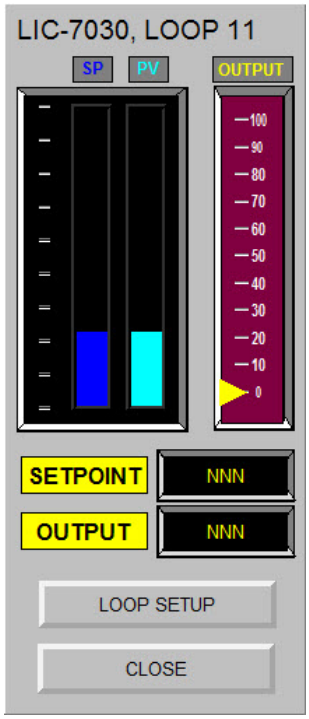

LIC-7030, LOOP 11 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

M-7040 (Device) – This representation is a dynamic graphic. The motor will turn red when it is energized, and green otherwise. Touching this device on the screen will spawn the faceplate (shown below) which allows manual control of this device.



E-7040 (Faceplate) – This houses the manual controls for the device. Touching the START button will cause the device to run (at 0% output if this device is variable speed, and 100% output otherwise). Touching the STOP button will deactivate the device.

Touching the CLOSE WINDOW button will cause this faceplate to disappear revealing the P&ID screen below.

LSH-7030 (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

P&ID 1 (Navigation Button) – navigates to the first of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 2 (Navigation Button) – navigates to the second of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 3 (Navigation Button) – navigates to the third of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 4 (Navigation Button) – navigates to the fourth of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system


ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

MAIN (Navigation Button) – navigates to the Main Screen

P&ID 4 SCREEN

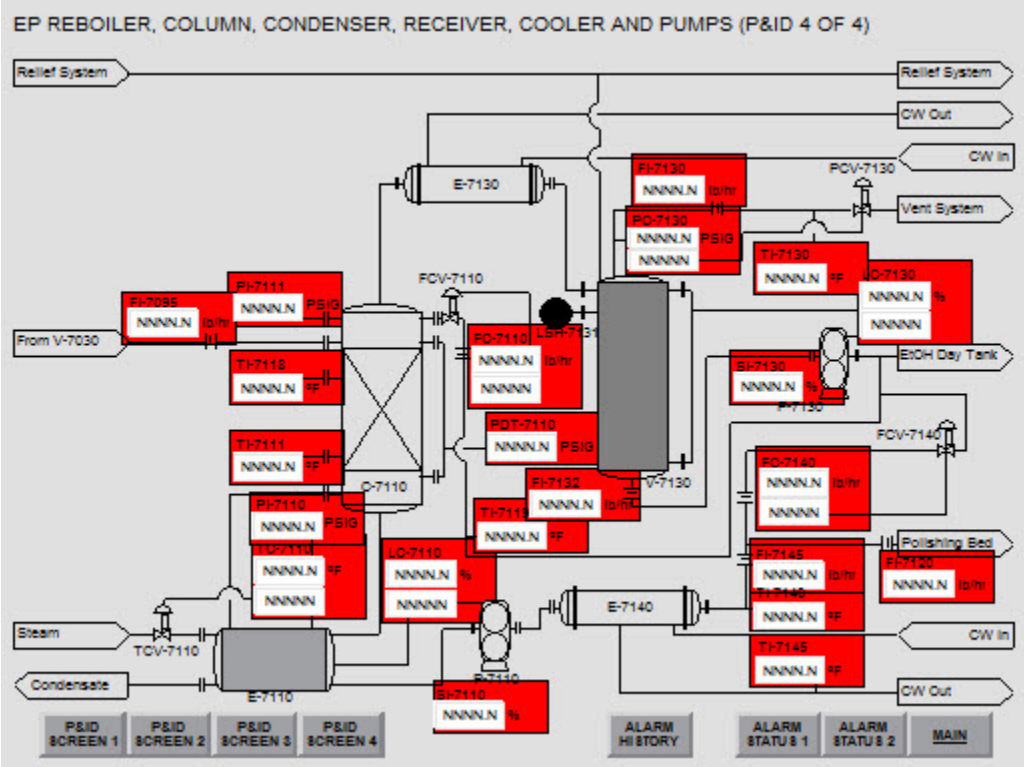

This screen is the fourth of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system.

The main part of this screen is the process overview. Descriptions of the various controls and indicators can be found below. Some controls (faceplates) are hidden and cannot be seen unless activated, at which time they appear above the screen shown above. For that reason, these controls are shown and explained seperately, below.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

FI-7095 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

PI-7111 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7118 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7111 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

PI-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

PDT-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FI-7132 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7119 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

SI-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

FI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the

indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

SI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


FI-7145 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7140 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TI-7145 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.


FI-7120 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC. Touching this indicator on the screen will navigate to the Alarm Setup screen which contains the alarm setpoints for this instrument. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

TC-7110 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

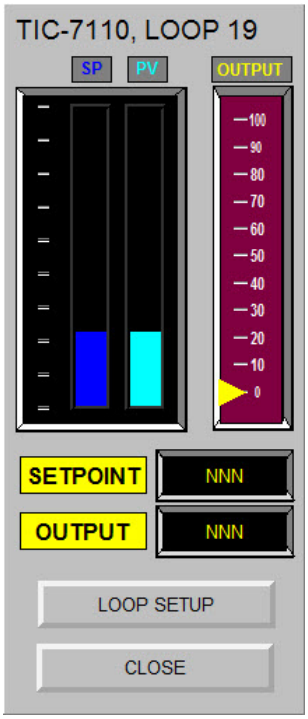


TIC-7110, LOOP 19 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

LC-7110 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

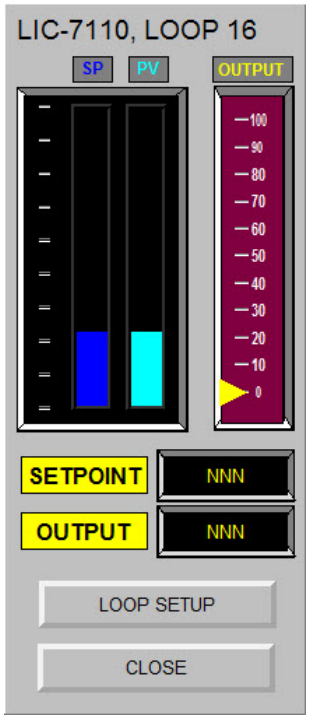


LIC-7110, LOOP 16 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

FC-7110 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

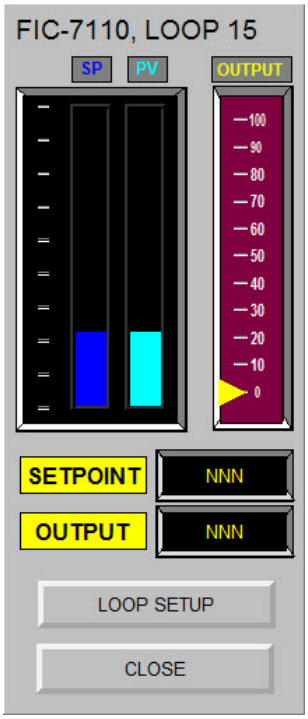


FIC-7110, LOOP 15 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

PC-7130 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

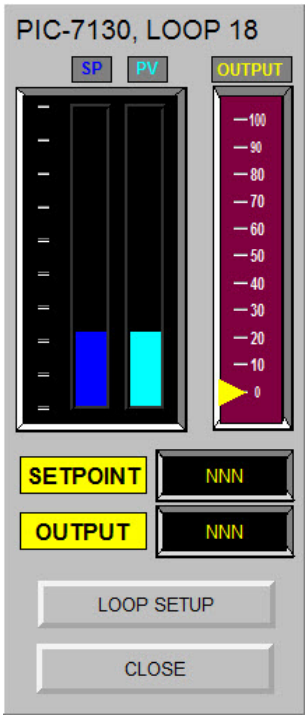


PIC-7130, LOOP 18 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

LC-7130 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

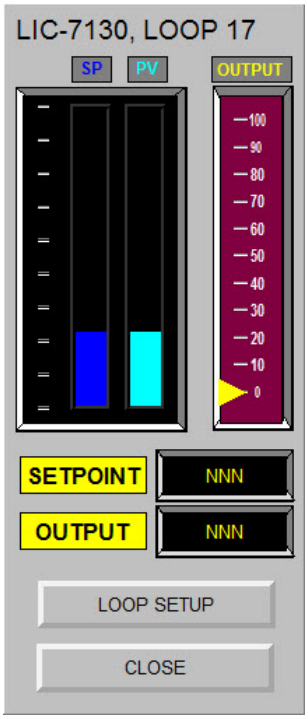

LIC-7130, LOOP 17 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

FC-7140 (Display) – This displays the current, scaled Process Variable (PV) value and Output (OP) value of the control loop driven by this instrument as interpreted by the PLC. Touching this indicator on the screen will spawn the faceplate (shown below) for this control loop. The area around the indicator will turn red (as shown above) anytime an alarm condition (LL, L, H, HH) exists.

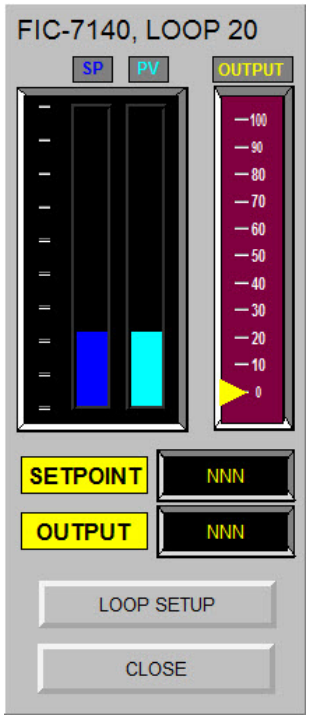

FIC-7140, LOOP 20 (Faceplate) – This displays the current, scaled Setpoint (SP) value, Process Variable (PV) value and Output (OP) value of the control loop. All three are shown by means of graduated vertical scales, while Setpoint and Output are also shown numerically. Touching the LOOP SETUP button will navigate to the setup screen for this loop where tuning parameters can be input. Touching the CLOSE button will cause this faceplate to disappear revealing the P&ID screen below.

P-7110 (Device) – This representation is a dynamic graphic. The gears will turn red when the pump is running (even if the output is set to zero). Touching this device on the screen will spawn the faceplate (shown below) which allows manual control of this device.



P-7110 (Faceplate) – This houses the manual controls for the device. Touching the START button will cause the device to run (at 0% output if this device is variable speed,

and 100% output otherwise). Touching the STOP button will deactivate the device. Touching the CLOSE WINDOW button will cause this faceplate to disappear revealing the P&ID screen below.

P-7130 (Device) – This representation is a dynamic graphic. The gears will turn red when the pump is running (even if the output is set to zero). Touching this device on the screen will spawn the faceplate (shown below) which allows manual control of this device.



P-7130 (Faceplate) – This houses the manual controls for the device. Touching the START button will cause the device to run (at 0% output if this device is variable speed, and 100% output otherwise). Touching the STOP button will deactivate the device. Touching the CLOSE WINDOW button will cause this faceplate to disappear revealing the P&ID screen below.

E-7110 (Device) – This representation is a dynamic graphic. It will fill with color proportionate to the reading of the level inside.

V-7130 (Device) – This representation is a dynamic graphic. It will fill with color proportionate to the reading of the level inside.

LSH-7131 (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

P&ID 1 (Navigation Button) – navigates to the first of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 2 (Navigation Button) – navigates to the second of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 3 (Navigation Button) – navigates to the third of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system

P&ID 4 (Navigation Button) – navigates to the fourth of four process overview screens which contain a snapshot of all instrumentation, loops and alarm conditions for the system


ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 1 / FIC-7015 CONTROL SCREEN

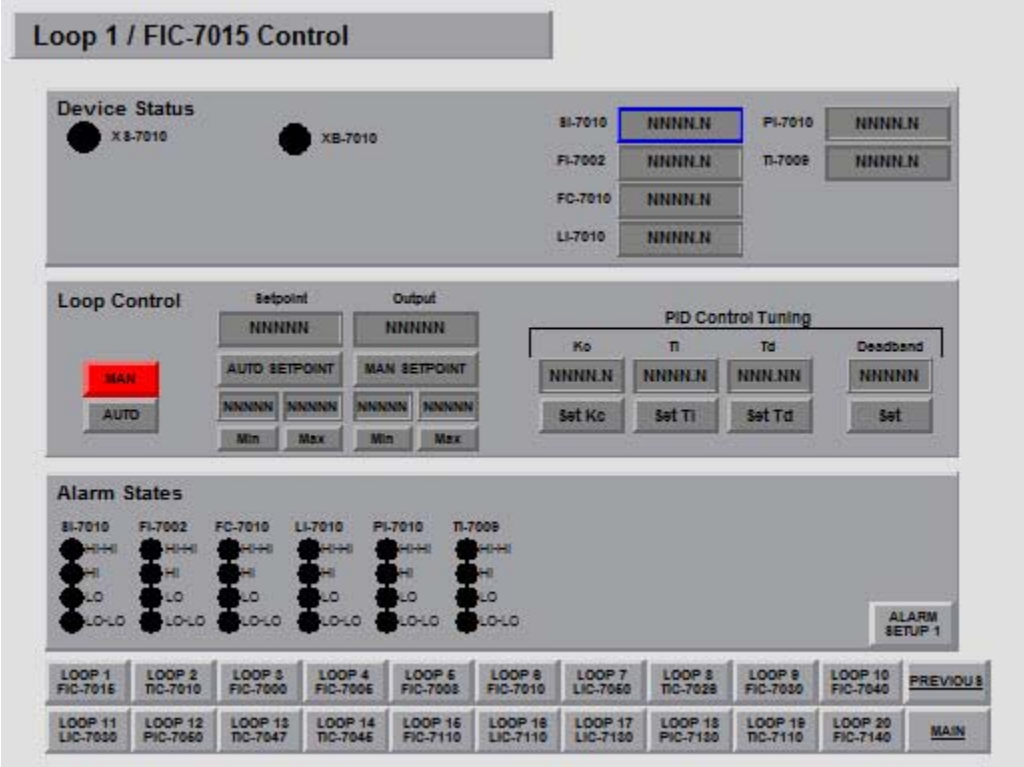

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7010 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7010 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

SI-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7002 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

LI-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7009 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

SI-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7002 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LI-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7009 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 2 / TIC-7010 CONTROL SCREEN

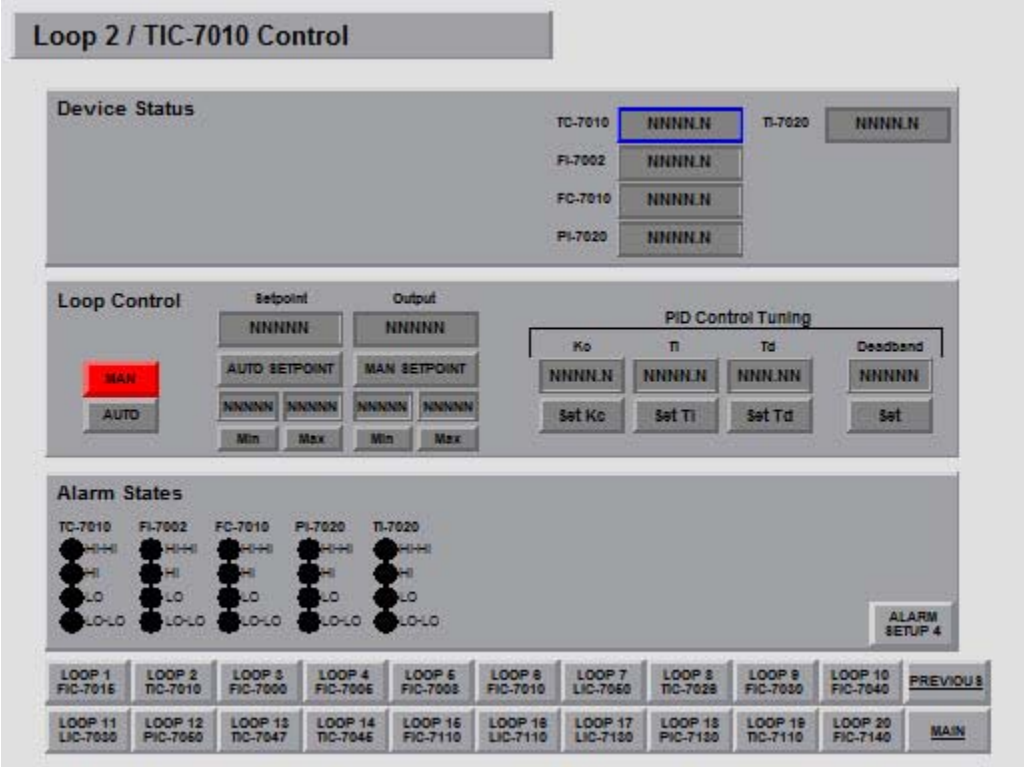

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

TC-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7002 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7020 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7020 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

TC-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7002 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7020 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7020 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 3 / FIC-7000 CONTROL SCREEN

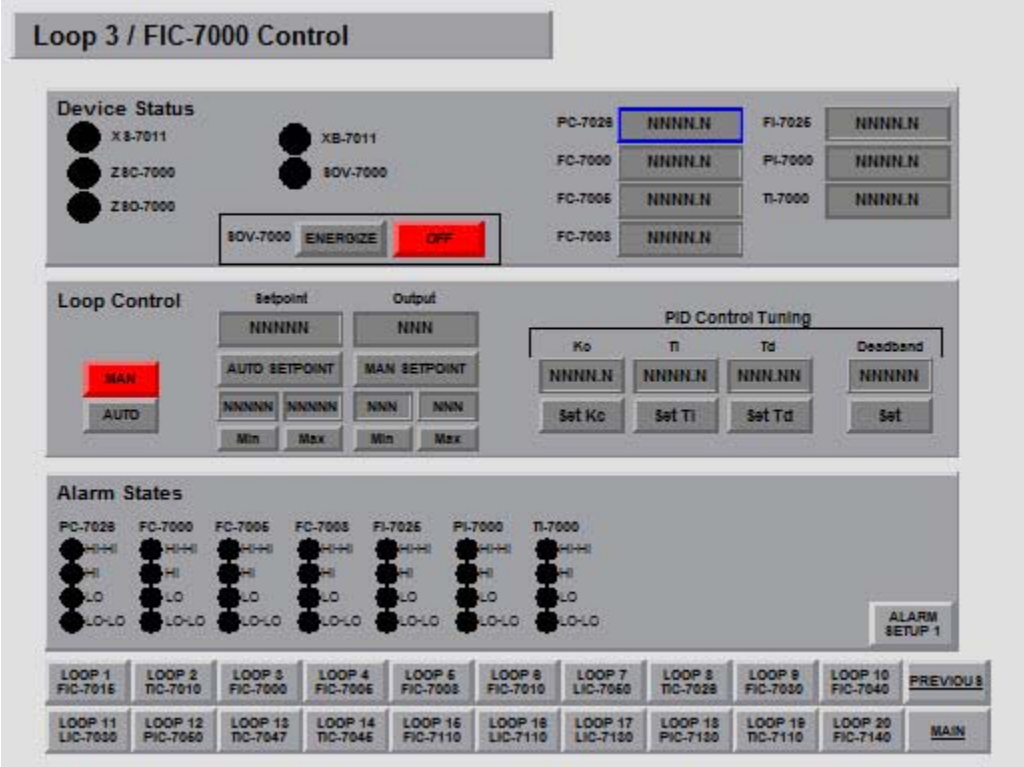

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7011 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

ZSC-7000 (Status Indicator) – turns green when the switch is in the OPEN position, and red when the switch is in the CLOSED position

ZSO-7000 (Status Indicator) – turns green when the switch is in the OPEN position, and red when the switch is in the CLOSED position

XB-7011 (Status Indicator) – turns green when the device is energized, and red when the device is de-energized

SOV-7000 (Status Indicator) – turns red when the device is energized, and grey when the device is de-energized

SOV-7000 ENERGIZE (Pushbutton) – causes the device to energize open. The button turns red when the device is energized, and grey when the device is de-energized.

SOV-7000 OFF (Pushbutton) – causes the device to de-energize closed. The button turns red when the device is de-energized, and grey when the device is energized.

PC-7028 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7006 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7008 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7026 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

PC-7028 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7000 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7006 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7008 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7000 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7000 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 4 / FIC-7005 CONTROL SCREEN

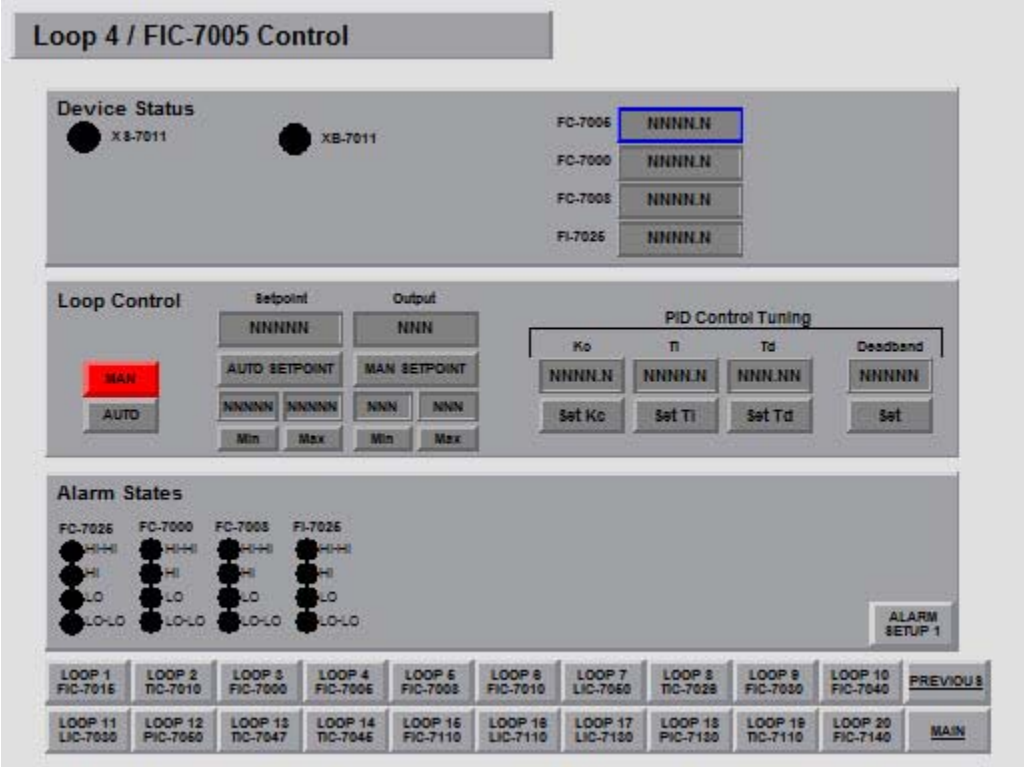

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7011 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7011 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

FC-7006 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7008 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7026 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7000 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7008 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 5 / FIC-7008 CONTROL SCREEN

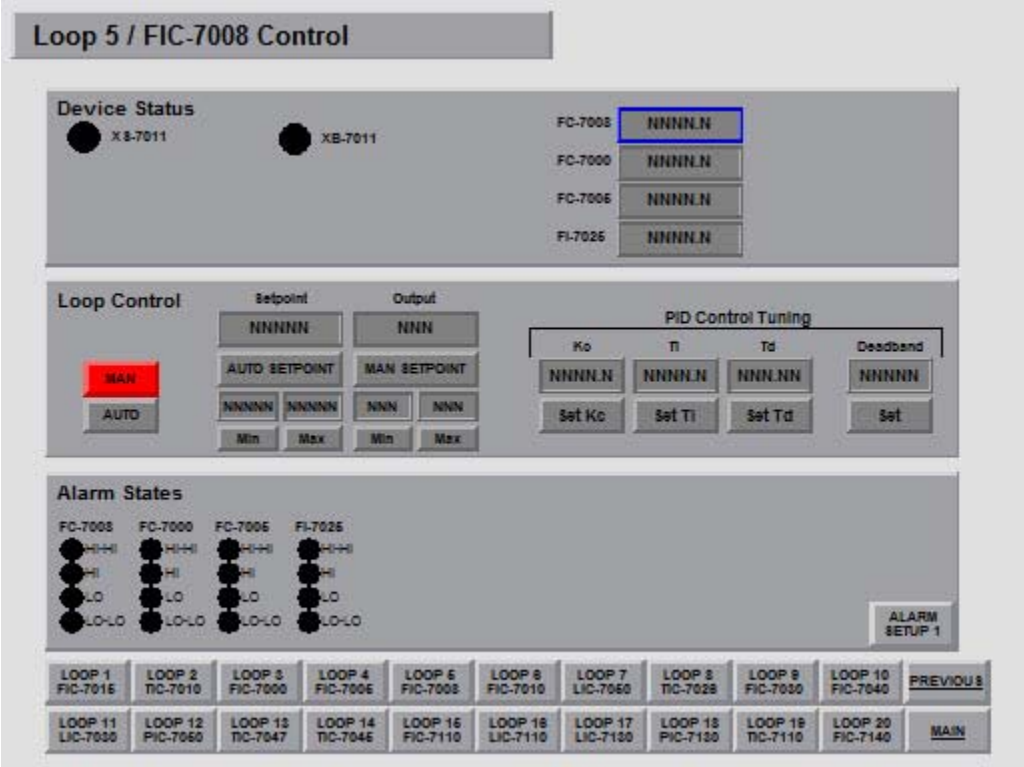

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7011 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7011 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

FC-7008 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7006 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7026 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7008 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7000 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7006 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 6 / FIC-7010 CONTROL SCREEN

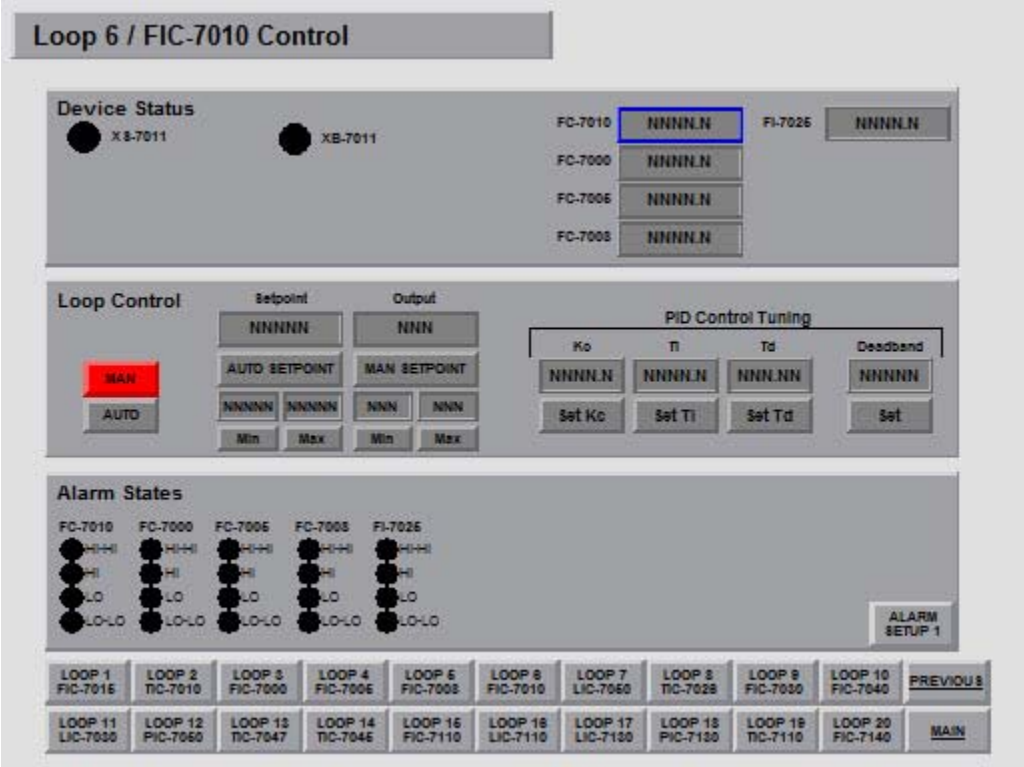

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7011 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7011 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

FC-7010 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7000 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7006 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FC-7008 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7026 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7010 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7000 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7006 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FC-7008 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 7 / LIC-7050 CONTROL SCREEN

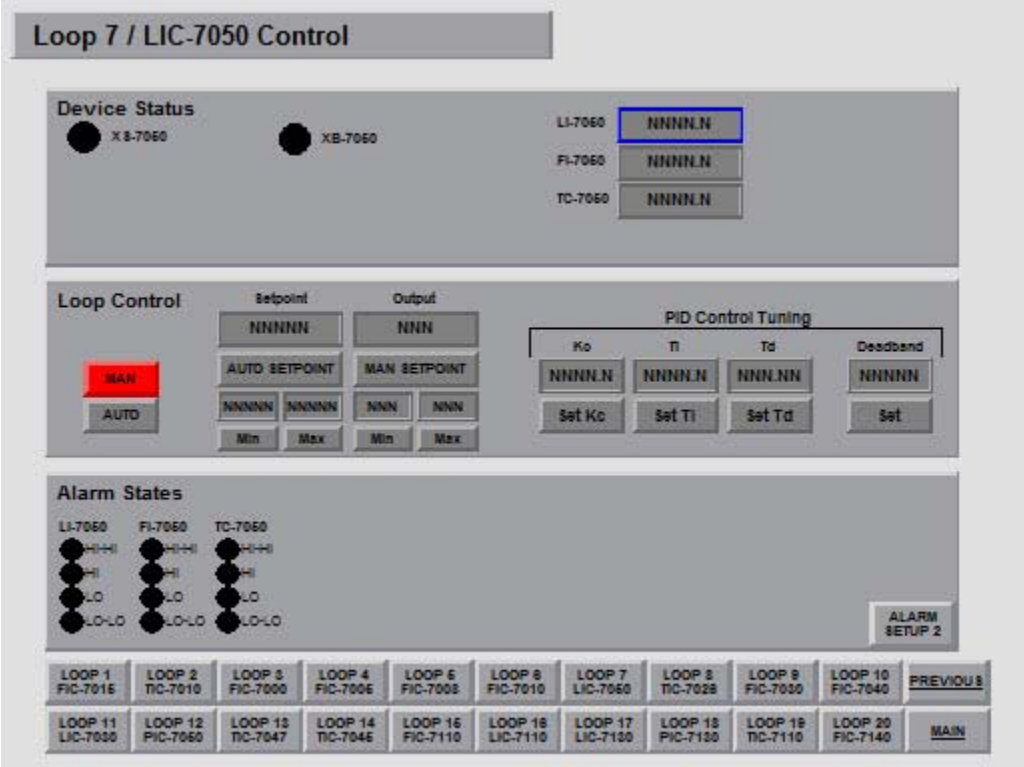

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7050 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7050 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

LI-7050 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7050 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TC-7050 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

LI-7050 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7050 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TC-7050 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 8 / TIC-7026 CONTROL SCREEN

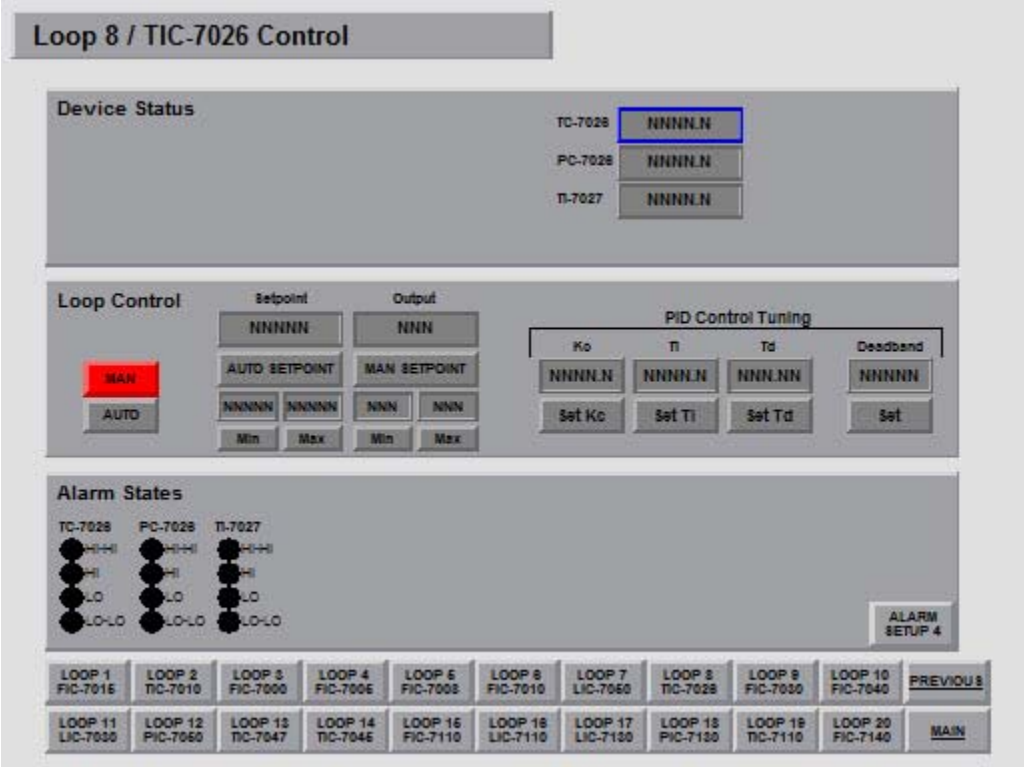

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

TC-7026 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PC-7026 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7027 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

TC-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PC-7026 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7027 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 9 / FIC-7030 CONTROL SCREEN

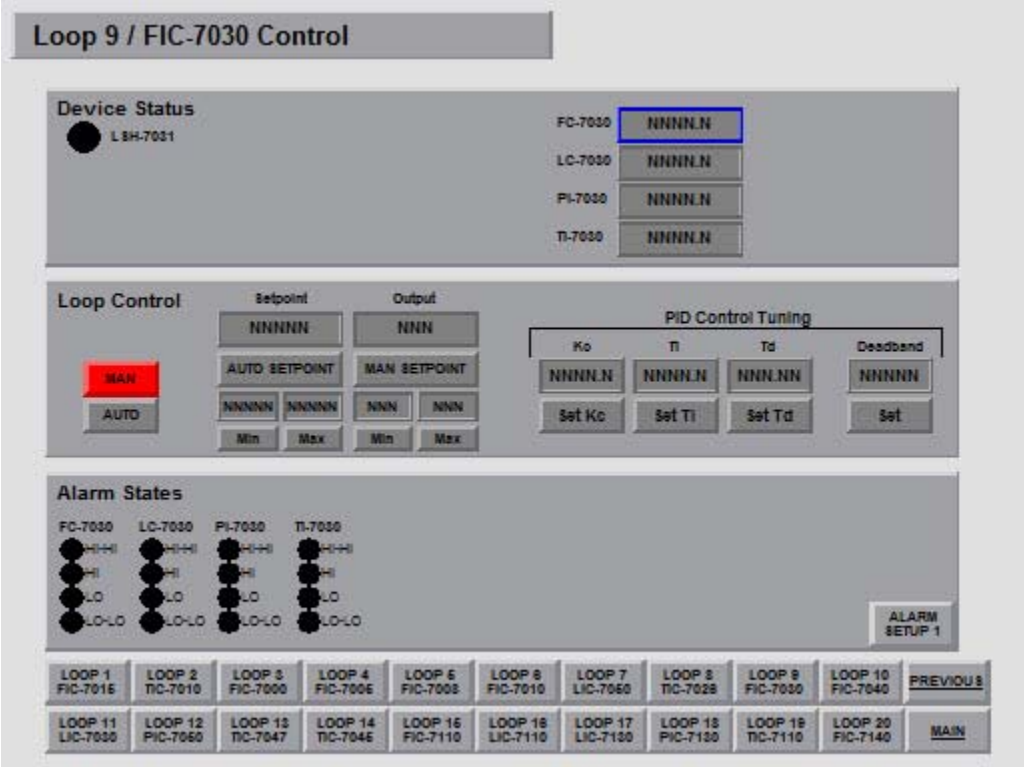

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

LSH-7031 (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

FC-7030 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

LC-7030 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7030 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7030 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7030 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LC-7030 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7030 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7030 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 10 / FIC-7040 CONTROL SCREEN

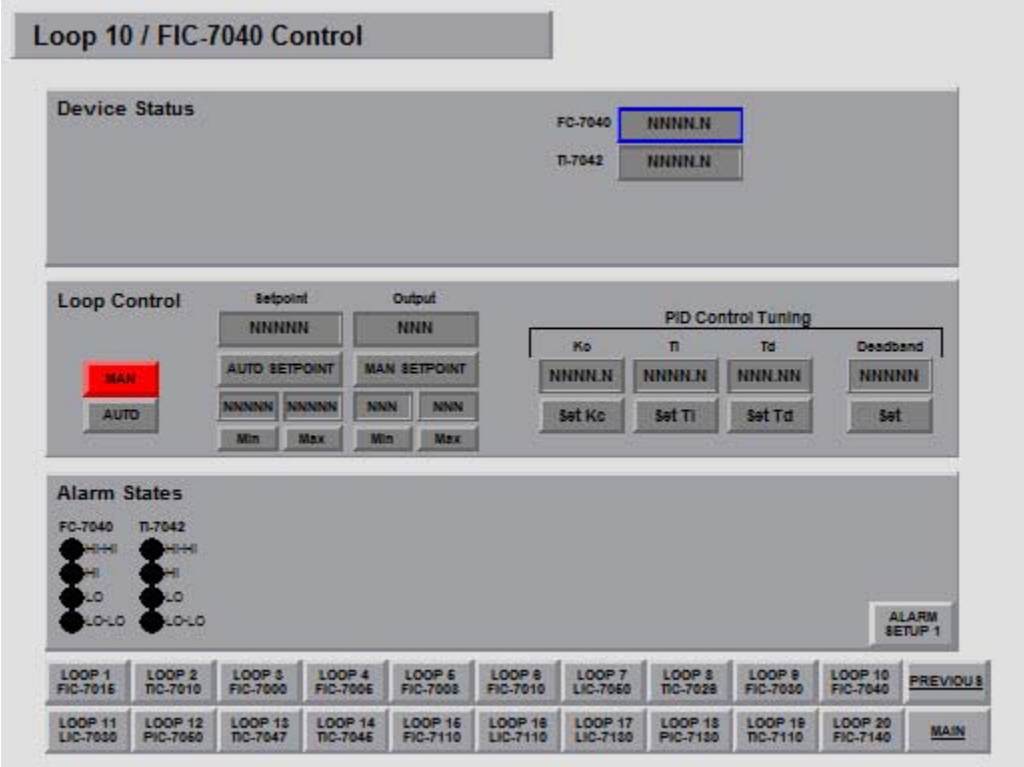

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

FC-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7042 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7040 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7042 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 11 / LIC-7030 CONTROL SCREEN

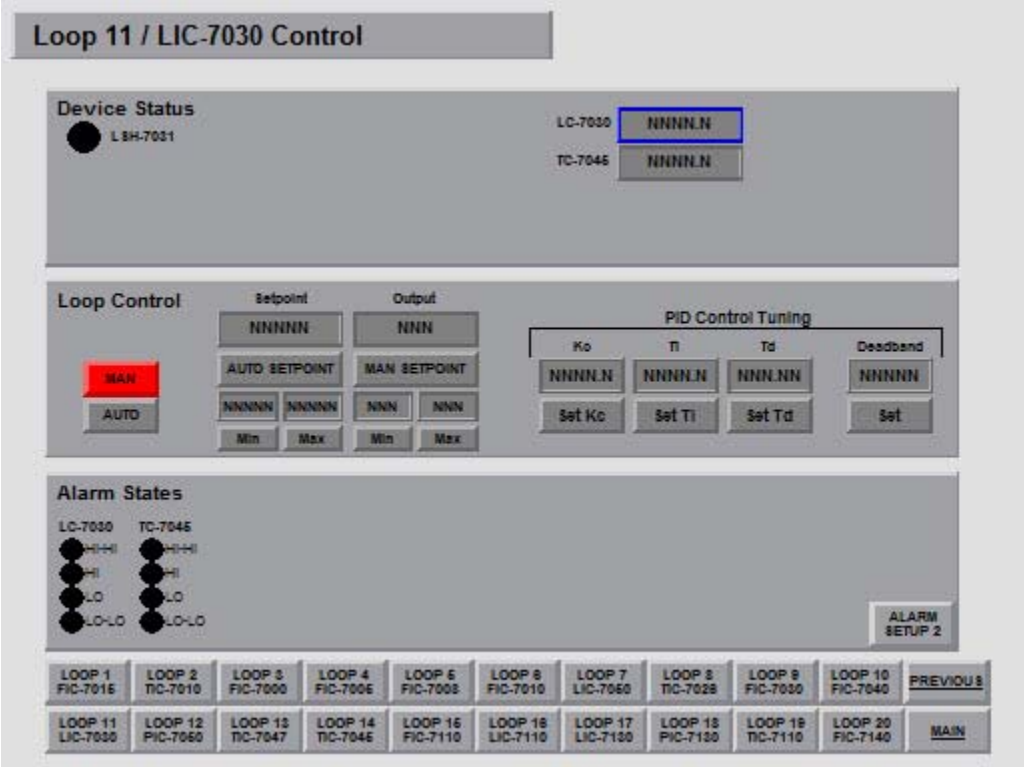

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

LSH-7031 (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

LC-7030 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TC-7046 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

LC-7030 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TC-7046 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 12 / PIC-7050 CONTROL SCREEN

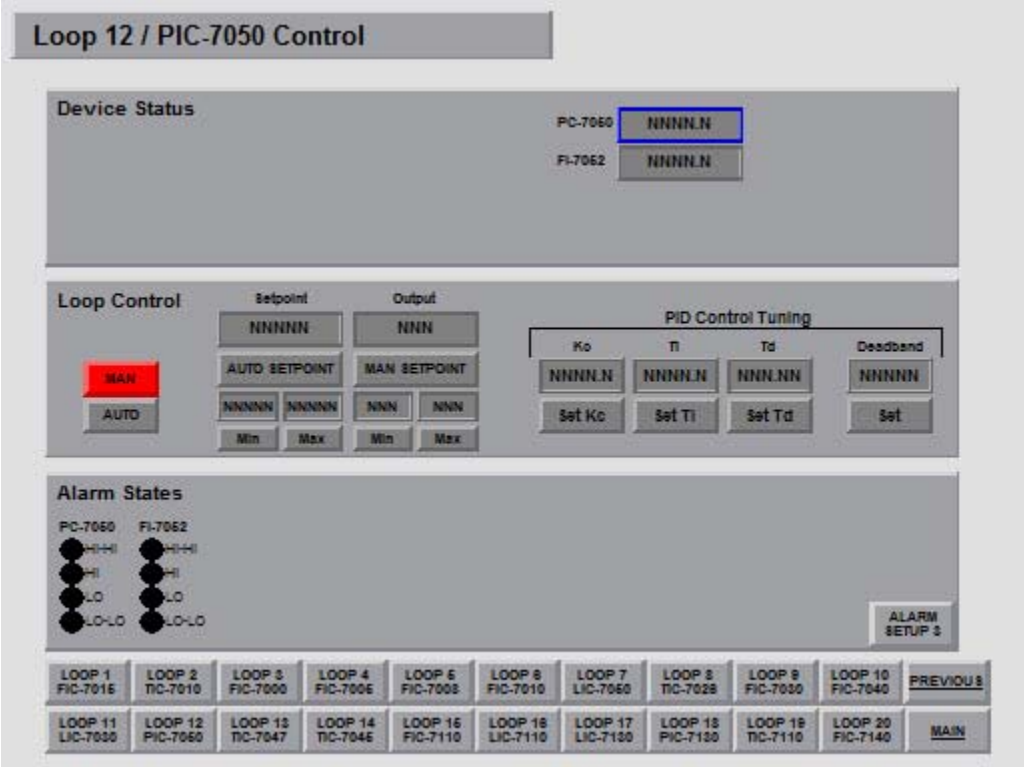

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

PC-7050 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7052 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7030 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PC-7050 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7052 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 13 / TIC-7047 CONTROL SCREEN

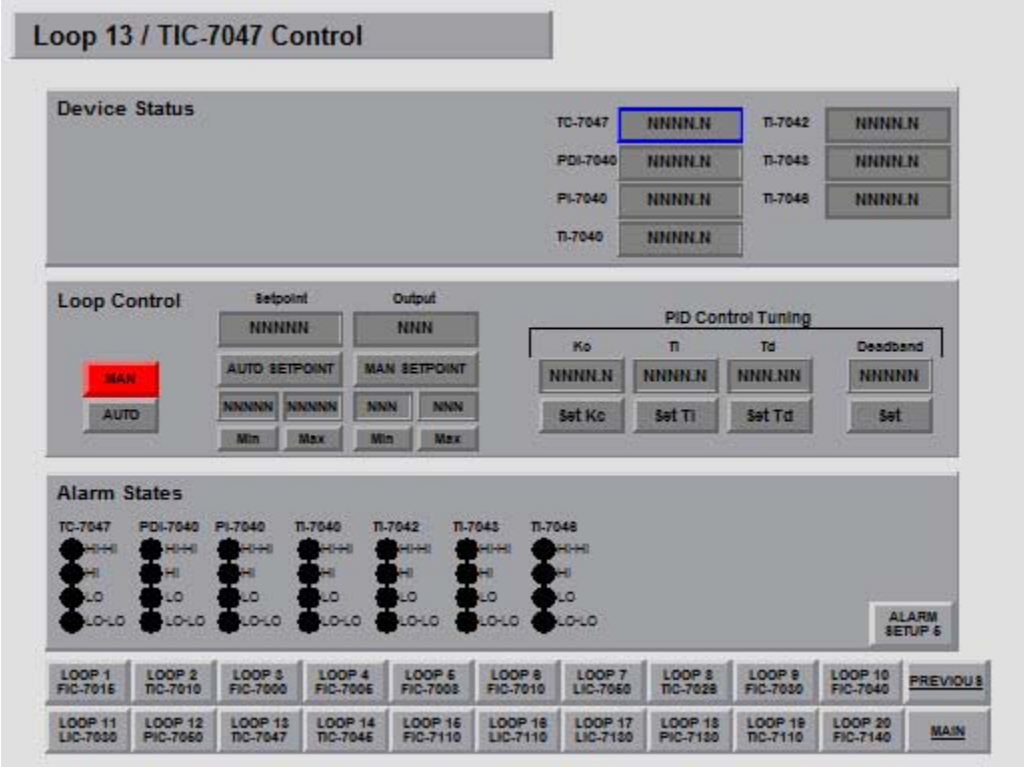

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

TC-7047 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PDI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7042 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7043 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7048 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

TC-7047 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PDI-7040 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7040 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7040 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7042 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7043 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7048 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 14 / TIC-7045 CONTROL SCREEN

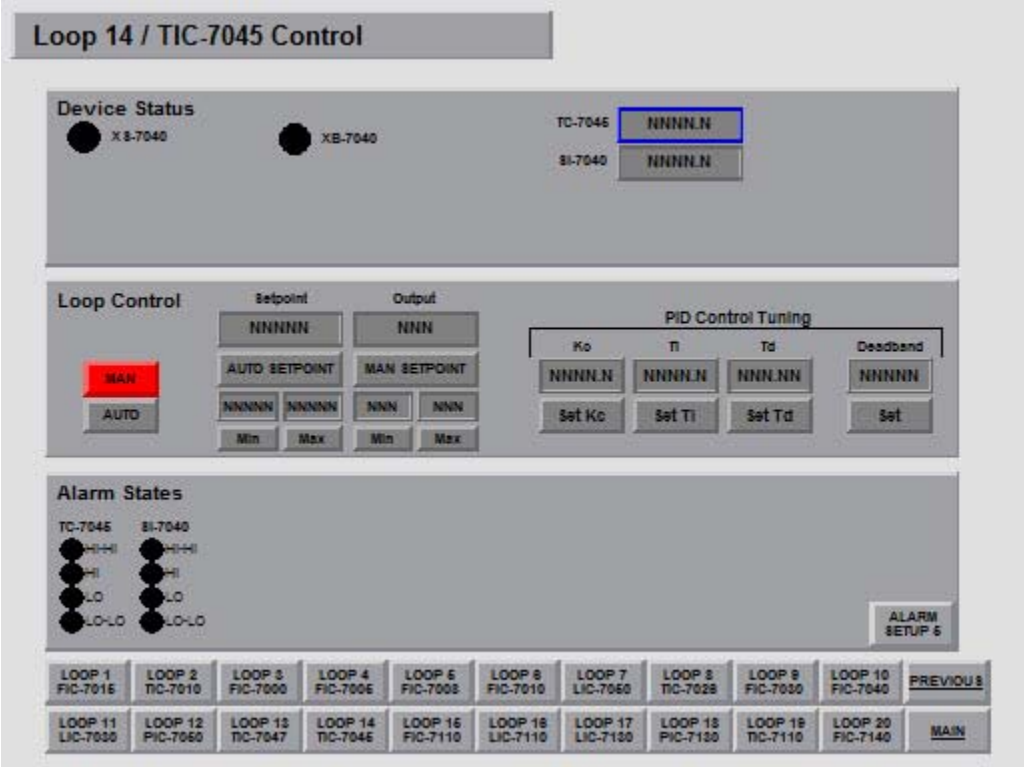

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7040 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7040 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

TC-7045 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

SI-7040 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

TC-7045 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

SI-7040 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 15 / FIC-7110 CONTROL SCREEN

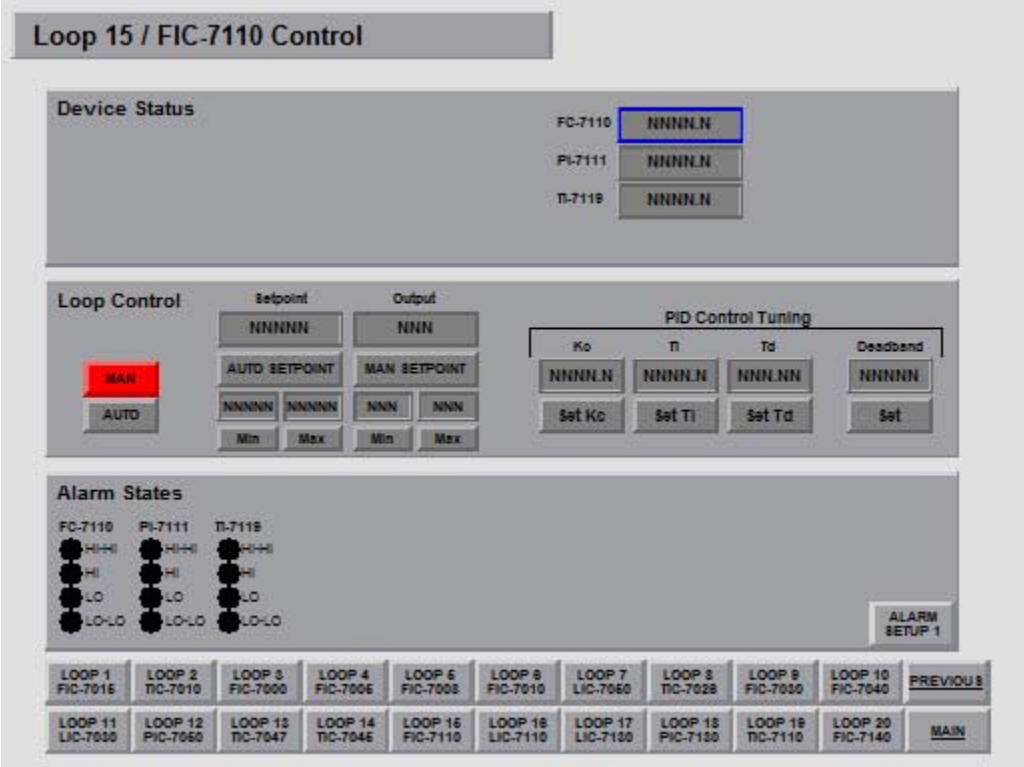

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

FC-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7111 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7119 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7111 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7119 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 16 / LIC-7110 CONTROL SCREEN

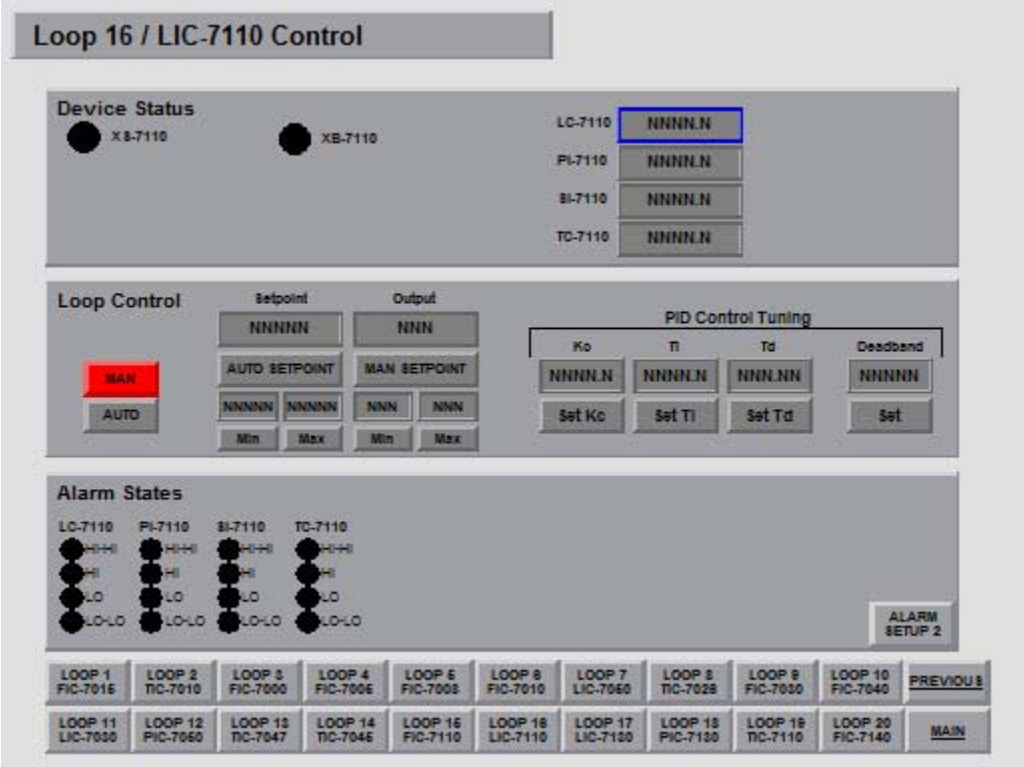

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7110 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

XB-7110 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

LC-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

SI-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TC-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

LC-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

SI-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TC-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 17 / LIC-7130 CONTROL SCREEN

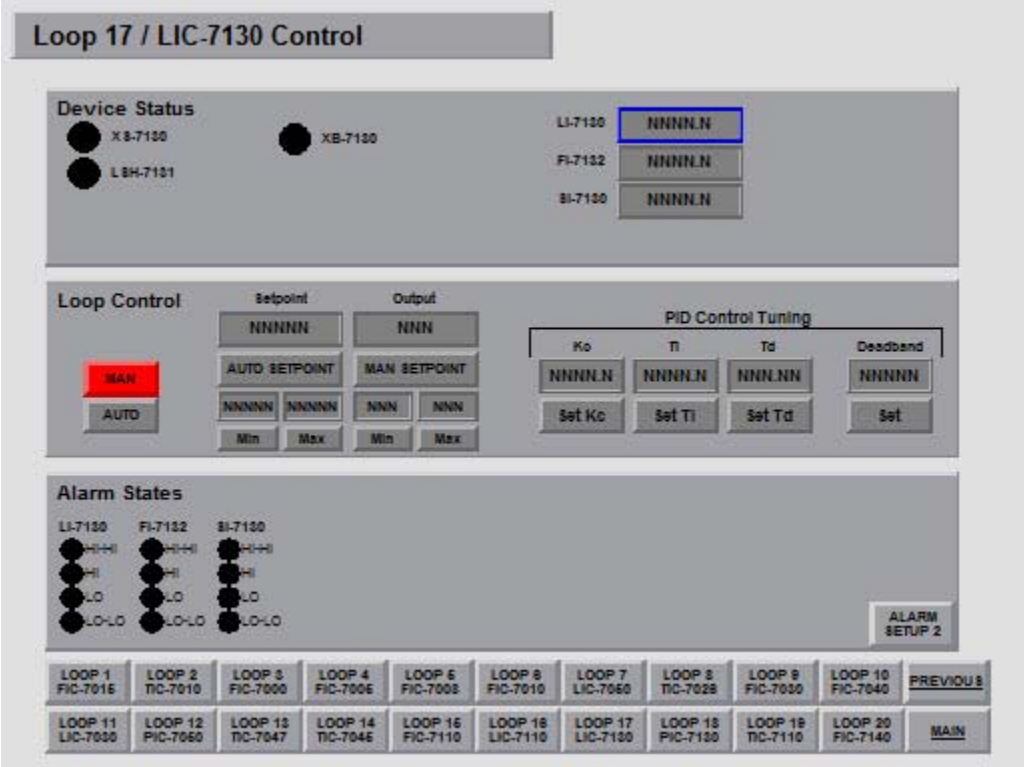

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

XS-7130 (Status Indicator) – turns green when the switch is in the OFF position, and red when the switch is in the ON position

LSH-7131 (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

XB-7130 (Status Indicator) – turns red when the device is energized, and green when the device is de-energized

LI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7132 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

SI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

LI-7130 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7132 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

SI-7130 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 18 / PIC-7130 CONTROL SCREEN

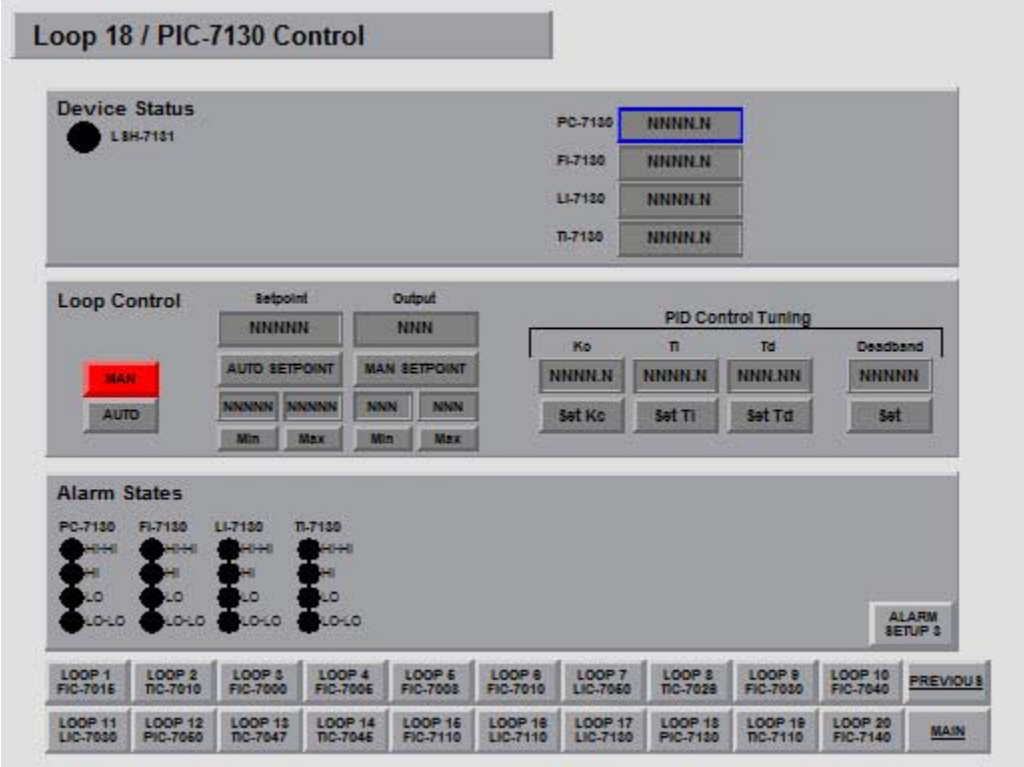

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

LSH-7131 (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

PC-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

LI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

TI-7130 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

PC-7130 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7130 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LI-7130 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

TI-7130 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 19 / TIC-7110 CONTROL SCREEN

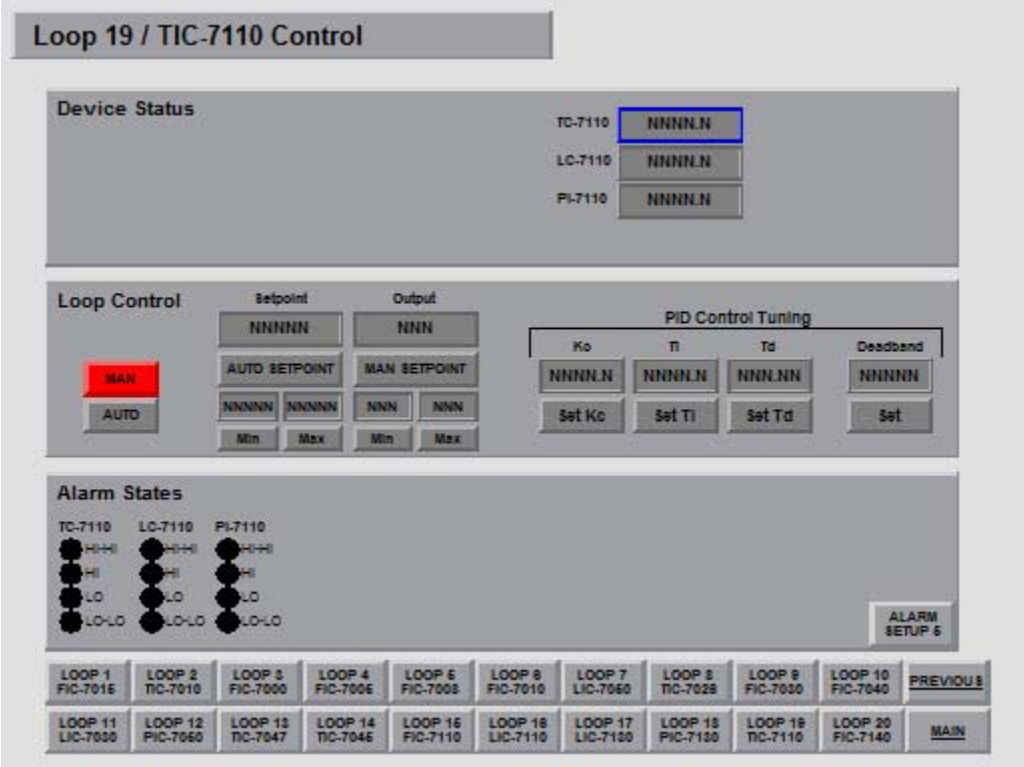

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

TC-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

LC-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

PI-7110 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

TC-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LC-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

PI-7110 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

LOOP 20 / FIC-7140 CONTROL SCREEN

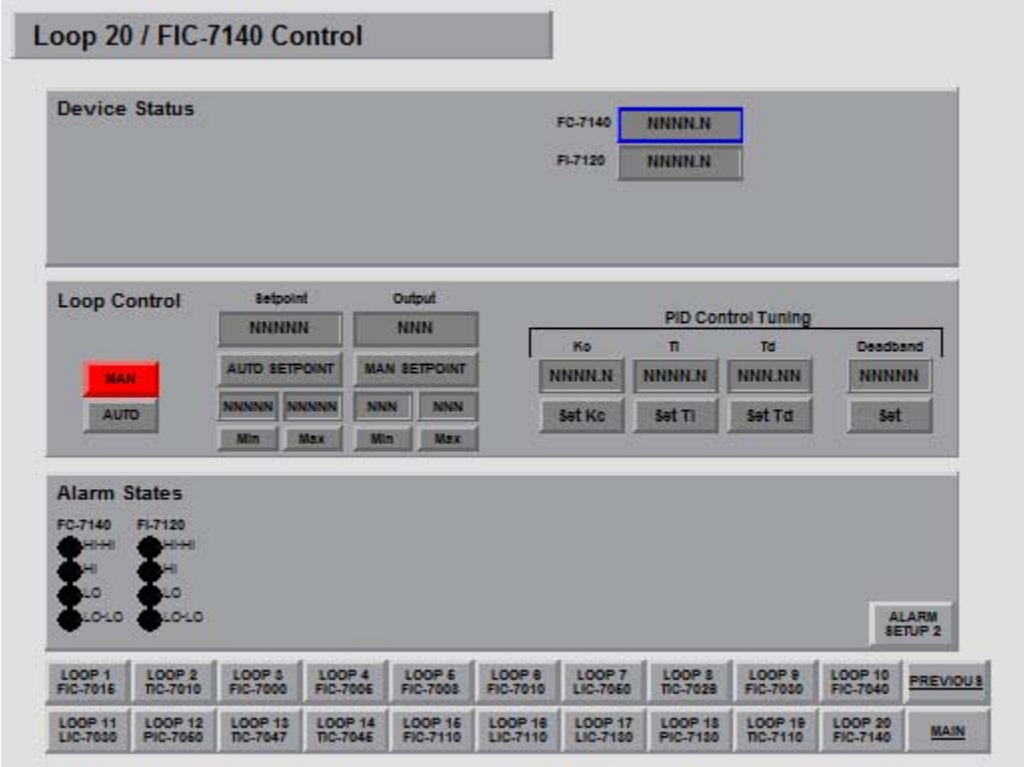

This screen is used to set up and tune the control loop (in the title).

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into four sections, Device Status, Loop Control, Alarm States and Navigation (unlabeled, bottom of the screen).

Device Status displays the current status of digital devices within close proximity to the control loop (red shows energized / active and green shows de-energized / inactive), as well as the current, scaled values of any nearby analog instruments (as interpreted by the PLC).

Loop Control houses all of the controls, setpoints and parameters necessary to setup, tune and manage the control loop.

Alarm States shows the state of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in the Device status section. Red indicates a current alarm condition and green indicates the alarm condition does not currently exist. For convenience, also included in this section is a navigation button which, when pressed, navigates to the Alarm Setup screen which contains the control of the alarms for the Process Variable of this loop.

NOTE – alarms can be disabled on the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

FC-7140 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

FI-7120 (Display) – This displays the current, scaled value of the instrument as interpreted by the PLC.

MAN (Pushbutton) – places this control loop into manual control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

AUTO (Pushbutton) – places this control loop into automatic control mode. When in this mode, the button will turn red. When in another control mode, this button will turn grey.

SETPOINT (Display) – shows the current, automatic control mode setpoint for this control loop

AUTO SETPOINT (Pushbutton) – spawns a numeric entry pad from which an automatic control mode setpoint may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the setpoint range

MAX (setpoint) (Display) – shows the current, maximum value of the setpoint range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the setpoint range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the setpoint range may be entered

OUTPUT (Display) – shows the current, output for this control loop

MAN SETPOINT (Pushbutton) – spawns a numeric entry pad from which an manual control mode output may be entered

MIN (setpoint) (Display) – shows the current, minimum value of the output range

MAX (setpoint) (Display) – shows the current, maximum value of the output range

MIN (Pushbutton) (Display) – spawns a numeric entry pad from which a minimum value for the output range may be entered

MAX (Pushbutton) (Display) – spawns a numeric entry pad from which a maximum value for the output range may be entered

Kc (Display) – shows the current controller gain value for this control loop

Kc (Pushbutton) – spawns a numeric entry pad from which a controller gain value may be entered

Ti (Display) – shows the current reset term value for this control loop

Ti (Pushbutton) – spawns a numeric entry pad from which a reset term value may be entered

Td (Display) – shows the current rate term value for this control loop

Td (Pushbutton) – spawns a numeric entry pad from which a rate term value may be entered

DEADBAND (Display) – shows the current deadband value for this control loop

DEADBAND (Pushbutton) – spawns a numeric entry pad from which a deadband value may be entered

FC-7140 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

FI-7120 (Status Indicators) – This displays the set of alarm conditions for the instrument. Symbols will turn green when the alarm condition is absent, and red when the alarm condition is present and active.

LOOP 1, FIC-7015 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 2, TIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 3, FIC-7000 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 4, FIC-7005 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 5, FIC-7008 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 6, FIC-7010 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 7, LIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 8, TIC-7026 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 9, FIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 10, FIC-7040 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 11, LIC-7030 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 12, PIC-7050 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 13, TIC-7047 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 14, TIC-7045 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 15, FIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 16, LIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 17, LIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 18, PIC-7130 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop


LOOP 19, TIC-7110 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

LOOP 20, FIC-7140 (Navigation Button) – navigates to the setup screen which contains the configuration parameters for this control loop

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM SETUP SCREEN #1

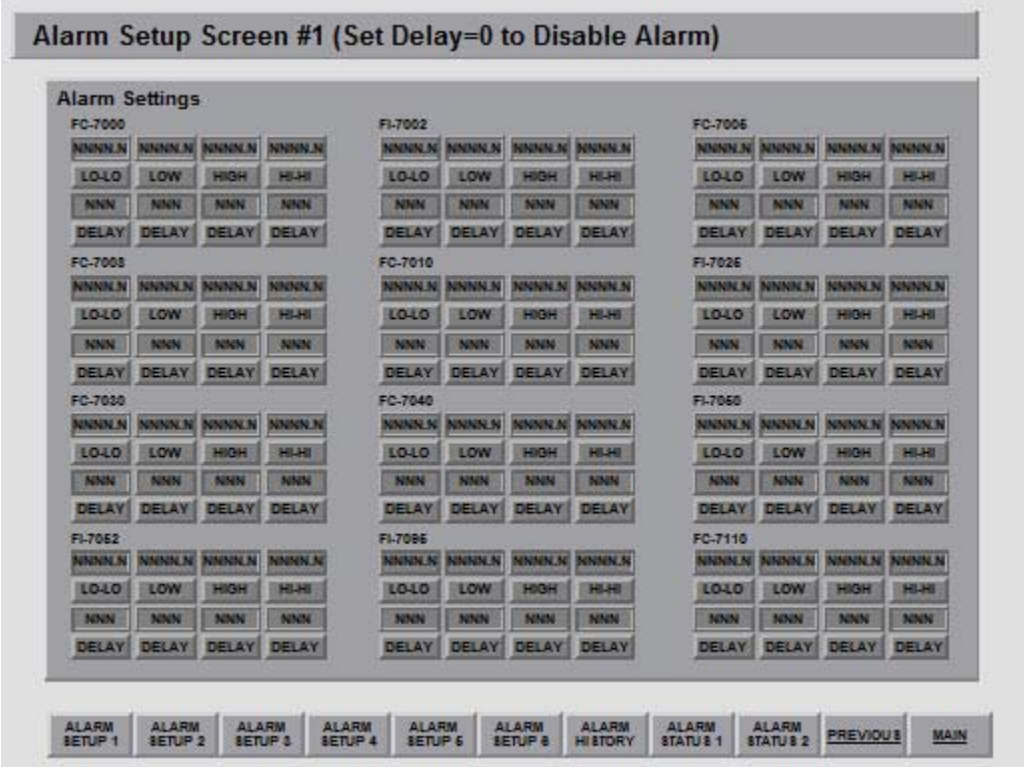

This is the first of six screens used to configure system alarms.

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into two sections, Alarm Settings and Navigation (unlabeled, bottom of the screen).

Alarm Settings shows the current setpoint of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section, and contains the numeric entry pads (hidden) necessary to modify these setpoints.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following controls:

LO-LO (Display) – shows the current, low-low alarm setpoint for this instrument

LO-LO (Pushbutton) – spawns a numeric entry pad from which a low-low alarm setpoint may be entered

LO-LO DELAY (Display) – shows the current, low-low alarm time delay setpoint for this instrument

LO-LO DELAY (Pushbutton) – spawns a numeric entry pad from which a low-low alarm time delay setpoint may be entered

LOW (Display) – shows the current, low alarm setpoint for this instrument

LOW (Pushbutton) – spawns a numeric entry pad from which a low alarm setpoint may be entered

LOW DELAY (Display) – shows the current, low alarm time delay setpoint for this instrument

LOW DELAY (Pushbutton) – spawns a numeric entry pad from which a low alarm time delay setpoint may be entered

HIGH (Display) – shows the current, high alarm setpoint for this instrument

HIGH (Pushbutton) – spawns a numeric entry pad from which a high alarm setpoint may be entered

HIGH DELAY (Display) – shows the current, high alarm time delay setpoint for this instrument

HIGH DELAY (Pushbutton) – spawns a numeric entry pad from which a high alarm time delay setpoint may be entered

HI-HI (Display) – shows the current, high-high alarm setpoint for this instrument

HI-HI (Pushbutton) – spawns a numeric entry pad from which a high-high alarm setpoint may be entered

HI-HI DELAY (Display) – shows the current, high-high alarm time delay setpoint for this instrument

HI-HI DELAY (Pushbutton) – spawns a numeric entry pad from which a high-high alarm time delay setpoint may be entered

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced


ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM SETUP SCREEN #2

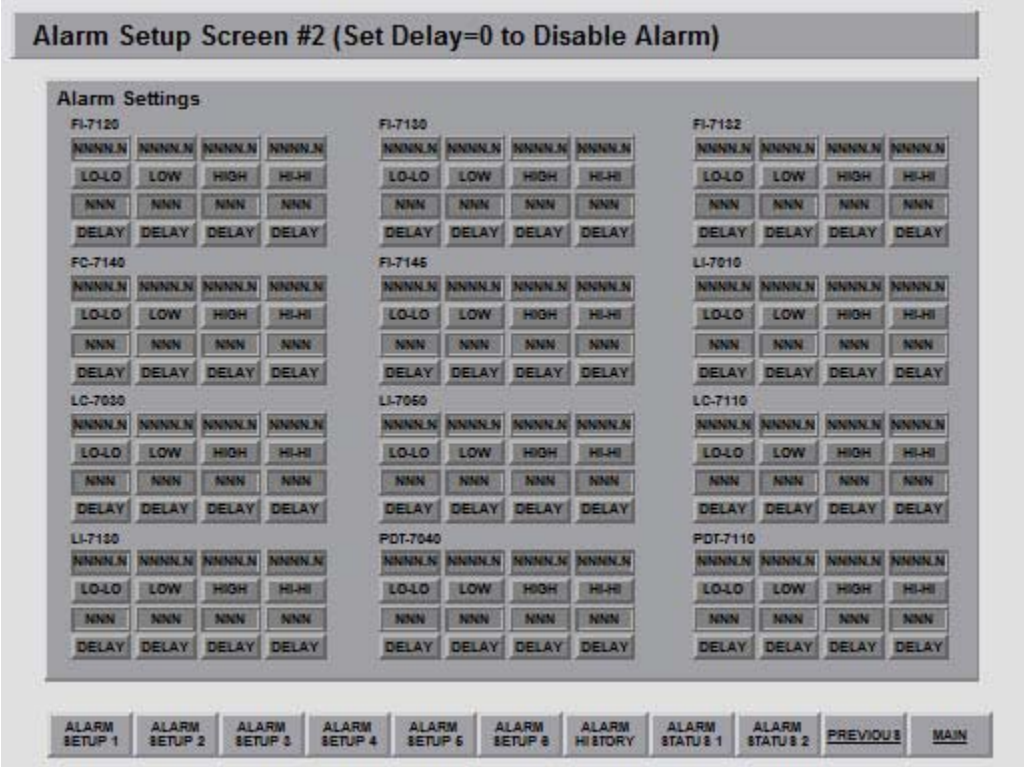

This is the second of six screens used to configure system alarms.

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into two sections, Alarm Settings and Navigation (unlabeled, bottom of the screen).

Alarm Settings shows the current setpoint of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section, and contains the numeric entry pads (hidden) necessary to modify these setpoints.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following controls:

LO-LO (Display) – shows the current, low-low alarm setpoint for this instrument

LO-LO (Pushbutton) – spawns a numeric entry pad from which a low-low alarm setpoint may be entered

LO-LO DELAY (Display) – shows the current, low-low alarm time delay setpoint for this instrument

LO-LO DELAY (Pushbutton) – spawns a numeric entry pad from which a low-low alarm time delay setpoint may be entered

LOW (Display) – shows the current, low alarm setpoint for this instrument

LOW (Pushbutton) – spawns a numeric entry pad from which a low alarm setpoint may be entered

LOW DELAY (Display) – shows the current, low alarm time delay setpoint for this instrument

LOW DELAY (Pushbutton) – spawns a numeric entry pad from which a low alarm time delay setpoint may be entered

HIGH (Display) – shows the current, high alarm setpoint for this instrument

HIGH (Pushbutton) – spawns a numeric entry pad from which a high alarm setpoint may be entered

HIGH DELAY (Display) – shows the current, high alarm time delay setpoint for this instrument

HIGH DELAY (Pushbutton) – spawns a numeric entry pad from which a high alarm time delay setpoint may be entered

HI-HI (Display) – shows the current, high-high alarm setpoint for this instrument

HI-HI (Pushbutton) – spawns a numeric entry pad from which a high-high alarm setpoint may be entered

HI-HI DELAY (Display) – shows the current, high-high alarm time delay setpoint for this instrument

HI-HI DELAY (Pushbutton) – spawns a numeric entry pad from which a high-high alarm time delay setpoint may be entered

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced


ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM SETUP SCREEN #3

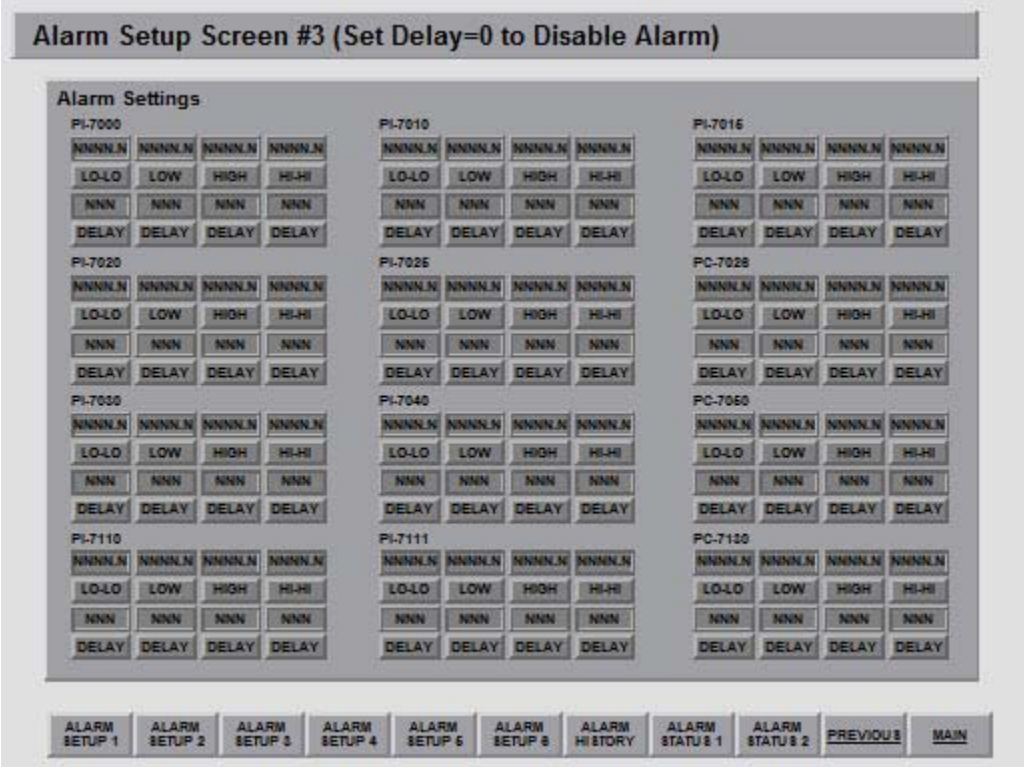

This is the third of six screens used to configure system alarms.

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into two sections, Alarm Settings and Navigation (unlabeled, bottom of the screen).

Alarm Settings shows the current setpoint of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section, and contains the numeric entry pads (hidden) necessary to modify these setpoints.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following controls:

LO-LO (Display) – shows the current, low-low alarm setpoint for this instrument

LO-LO (Pushbutton) – spawns a numeric entry pad from which a low-low alarm setpoint may be entered

LO-LO DELAY (Display) – shows the current, low-low alarm time delay setpoint for this instrument

LO-LO DELAY (Pushbutton) – spawns a numeric entry pad from which a low-low alarm time delay setpoint may be entered

LOW (Display) – shows the current, low alarm setpoint for this instrument

LOW (Pushbutton) – spawns a numeric entry pad from which a low alarm setpoint may be entered

LOW DELAY (Display) – shows the current, low alarm time delay setpoint for this instrument

LOW DELAY (Pushbutton) – spawns a numeric entry pad from which a low alarm time delay setpoint may be entered

HIGH (Display) – shows the current, high alarm setpoint for this instrument

HIGH (Pushbutton) – spawns a numeric entry pad from which a high alarm setpoint may be entered

HIGH DELAY (Display) – shows the current, high alarm time delay setpoint for this instrument

HIGH DELAY (Pushbutton) – spawns a numeric entry pad from which a high alarm time delay setpoint may be entered

HI-HI (Display) – shows the current, high-high alarm setpoint for this instrument

HI-HI (Pushbutton) – spawns a numeric entry pad from which a high-high alarm setpoint may be entered

HI-HI DELAY (Display) – shows the current, high-high alarm time delay setpoint for this instrument

HI-HI DELAY (Pushbutton) – spawns a numeric entry pad from which a high-high alarm time delay setpoint may be entered

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced


ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM SETUP SCREEN #4

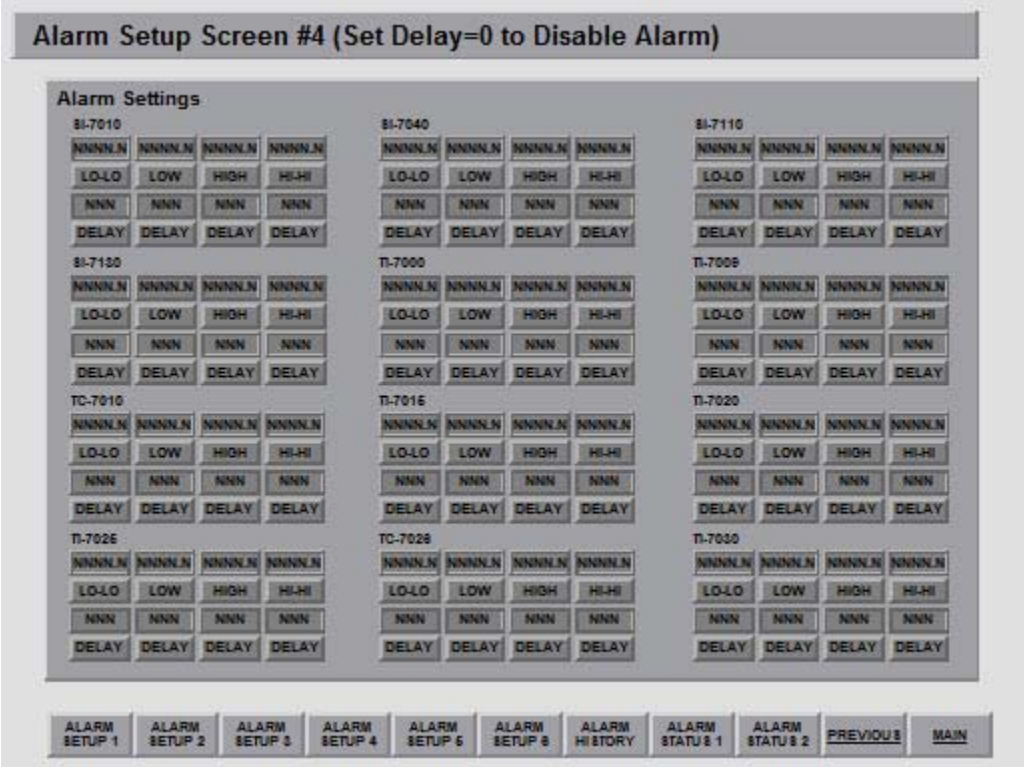

This is the fourth of six screens used to configure system alarms.

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into two sections, Alarm Settings and Navigation (unlabeled, bottom of the screen).

Alarm Settings shows the current setpoint of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section, and contains the numeric entry pads (hidden) necessary to modify these setpoints.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following controls:

LO-LO (Display) – shows the current, low-low alarm setpoint for this instrument

LO-LO (Pushbutton) – spawns a numeric entry pad from which a low-low alarm setpoint may be entered

LO-LO DELAY (Display) – shows the current, low-low alarm time delay setpoint for this instrument

LO-LO DELAY (Pushbutton) – spawns a numeric entry pad from which a low-low alarm time delay setpoint may be entered

LOW (Display) – shows the current, low alarm setpoint for this instrument

LOW (Pushbutton) – spawns a numeric entry pad from which a low alarm setpoint may be entered

LOW DELAY (Display) – shows the current, low alarm time delay setpoint for this instrument

LOW DELAY (Pushbutton) – spawns a numeric entry pad from which a low alarm time delay setpoint may be entered

HIGH (Display) – shows the current, high alarm setpoint for this instrument

HIGH (Pushbutton) – spawns a numeric entry pad from which a high alarm setpoint may be entered

HIGH DELAY (Display) – shows the current, high alarm time delay setpoint for this instrument

HIGH DELAY (Pushbutton) – spawns a numeric entry pad from which a high alarm time delay setpoint may be entered

HI-HI (Display) – shows the current, high-high alarm setpoint for this instrument

HI-HI (Pushbutton) – spawns a numeric entry pad from which a high-high alarm setpoint may be entered

HI-HI DELAY (Display) – shows the current, high-high alarm time delay setpoint for this instrument

HI-HI DELAY (Pushbutton) – spawns a numeric entry pad from which a high-high alarm time delay setpoint may be entered

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced


ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM SETUP SCREEN #5

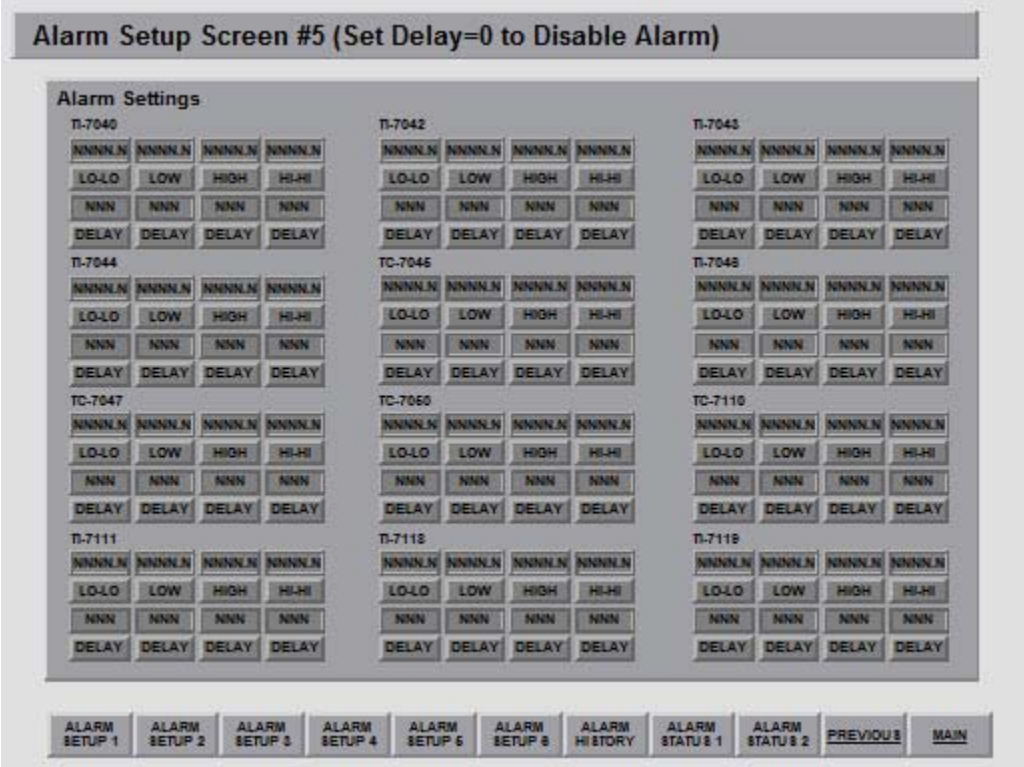

This is the fifth of six screens used to configure system alarms.

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into two sections, Alarm Settings and Navigation (unlabeled, bottom of the screen).

Alarm Settings shows the current setpoint of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section, and contains the numeric entry pads (hidden) necessary to modify these setpoints.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following controls:

LO-LO (Display) – shows the current, low-low alarm setpoint for this instrument

LO-LO (Pushbutton) – spawns a numeric entry pad from which a low-low alarm setpoint may be entered

LO-LO DELAY (Display) – shows the current, low-low alarm time delay setpoint for this instrument

LO-LO DELAY (Pushbutton) – spawns a numeric entry pad from which a low-low alarm time delay setpoint may be entered

LOW (Display) – shows the current, low alarm setpoint for this instrument

LOW (Pushbutton) – spawns a numeric entry pad from which a low alarm setpoint may be entered

LOW DELAY (Display) – shows the current, low alarm time delay setpoint for this instrument

LOW DELAY (Pushbutton) – spawns a numeric entry pad from which a low alarm time delay setpoint may be entered

HIGH (Display) – shows the current, high alarm setpoint for this instrument

HIGH (Pushbutton) – spawns a numeric entry pad from which a high alarm setpoint may be entered

HIGH DELAY (Display) – shows the current, high alarm time delay setpoint for this instrument

HIGH DELAY (Pushbutton) – spawns a numeric entry pad from which a high alarm time delay setpoint may be entered

HI-HI (Display) – shows the current, high-high alarm setpoint for this instrument

HI-HI (Pushbutton) – spawns a numeric entry pad from which a high-high alarm setpoint may be entered

HI-HI DELAY (Display) – shows the current, high-high alarm time delay setpoint for this instrument

HI-HI DELAY (Pushbutton) – spawns a numeric entry pad from which a high-high alarm time delay setpoint may be entered

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced


ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM SETUP SCREEN #6

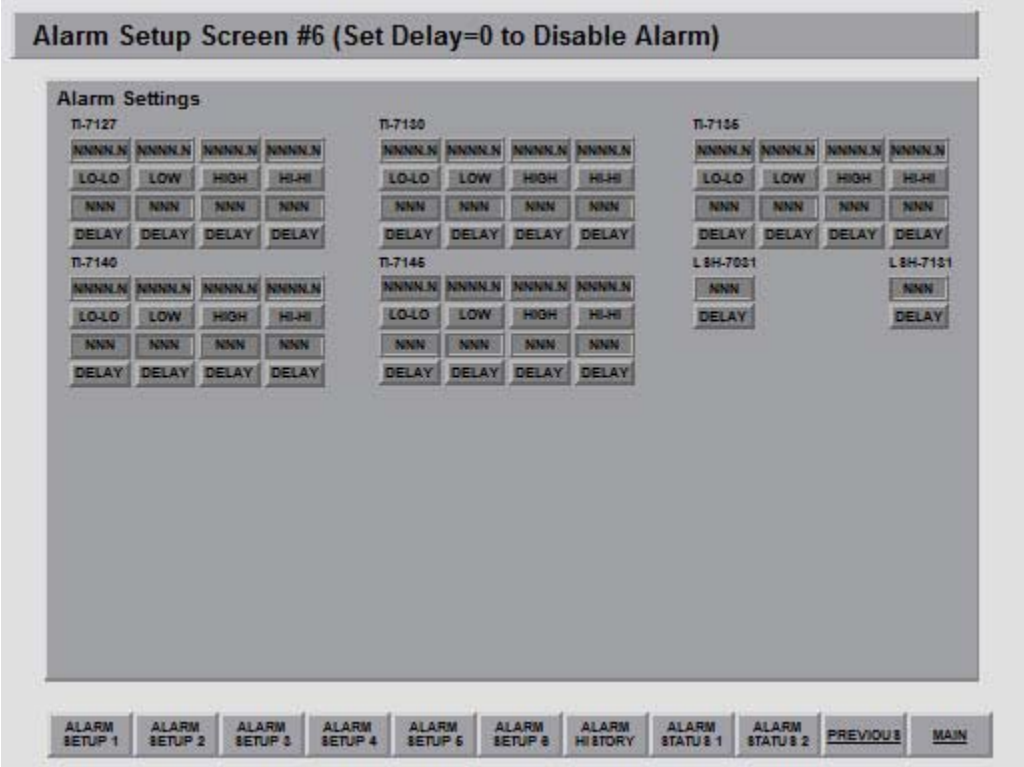

This is the sixth of six screens used to configure system alarms.

WARNING - changes to these parameters should only be made by a person trained and qualified to do so, or damage to equipment / injury to personnel may occur.

This screen is broken down into two sections, Alarm Settings and Navigation (unlabeled, bottom of the screen).

Alarm Settings shows the current setpoint of each alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section, and contains the numeric entry pads (hidden) necessary to modify these setpoints.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following controls:

LO-LO (Display) – shows the current, low-low alarm setpoint for this instrument

LO-LO (Pushbutton) – spawns a numeric entry pad from which a low-low alarm setpoint may be entered

LO-LO DELAY (Display) – shows the current, low-low alarm time delay setpoint for this instrument

LO-LO DELAY (Pushbutton) – spawns a numeric entry pad from which a low-low alarm time delay setpoint may be entered

LOW (Display) – shows the current, low alarm setpoint for this instrument

LOW (Pushbutton) – spawns a numeric entry pad from which a low alarm setpoint may be entered

LOW DELAY (Display) – shows the current, low alarm time delay setpoint for this instrument

LOW DELAY (Pushbutton) – spawns a numeric entry pad from which a low alarm time delay setpoint may be entered

HIGH (Display) – shows the current, high alarm setpoint for this instrument

HIGH (Pushbutton) – spawns a numeric entry pad from which a high alarm setpoint may be entered

HIGH DELAY (Display) – shows the current, high alarm time delay setpoint for this instrument

HIGH DELAY (Pushbutton) – spawns a numeric entry pad from which a high alarm time delay setpoint may be entered

HI-HI (Display) – shows the current, high-high alarm setpoint for this instrument

HI-HI (Pushbutton) – spawns a numeric entry pad from which a high-high alarm setpoint may be entered

HI-HI DELAY (Display) – shows the current, high-high alarm time delay setpoint for this instrument

HI-HI DELAY (Pushbutton) – spawns a numeric entry pad from which a high-high alarm time delay setpoint may be entered

Note: LSH-7031 and LSH-7131 are digital devices which to not have programmable setpoints.

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced


ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system

PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

ALARM STATUS SCREEN #1

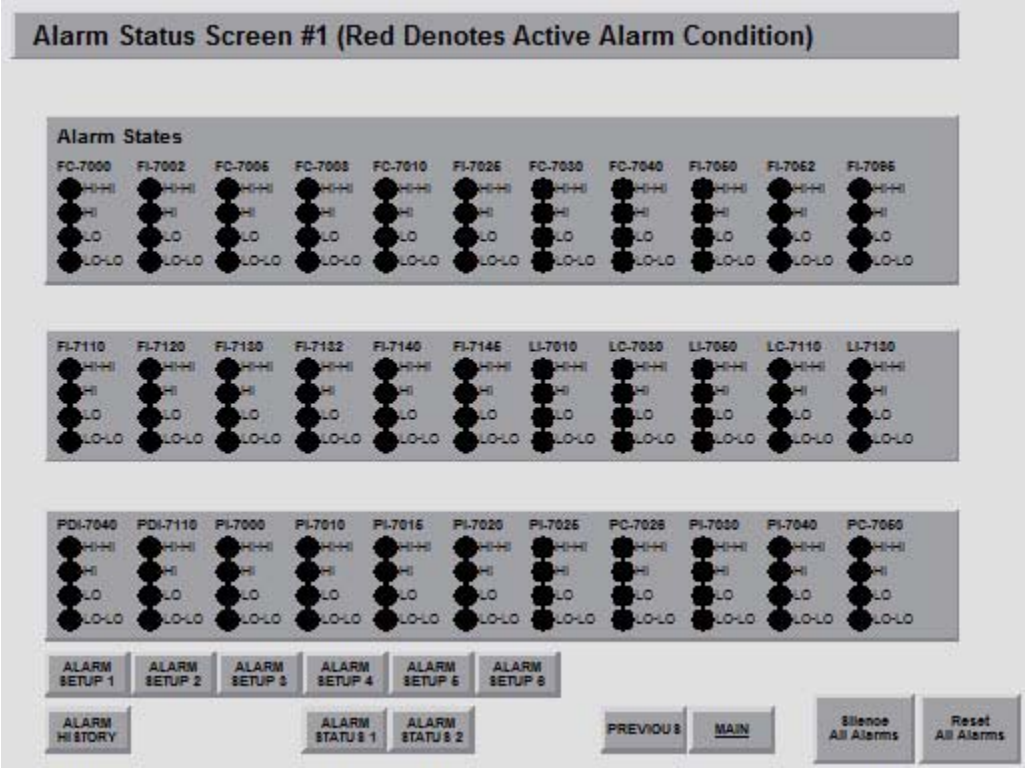

This is the first of two screens used to monitor active system alarms.

This screen is broken down into two sections, Alarm States and Navigation (unlabeled, bottom of the screen).

Alarm States shows the current status of each (ENABLED) alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero in the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following indicators:

HI-HI (Display) – turns green when the high-high alarm condition is not present, and red when there is an active high-high alarm

HI (Display) – turns green when the high alarm condition is not present, and red when there is an active high alarm

LO (Display) – turns green when the low alarm condition is not present, and red when there is an active low alarm

LO-LO (Display) – turns green when the low-low alarm condition is not present, and red when there is an active low-low alarm

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system


PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

SILENCE ALL ALARMS (Pushbutton) – silences audio / visual notification of alarm states, but does not reset the conditions in the system

RESET ALL ALARMS (Pushbutton) – silences audio / visual notification of alarm states, and resets the conditions in the system (Note: if conditions that triggered the alarms still exist, the alarms will return once the delay timer expires.)

ALARM STATUS SCREEN #2

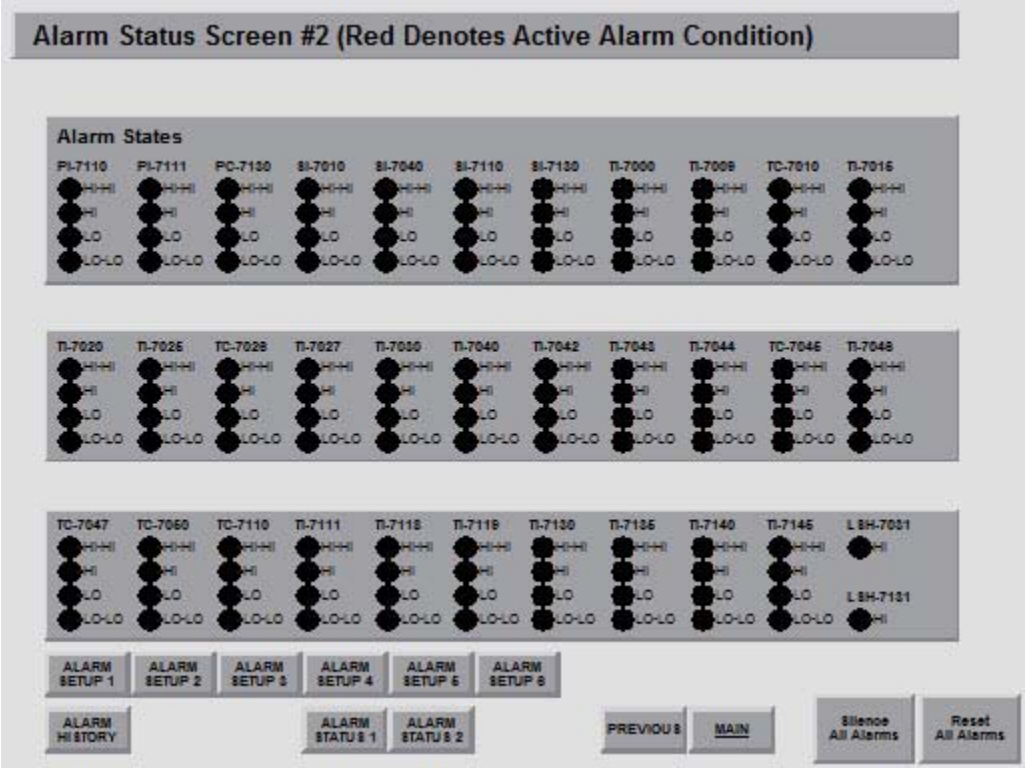

This is the second of two screens used to monitor active system alarms.

This screen is broken down into two sections, Alarm States and Navigation (unlabeled, bottom of the screen).

Alarm States shows the current status of each (ENABLED) alarm condition (LL, L, H and HH) for each of the analog instruments shown in this section.

NOTE – most alarms can be disabled by setting the delay timer setpoint to zero in the Alarm Setup screens.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

Each instrument shown contains the following indicators:

HI-HI (Display) – turns green when the high-high alarm condition is not present, and red when there is an active high-high alarm

HI (Display) – turns green when the high alarm condition is not present, and red when there is an active high alarm

LO (Display) – turns green when the low alarm condition is not present, and red when there is an active low alarm

LO-LO (Display) – turns green when the low-low alarm condition is not present, and red when there is an active low-low alarm

LSH-7031 HI (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

LSH-7131 HI (Device) – This representation is a dynamic graphic. The symbol turns green when the level is below the switch, and red when the level is at least high enough to close the switch continuously for the duration of the operator-settable delay.

ALARM SETUP 1 (Navigation Button) – navigates to the first of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 2 (Navigation Button) – navigates to the second of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 3 (Navigation Button) – navigates to the third of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 4 (Navigation Button) – navigates to the fourth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 5 (Navigation Button) – navigates to the fifth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM SETUP 6 (Navigation Button) – navigates to the sixth of six alarm setup screens from which all alarm setpoints for the system can be input

ALARM HISTORY (Navigation Button) – navigates to the Alarm History screen which shows the log of all alarms the system has experienced

ALARM STATUS 1 (Navigation Button) – navigates to the first of two alarm status screens which show all active alarms throughout the system

ALARM STATUS 2 (Navigation Button) – navigates to the second of two alarm status screens which show all active alarms throughout the system


PREVIOUS (Navigation Button) – navigates back to the last page visited

MAIN (Navigation Button) – navigates to the Main Screen

SILENCE ALL ALARMS (Pushbutton) – silences audio / visual notification of alarm states, but does not reset the conditions in the system

RESET ALL ALARMS (Pushbutton) – silences audio / visual notification of alarm states, and resets the conditions in the system (Note: if conditions that triggered the alarms still exist, the alarms will return once the delay timer expires.)

ALARM HISTORY SCREEN

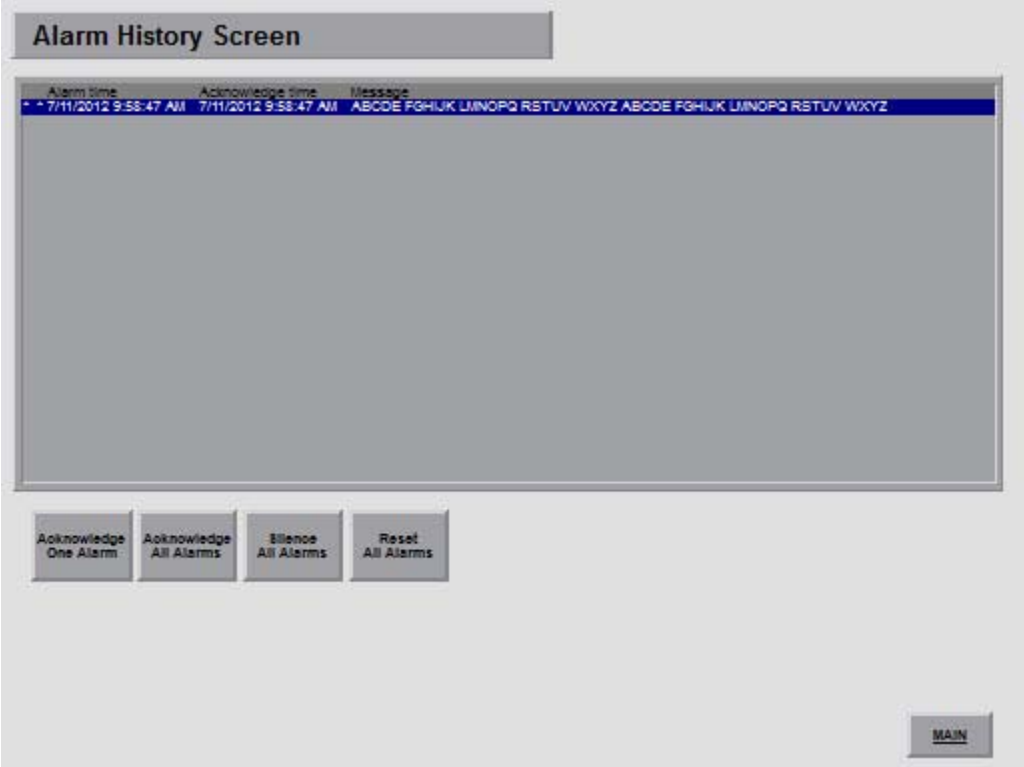

This screen is used to log and monitor the history of system alarms.

This screen is broken down into three sections, Alarm Log (unlabled), Alarm Controls (unlabled) and Navigation (unlabeled, bottom of the screen).

Alarm Log shows the chronological log of alarm conditions the system has experienced including the date and time of occurrence, the date and time of operator acknowledgement and the actual alarm message displayed.

Alarm Controls provides the means to acknowledge, silence and reset alarms.

Navigation provides direct access to various screens to which the operator can navigate at the touch of the button denoting the screen desired.

ACKNOWLEDGE ONE ALARM (Pushbutton) – acknowledges the highlighted, un-acknowledged alarm on the Alarm Log

ACKNOWLEDGE ALL ALARMS (Pushbutton) – acknowledges all un-acknowledged alarms on the Alarm Log

SILENCE ALL ALARMS (Pushbutton) – silences audio / visual notification of alarm states, but does not reset the conditions in the system

RESET ALL ALARMS (Pushbutton) – silences audio / visual notification of alarm states, and resets the conditions in the system (Note: if conditions that triggered the alarms still exist, the alarms will return once the delay timer expires.)

MAIN (Navigation Button) – navigates to the Main Screen

The following is a list of all alarms the system can generate:

FC-7005 HI

FC-7005 HI-HI

FC-7005 LO

FC-7005 LO-LO

FC-7000 HI

FC-7000 HI-HI

FC-7000 LO

FC-7000 LO-LO

FI-7002 HI

FI-7002 HI-HI

FI-7002 LO

FI-7002 LO-LO

FC-7008 HI

FC-7008 HI-HI

FC-7008 LO

FC-7008 LO-LO

FC-7010 HI

FC-7010 HI-HI

FC-7010 LO

FC-7010 LO-LO

FI-7025 HI

FI-7025 HI-HI

FI-7025 LO

FI-7025 LO-LO

FC-7030 HI

FC-7030 HI-HI

FC-7030 LO

FC-7030 LO-LO

FC-7040 HI

FC-7040 HI-HI

FC-7040 LO

FC-7040 LO-LO

FI-7050 HI

FI-7050 HI-HI

FI-7050 LO

FI-7050 LO-LO

FI-7052 HI

FI-7052 HI-HI

FI-7052 LO

FI-7052 LO-LO

FI-7095 HI

FI-7095 HI-HI

FI-7095 LO

FI-7095 LO-LO

FC-7110 HI

FC-7110 HI-HI

FC-7110 LO

FC-7110 LO-LO

FI-7120 HI

FI-7120 HI-HI

FI-7120 LO

FI-7120 LO-LO

FI-7130 HI

FI-7130 HI-HI

FI-7130 LO

FI-7130 LO-LO

FI-7132 HI

FI-7132 HI-HI

FI-7132 LO

FI-7132 LO-LO

FC-7140 HI

FC-7140 HI-HI

FC-7140 LO

FC-7140 LO-LO

FI-7145 HI

FI-7145 HI-HI

FI-7145 LO

FI-7145 LO-LO

LI-7010 HI

LI-7010 HI-HI

LI-7010 LO

LI-7010 LO-LO

LC-7030 HI

LC-7030 HI-HI

LC-7030 LO

LC-7030 LO-LO

LI-7050 HI

LI-7050 HI-HI

LI-7050 LO

LI-7050 LO-LO

LC-7110 HI

LC-7110 HI-HI

LC-7110 LO

LC-7110 LO-LO

LI-7130 HI

LI-7130 HI-HI

LI-7130 LO

LI-7130 LO-LO

PDI-7040 HI

PDI-7040 HI-HI

PDI-7040 LO

PDI-7040 LO-LO

PDI-7110 HI

PDI-7110 HI-HI

PDI-7110 LO

PDI-7110 LO-LO

PI-7000 HI

PI-7000 HI-HI

PI-7000 LO

PI-7000 LO-LO

PI-7010 HI

PI-7010 HI-HI

PI-7010 LO

PI-7010 LO-LO

PI-7015 HI

PI-7015 HI-HI

PI-7015 LO

PI-7015 LO-LO

PI-7020 HI

PI-7020 HI-HI

PI-7020 LO

PI-7020 LO-LO

PI-7025 HI

PI-7025 HI-HI

PI-7025 LO

PI-7025 LO-LO

PC-7026 HI

PC-7026 HI-HI

PC-7026 LO

PC-7026 LO-LO

PI-7030 HI

PI-7030 HI-HI

PI-7030 LO

PI-7030 LO-LO

PI-7040 HI

PI-7040 HI-HI

PI-7040 LO

PI-7040 LO-LO

PC-7050 HI

PC-7050 HI-HI

PC-7050 LO

PC-7050 LO-LO

PI-7110 HI

PI-7110 HI-HI

PI-7110 LO

PI-7110 LO-LO

PI-7111 HI

PI-7111 HI-HI

PI-7111 LO

PI-7111 LO-LO

PC-7130 HI

PC-7130 HI-HI

PC-7130 LO

PC-7130 LO-LO

SI-7010 HI

SI-7010 HI-HI

SI-7010 LO

SI-7010 LO-LO

SI-7040 HI

SI-7040 HI-HI

SI-7040 LO

SI-7040 LO-LO

SI-7110 HI

SI-7110 HI-HI

SI-7110 LO

SI-7110 LO-LO

SI-7130 HI

SI-7130 HI-HI

SI-7130 LO

SI-7130 LO-LO

TI-7000 HI

TI-7000 HI-HI

TI-7000 LO

TI-7000 LO-LO

TI-7009 HI

TI-7009 HI-HI

TI-7009 LO

TI-7009 LO-LO

TC-7010 HI

TC-7010 HI-HI

TC-7010 LO

TC-7010 LO-LO

TI-7015 HI

TI-7015 HI-HI

TI-7015 LO

TI-7015 LO-LO

TI-7020 HI

TI-7020 HI-HI

TI-7020 LO

TI-7020 LO-LO

TI-7025 HI

TI-7025 HI-HI

TI-7025 LO

TI-7025 LO-LO

TC-7026 HI

TC-7026 HI-HI

TC-7026 LO

TC-7026 LO-LO

TI-7030 HI

TI-7030 HI-HI

TI-7030 LO

TI-7030 LO-LO

TI-7040 HI

TI-7040 HI-HI

TI-7040 LO

TI-7040 LO-LO

TI-7042 HI

TI-7042 HI-HI

TI-7042 LO

TI-7042 LO-LO

TI-7043 HI

TI-7043 HI-HI

TI-7043 LO

TI-7043 LO-LO

TI-7044 HI

TI-7044 HI-HI

TI-7044 LO

TI-7044 LO-LO

TC-7045 HI

TC-7045 HI-HI

TC-7045 LO

TC-7045 LO-LO

TC-7046 HI

TI-7046 HI-HI

TI-7046 LO

TI-7046 LO-LO

TC-7047 HI

TC-7047 HI-HI

TC-7047 LO

TC-7047 LO-LO

TC-7050 HI

TC-7050 HI-HI

TC-7050 LO

TC-7050 LO-LO

TC-7110 HI

TC-7110 HI-HI

TC-7110 LO

TC-7110 LO-LO

TI-7111 HI

TI-7111 HI-HI

TI-7111 LO

TI-7111 LO-LO

TI-7118 HI

TI-7118 HI-HI

TI-7118 LO

TI-7118 LO-LO

TI-7119 HI

TI-7119 HI-HI

TI-7119 LO

TI-7119 LO-LO

TI-7127 HI

TI-7127 HI-HI

TI-7127 LO

TI-7127 LO-LO

TI-7130 HI

TI-7130 HI-HI

TI-7130 LO

TI-7130 LO-LO

TI-7135 HI

TI-7135 HI-HI

TI-7135 LO

TI-7135 LO-LO

TI-7140 HI

TI-7140 HI-HI

TI-7140 LO

TI-7140 LO-LO

TI-7145 HI

TI-7145 HI-HI

TI-7145 LO

TI-7145 LO-LO

XS_7010 IS IN THE STOP POSITION. LOOP CANNOT RUN.

XS_7011 IS IN THE STOP POSITION. DEVICE CANNOT RUN.

XS_7040 IS IN THE STOP POSITION. LOOP CANNOT RUN.

XS_7050 IS IN THE STOP POSITION. LOOP CANNOT RUN.

XS_7110 IS IN THE STOP POSITION. LOOP CANNOT RUN.

XS_7130 IS IN THE STOP POSITION. LOOP CANNOT RUN.

LSH-7131 HIGH LEVEL SWITCH TRIPPED.

WATCHDOG (FROM DELTAV) FROZEN

ALARM CONDITION CAUSED FIC-7000 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED FIC-7005 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED FIC-7008 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED FIC-7010 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED FIC-7010 TO GO INTO MANUAL MODE 100% OUTPUT

ALARM CONDITION CAUSED FIC-7015 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED FIC-7110 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED FIC-7110 TO GO INTO MANUAL MODE 1000% OUTPUT

ALARM CONDITION CAUSED LIC-7030 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED LIC-7030 TO GO INTO MANUAL MODE 100% OUTPUT

ALARM CONDITION CAUSED LIC-7050 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED LIC-7110 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED LIC-7130 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED LIC-7130 TO GO INTO MANUAL MODE 1000% OUTPUT

ALARM CONDITION CAUSED PIC-7130 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED PIC-7130 TO GO INTO MANUAL MODE 100% OUTPUT

ALARM CONDITION CAUSED TIC-7026 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED TIC-7110 TO GO INTO MANUAL MODE 0% OUTPUT

ALARM CONDITION CAUSED TIC-7110 TO GO INTO MANUAL MODE 100% OUTPUT

ALARM CONDITION CAUSED XB-7011 TO GO OFFLINE

ALARM CONDITION CAUSED XV-7000 TO CLOSE