ProCam merchant guide: what you do, in order

Only what the merchant needs: an online booking first (scan the customer's QR, hand over, take it back), then a walk-in booking, then everything else. Customer screens appear only where you scan something from them. Screens are from the app on a phone.

Online booking	9 screens
Walk-in booking	6 screens
Miscellaneous	9 screens

Online booking

A customer who booked and paid on their phone in advance. They show you their booking QR, you scan it, hand over the drone, and take everything back when their time is up.


9 SCREENS

1

ONLINE BOOKING

Their booking QR: this is what you scan

The customer opens their booking link. It shows the start and return times and a QR code. They show you this screen. (They only have a booking once they have paid, so you never see an unpaid one.)

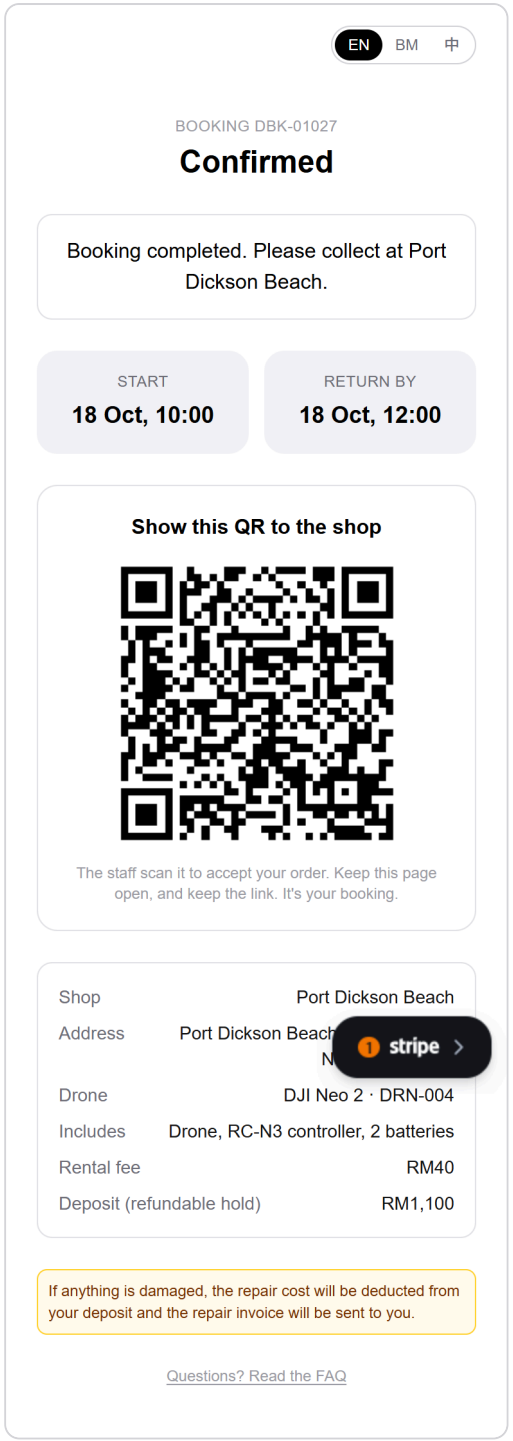


2

ONLINE BOOKING

Scan their QR and accept

The customer shows the QR on their phone. Scan it, check the name matches the person in front of you, then tap Accept order.

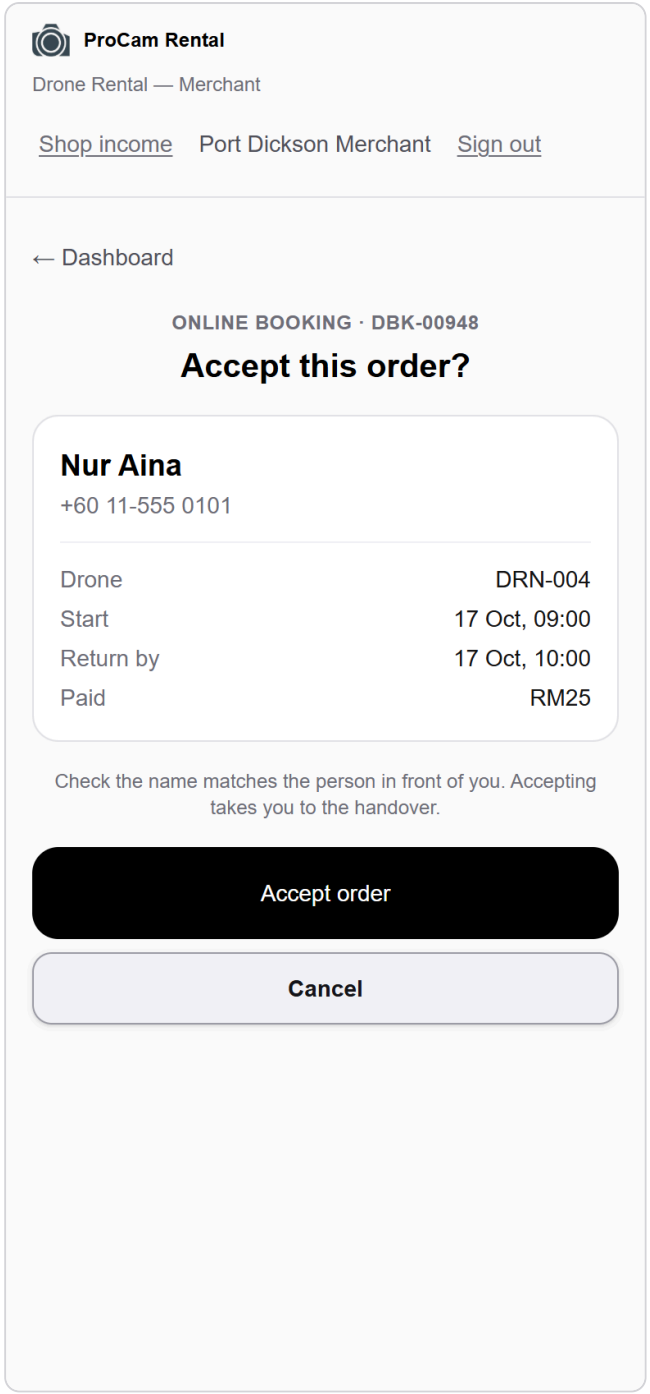


3

ONLINE BOOKING

Check what goes out, take the first photo

The handover page says who it's for and what goes out: the drone, the controller if they rented one (an RC-N3 such as CTR-001, or the goggles set GOG-001) and the batteries to give, by name (B1, B2). Tap which charged batteries you are handing over. Every rental needs 2 photos, one per page. The first is on this page: the drone from above with its controller, both switched on (or the drone alone for a phone-only rental).

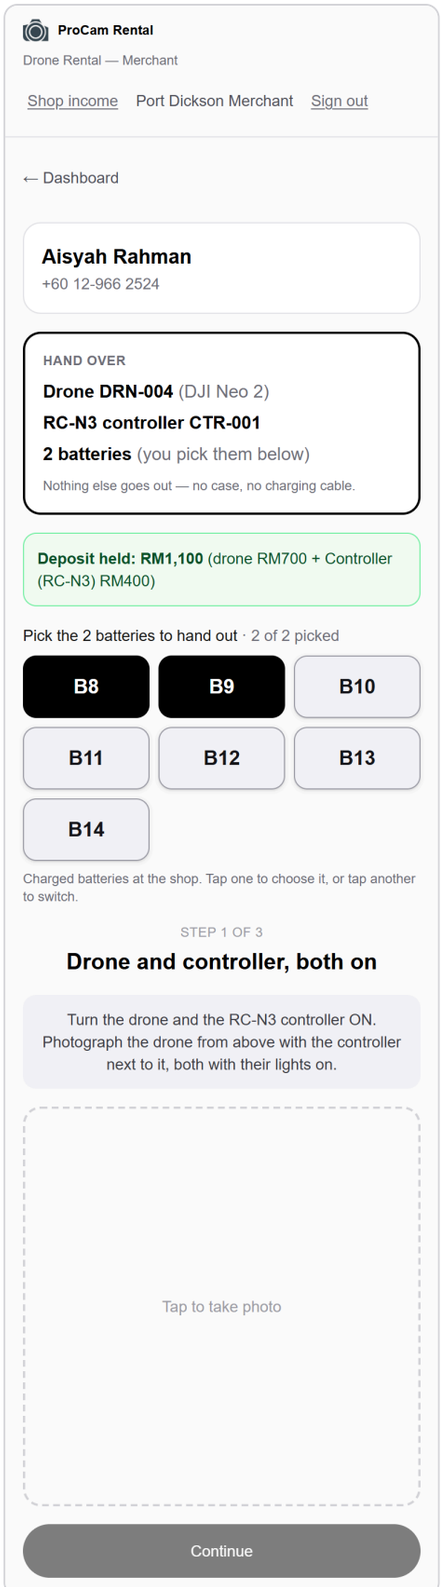


4

ONLINE BOOKING

The second photo

Front and camera: the front of the drone, close up on the camera and gimbal. Take it, check it shows, then Continue. Back keeps the photo you already took.

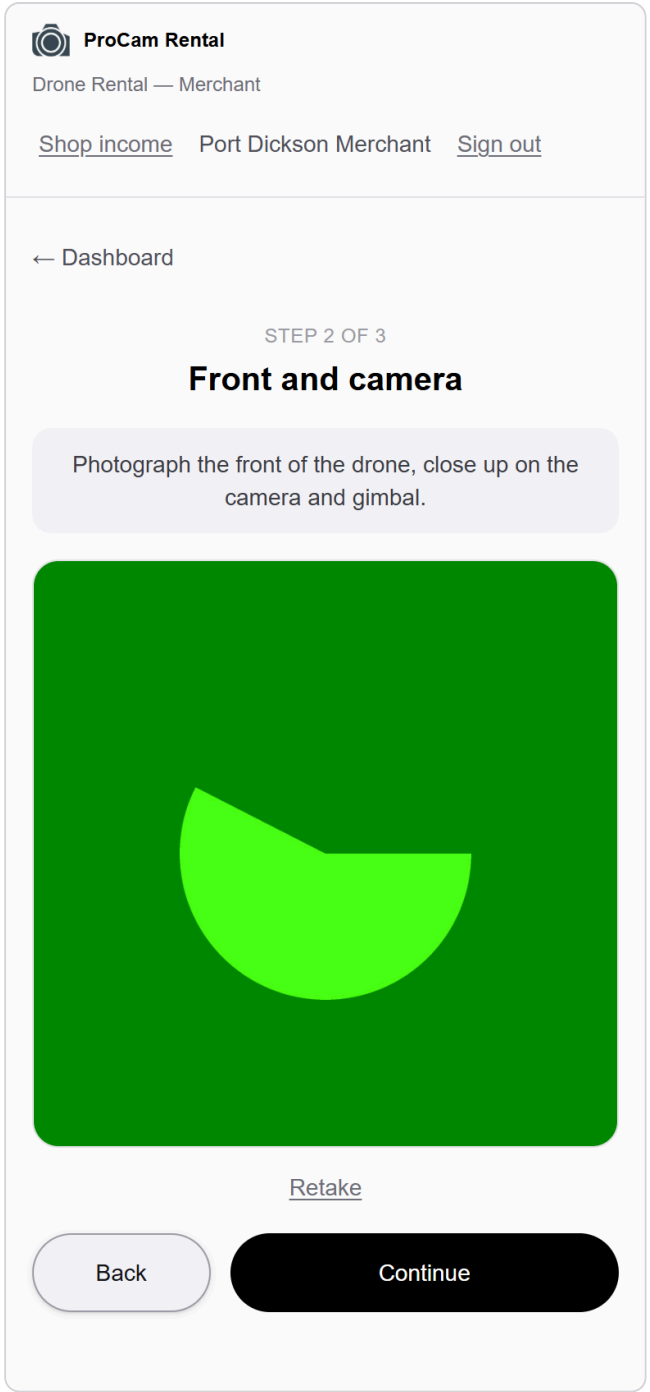


5

ONLINE BOOKING

Checklist and the customer's name

After the 2nd photo: tick the checklist, have the customer type their name, then tap Confirm handover. The rental starts.

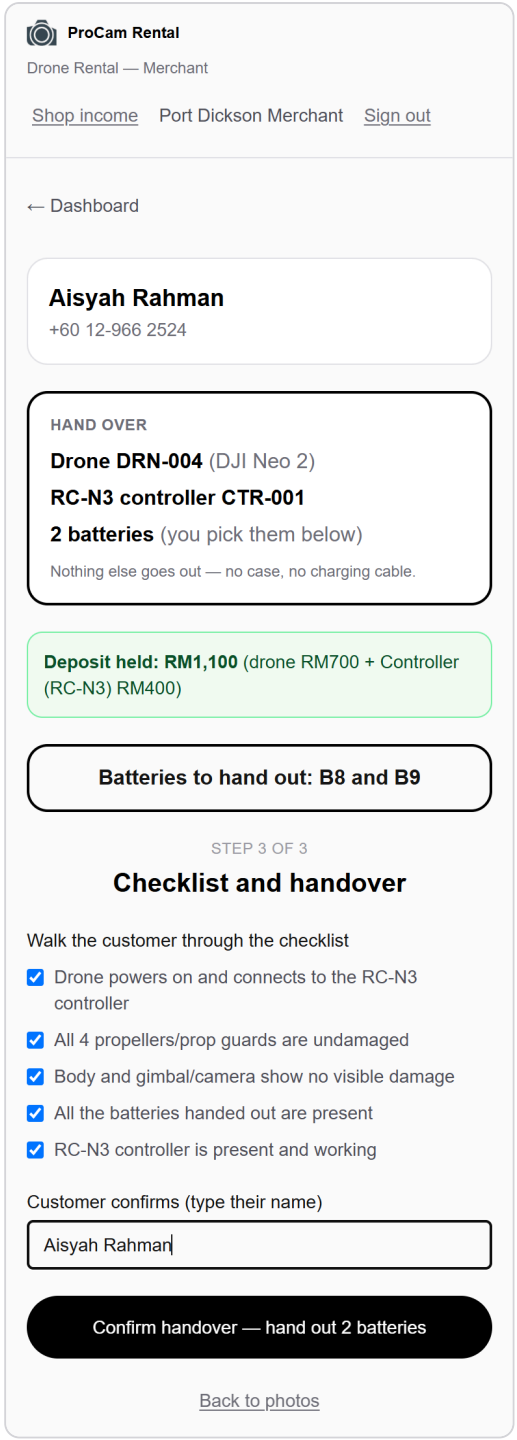


6

ONLINE BOOKING

Keep an eye on rentals while the drone is out

Each rental on your dashboard shows the customer, the drone, its controller and the batteries they are holding. Due-back time is shown too.

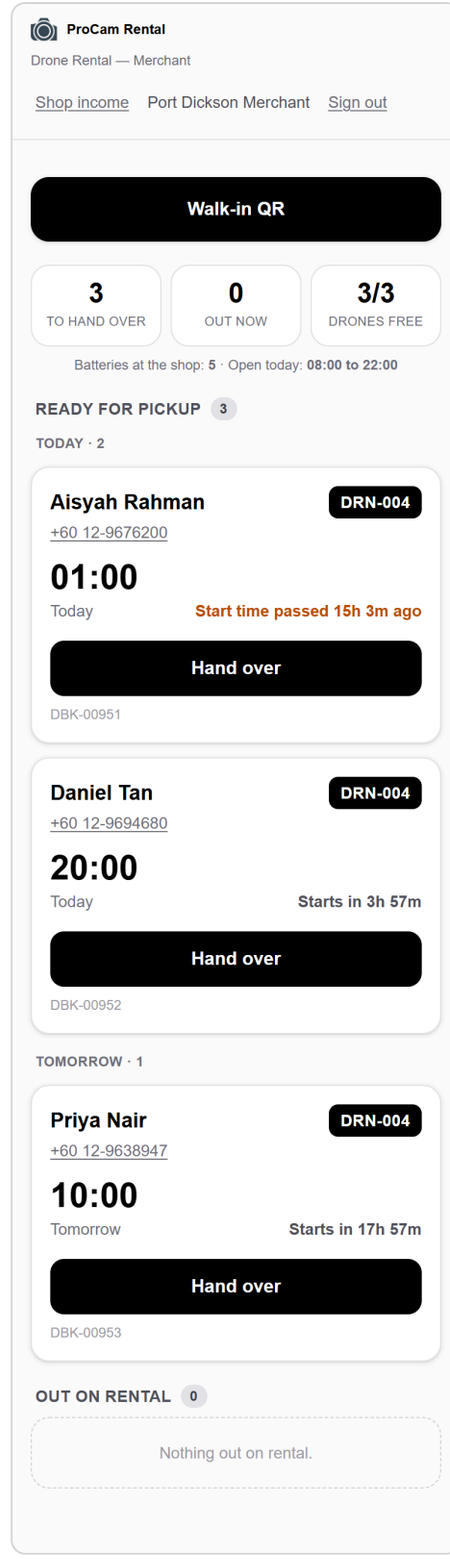


7

ONLINE BOOKING

Take everything back

Tap Return. The top of the page lists what to take back: the controller (if they rented one) and the named batteries the customer is holding. The same 2 photos are taken again, one per page.

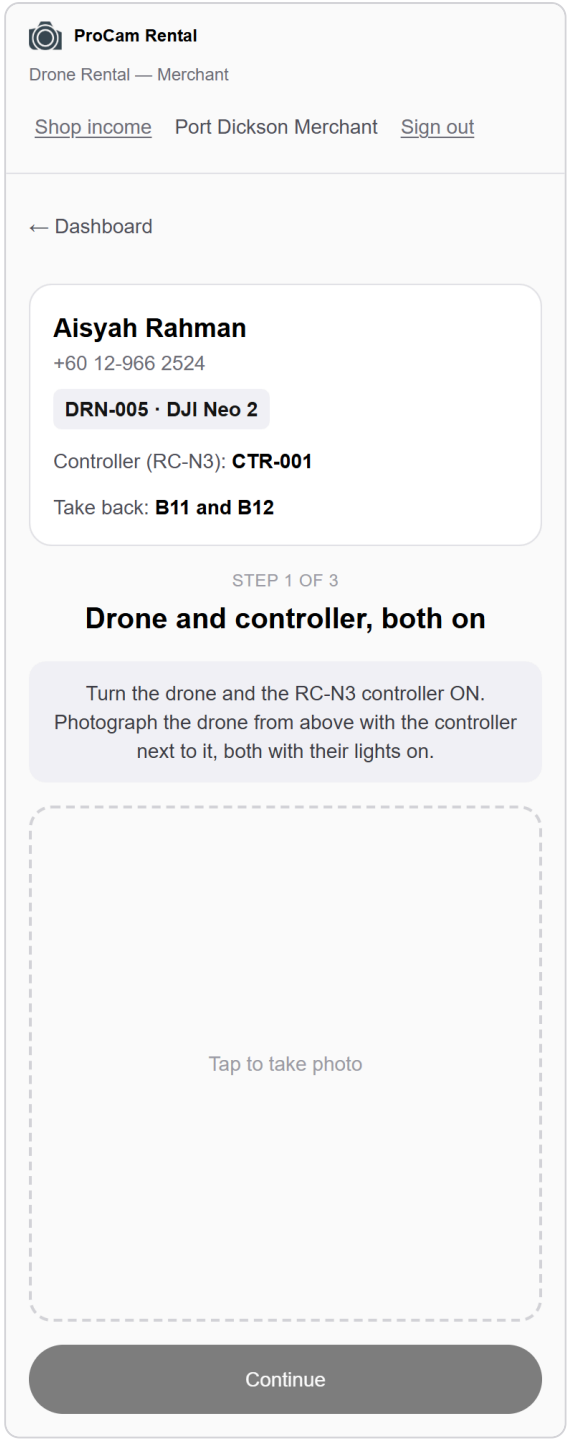


8

ONLINE BOOKING

Checklist and deposit

After the photos: tick the checklist, then say how the drone and the controller (if any) came back: Fine, Damaged or Lost. A lost item is kept from the deposit in full. For Damaged you type no amount: write what is damaged and ProCam reviews it that night and decides what to keep; the whole deposit stays held until then. At the bottom, choose how a late fee is paid (saved card or cash). It only applies if the drone is back past the grace time.

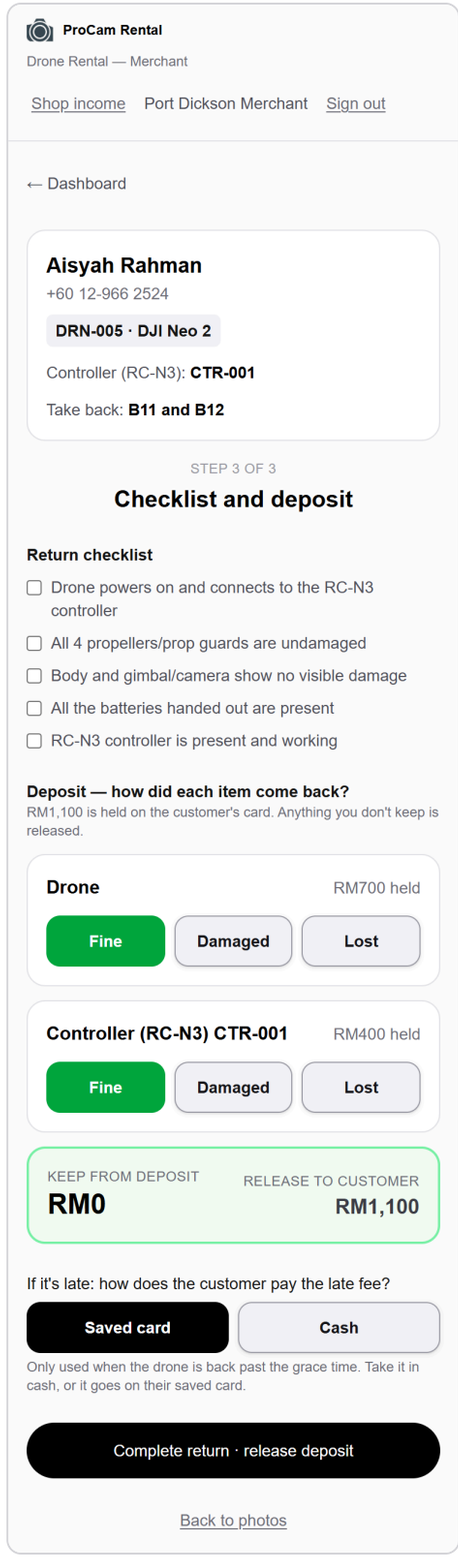


9

ONLINE BOOKING

Return complete

It confirms the outcome. The drone and batteries go back to available.

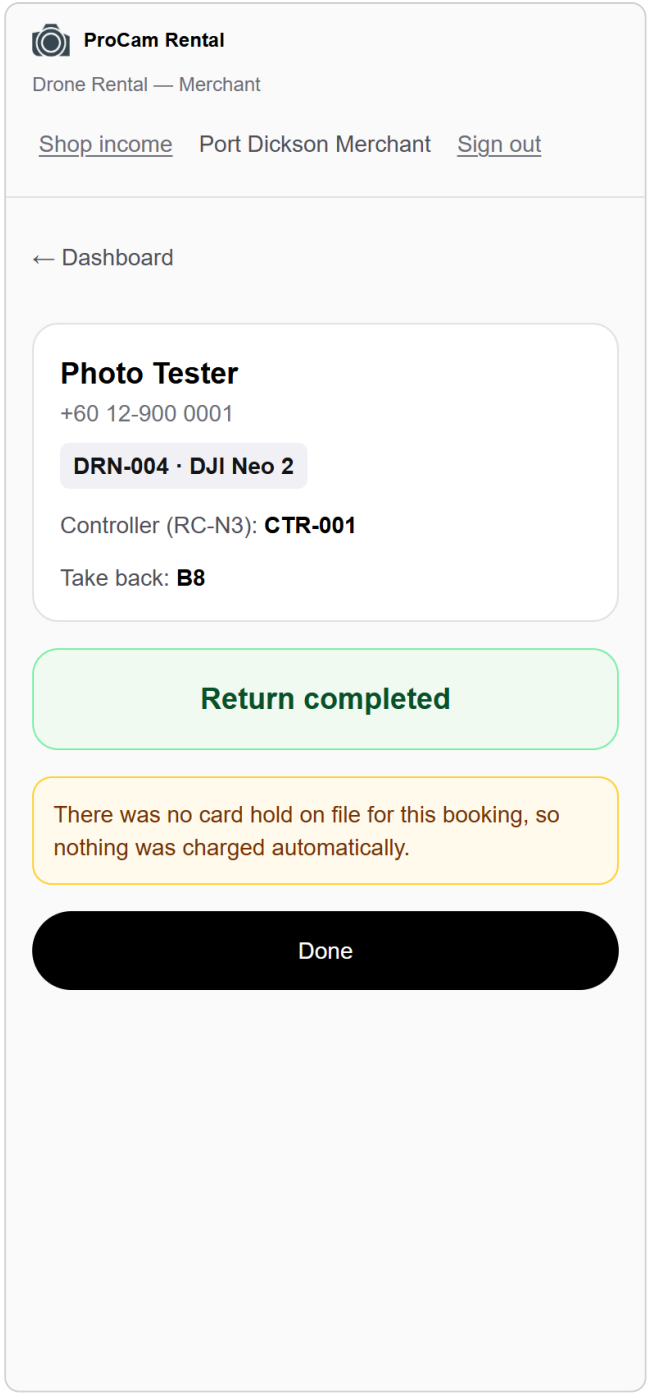

Walk-in booking

A customer with no booking. They scan the shop's walk-in QR and fill in their order on their own phone, you confirm it, take the payment, and then hand over the drone exactly as for an online booking.


6 SCREENS

10

WALK-IN BOOKING

Show the shop's walk-in QR

Open Walk-in QR from your dashboard and show it on the counter. The customer scans it and fills in their own details. It never changes.

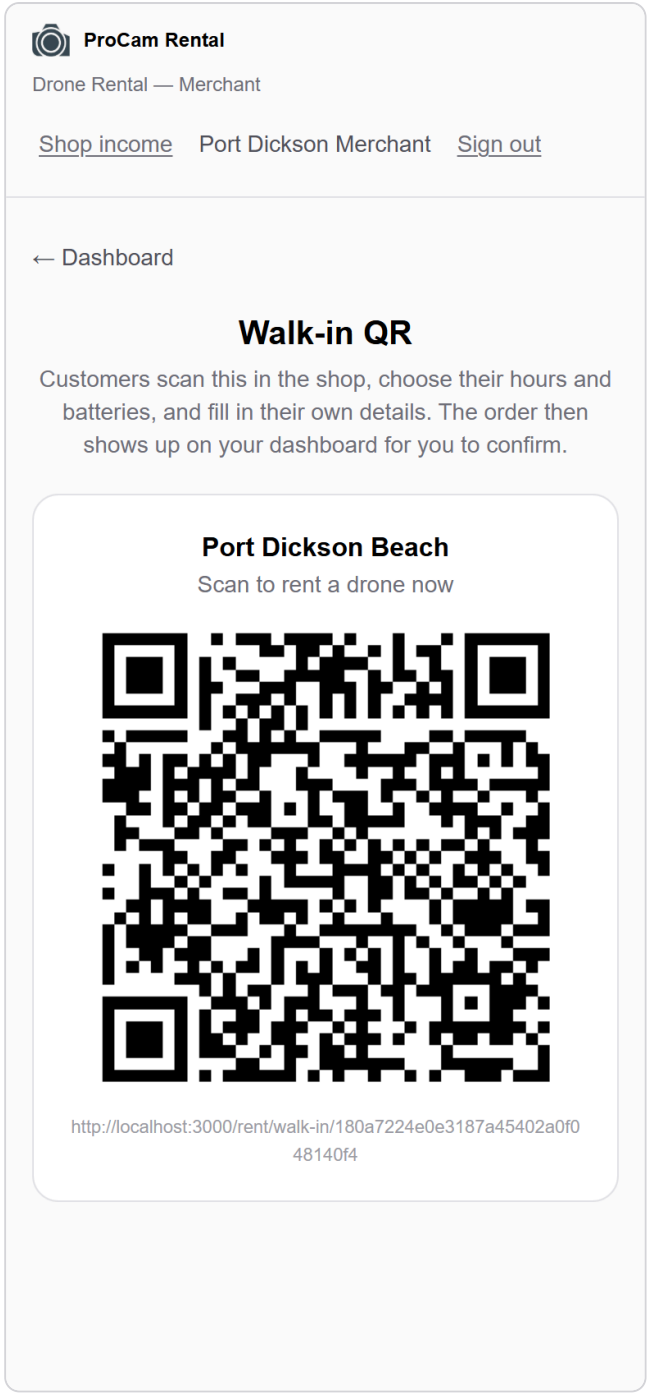


11

WALK-IN BOOKING

Their order arrives

A green Walk-in orders box appears on your dashboard. Tap Review & confirm.

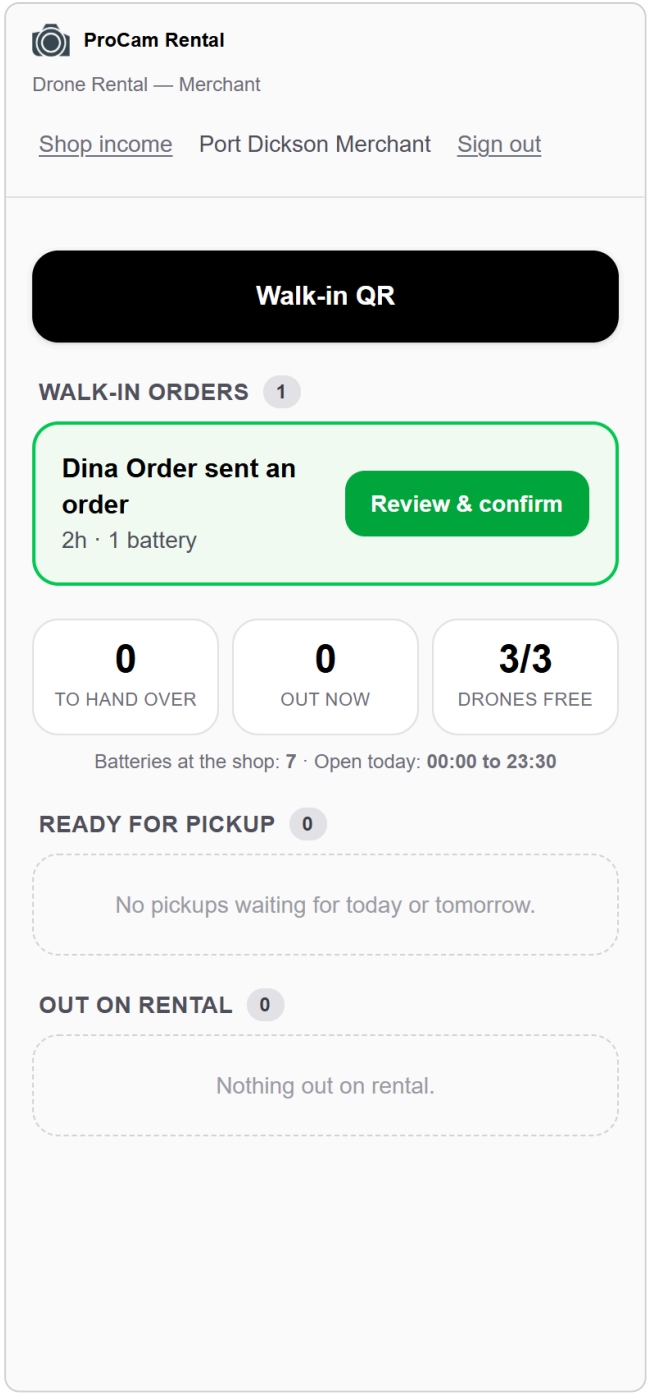


12

WALK-IN BOOKING

Check the name and confirm

Check the name against the person in front of you, then tap Confirm order. A free drone is assigned for you (there's nothing to choose), and the customer's phone moves on to payment.

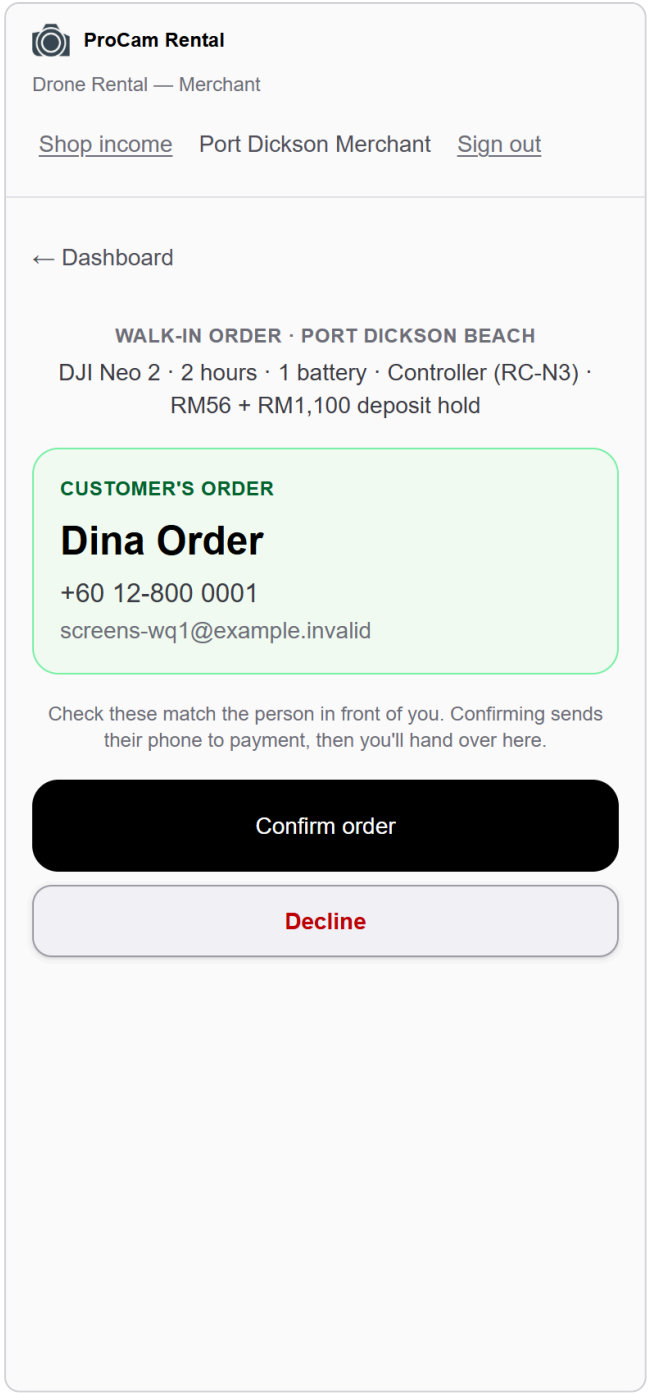


13

WALK-IN BOOKING

Customer pays by card

Their phone does the payment. This screen turns to Paid when it goes through. Tap Hand over the drone.

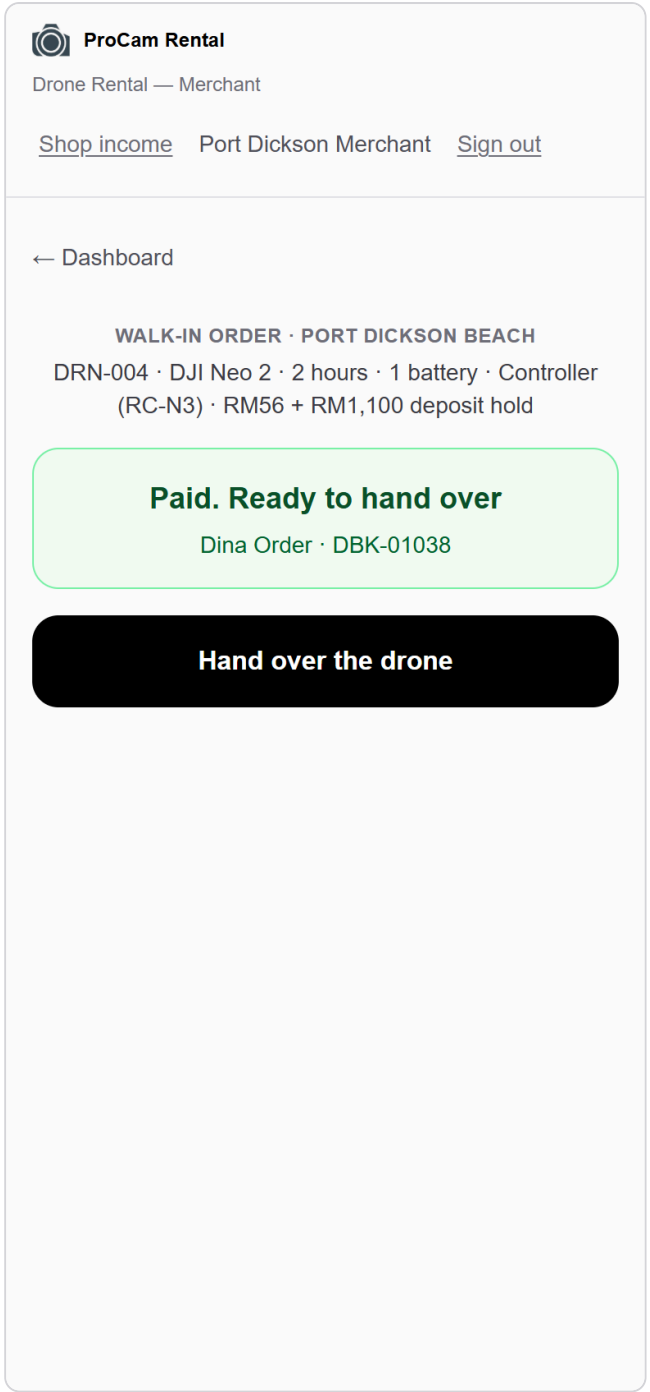


14

WALK-IN BOOKING

Or the customer pays cash

If they choose cash on their phone, they still enter their card for the deposit. Take the cash, then tap Customer paid in cash.

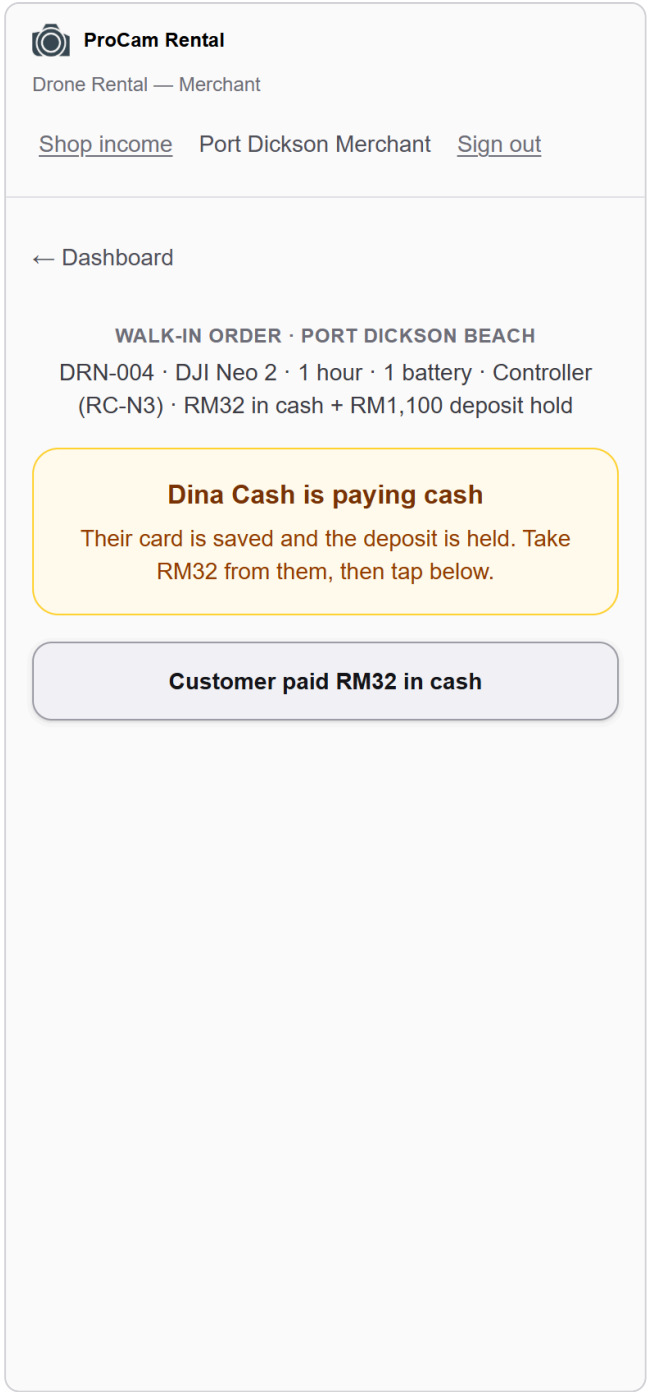


15

WALK-IN BOOKING

Cash taken

It now says Paid in cash. Tap Hand over the drone, then do the handover steps of the online booking (what goes out, the photos, the checklist and the customer's name), exactly the same.

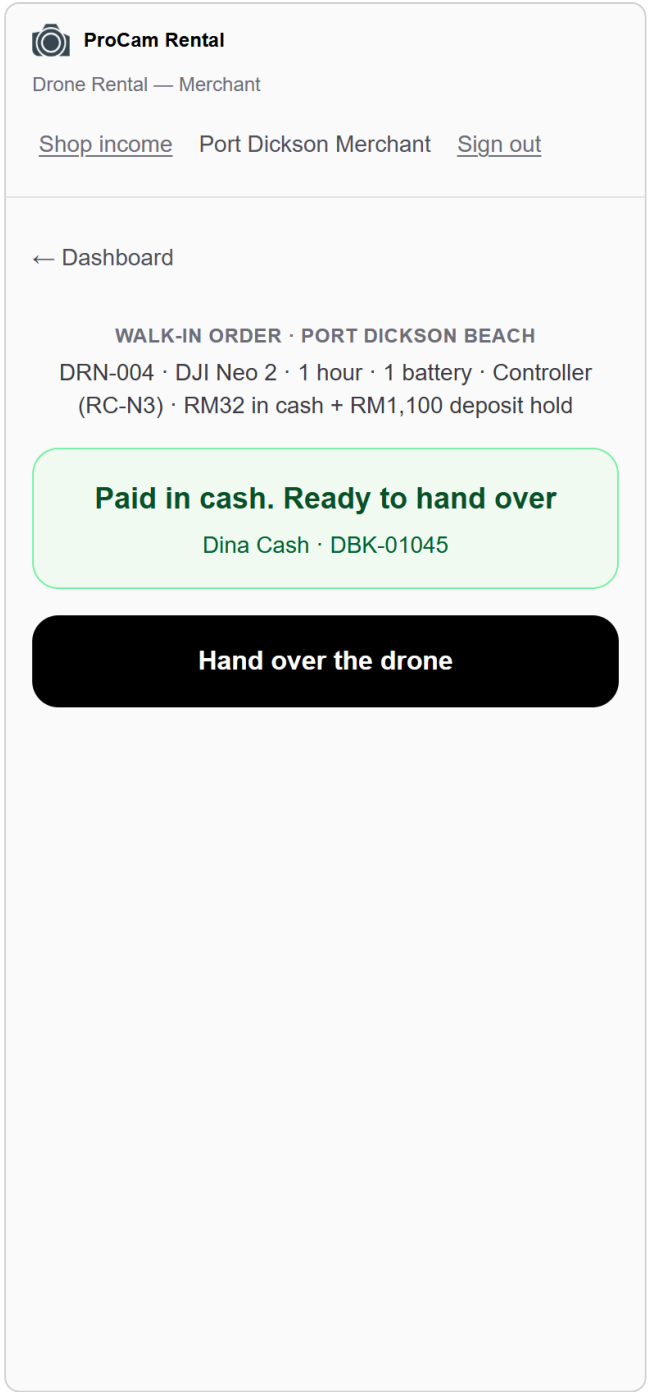

Miscellaneous

Everything else a merchant uses: signing in, the dashboard, a deposit that isn't held, swapping a battery, and your earnings.


9 SCREENS

16

MISCELLANEOUS

Sign in

Sign in with the username and password the admin gave you. You land on your dashboard.

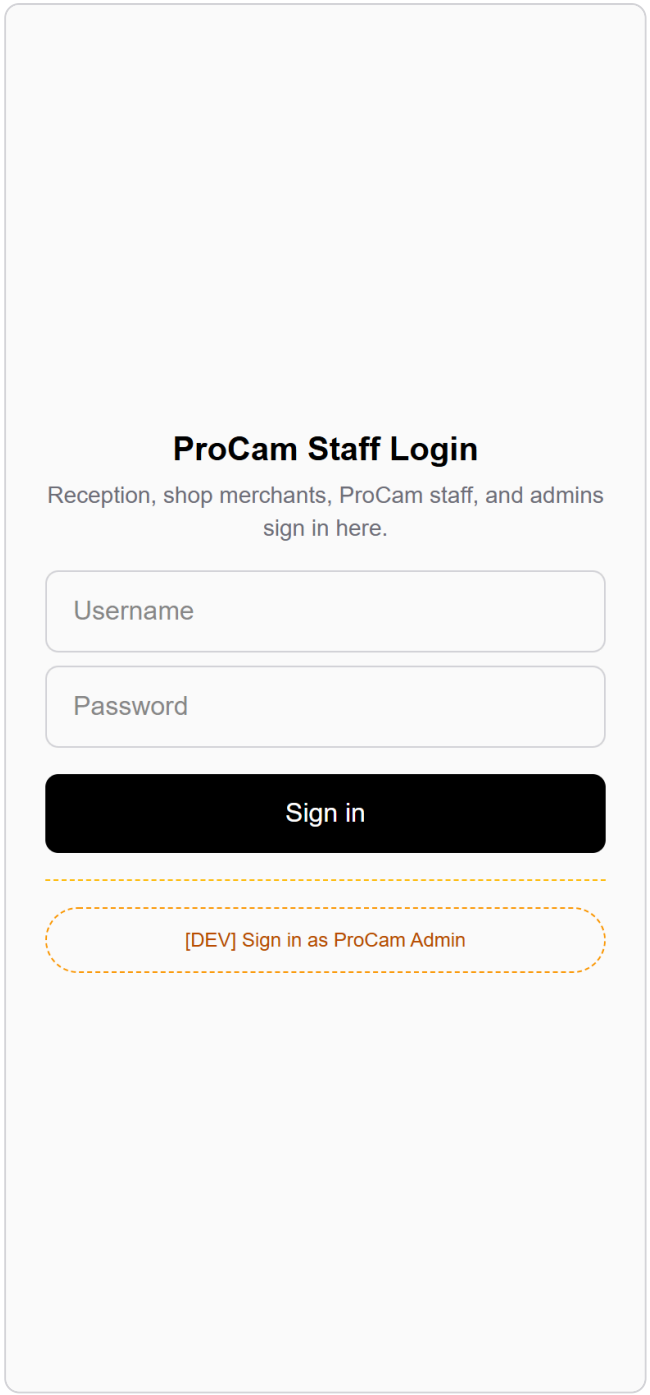


17

MISCELLANEOUS

Your batteries and your opening hours

The line under the counts says how many batteries are on your shelf, and today's opening hours for your shop, as the admin set them. Customers can only book inside those hours, and your shop shows as closed for walk-ins and battery swaps outside them.

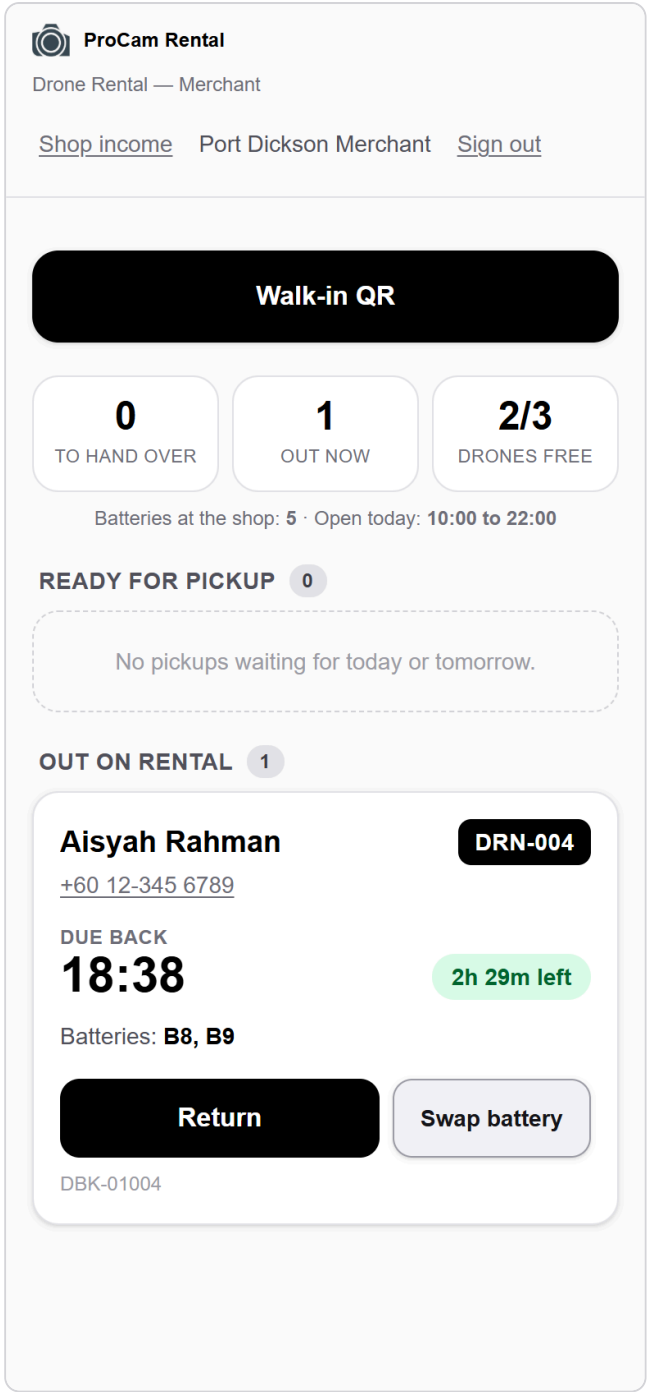


18

MISCELLANEOUS

Check who is coming

The pickup list shows today and tomorrow only, soonest first. Walk-in orders that need you appear in a green box at the top. Online orders only appear once the customer has paid, so everything listed is paid for. Tap a booking when the customer arrives.

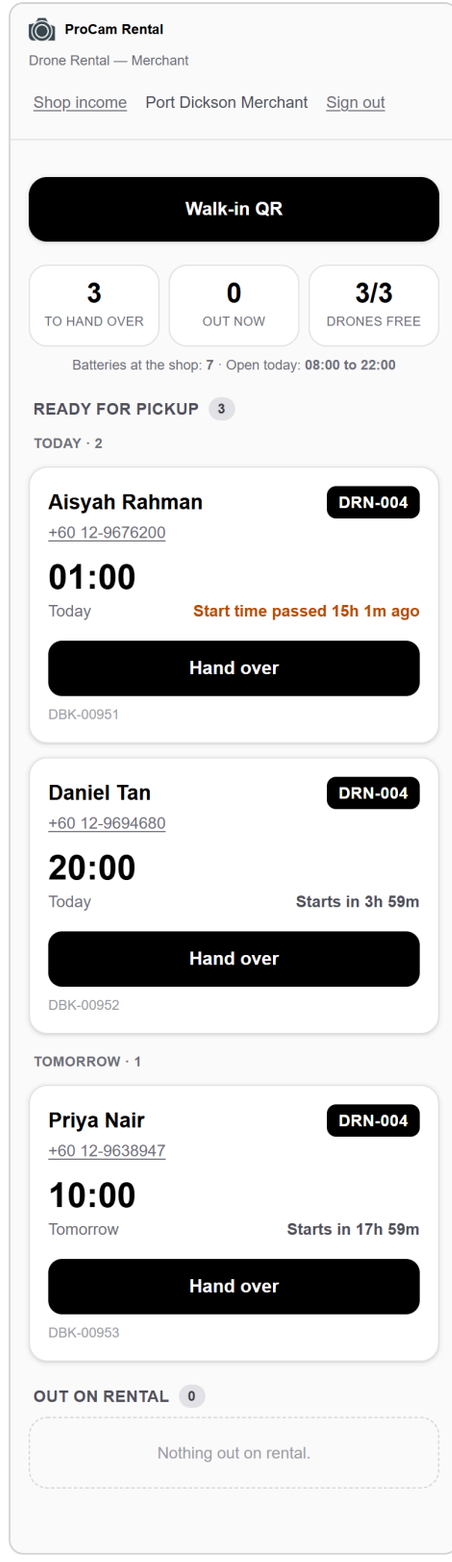


19

MISCELLANEOUS

If they rented the goggles

The handover then names the goggles set (GOG-001) and the first photo shows the drone with the goggles and the Motion 3 controller, all on. The checklist has a goggles item instead of the RC-N3 one.

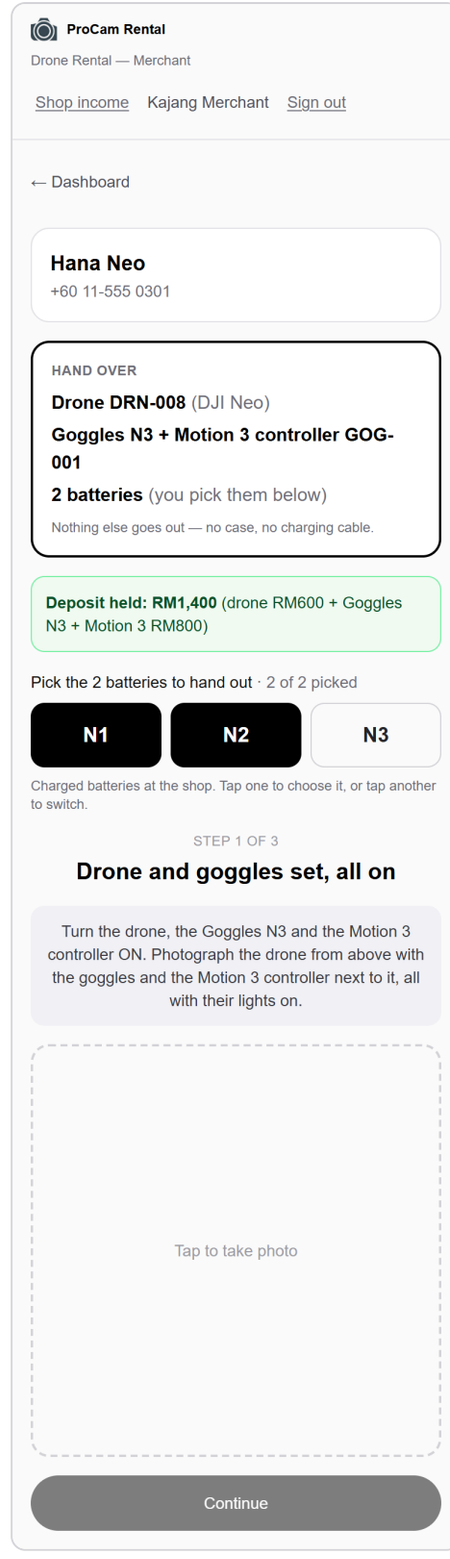


20

MISCELLANEOUS

Their swap QR: this is what you scan

A customer whose battery is finished taps Battery finished? Swap it at any shop on their phone, picks your shop and shows you this QR. They still bring the drone and all the batteries back to the shop they rented from.

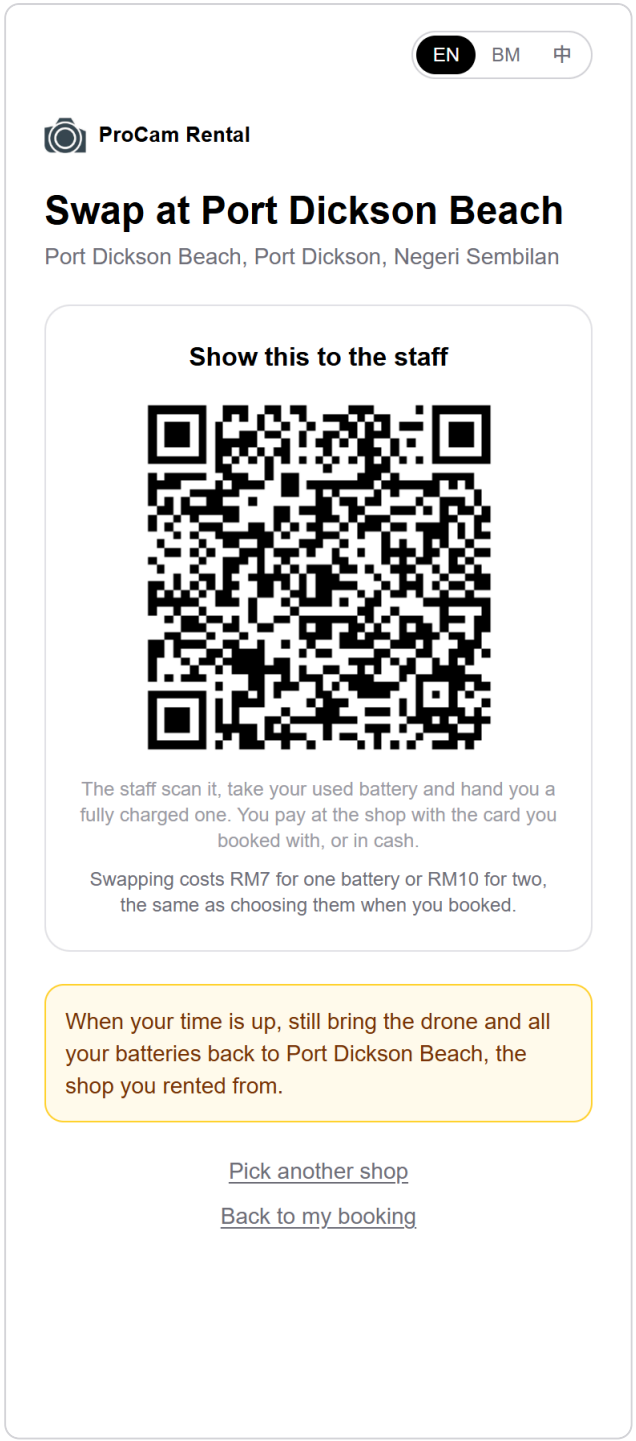


21

MISCELLANEOUS

Scan the QR to swap

Scanning that QR opens the swap screen for their rental. If they rented at another shop it says so. Tick the battery they hand back, give them a fully charged one from your shelf, and take the payment (card on file or cash). Their used battery simply stays with you: all the batteries are the same. The swap fee goes to your shop's income.

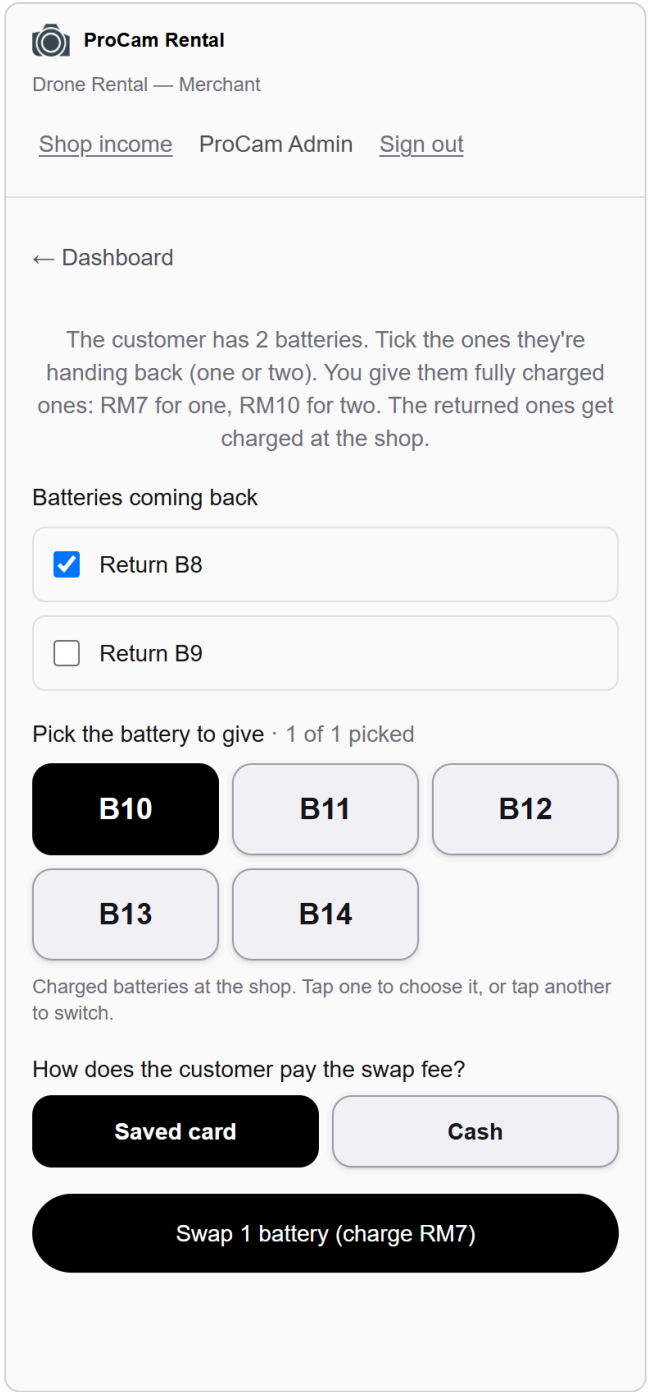


22

MISCELLANEOUS

Swapping for your own customer

Tap Battery swap. Tick the batteries they hand back, then tap the same number of charged batteries to give them. The fee is shown on the button (RM7 for one battery, RM10 for two).

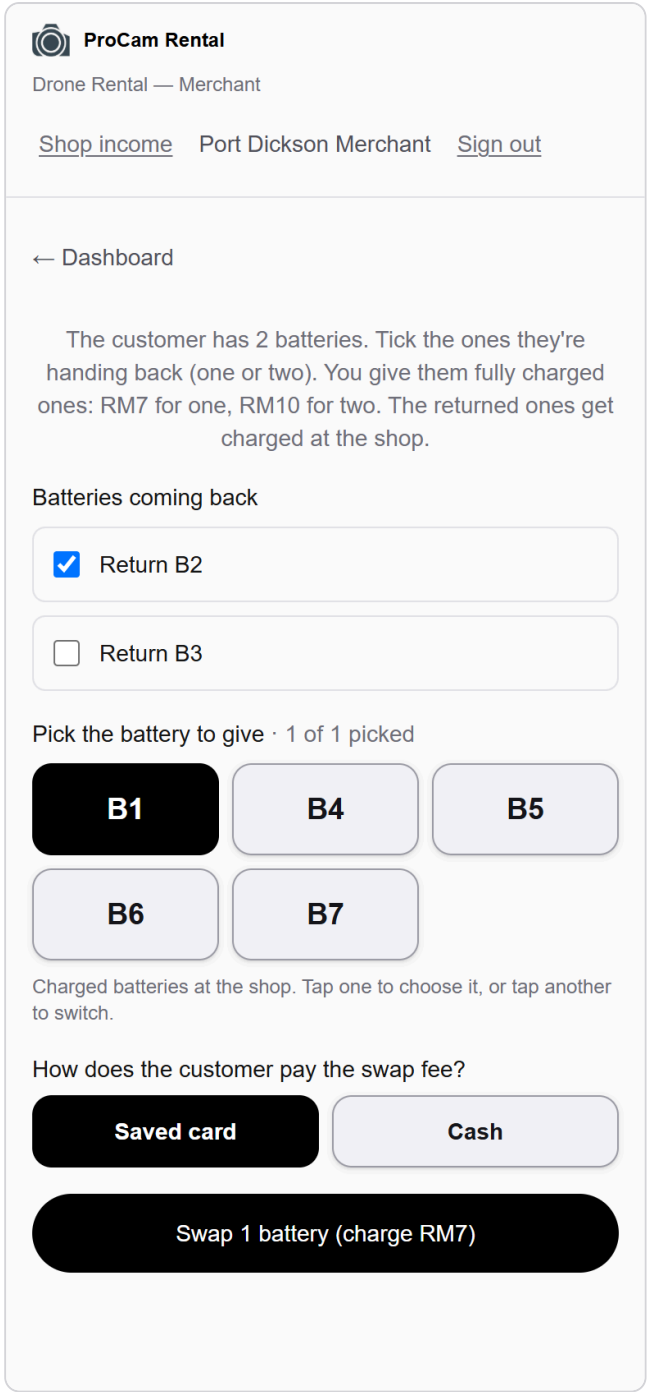


23

MISCELLANEOUS

How they pay for the swap

Choose Saved card (charged for you) or Cash. If it's cash, take the money before you hand over the batteries. This is separate from how they paid the rental.

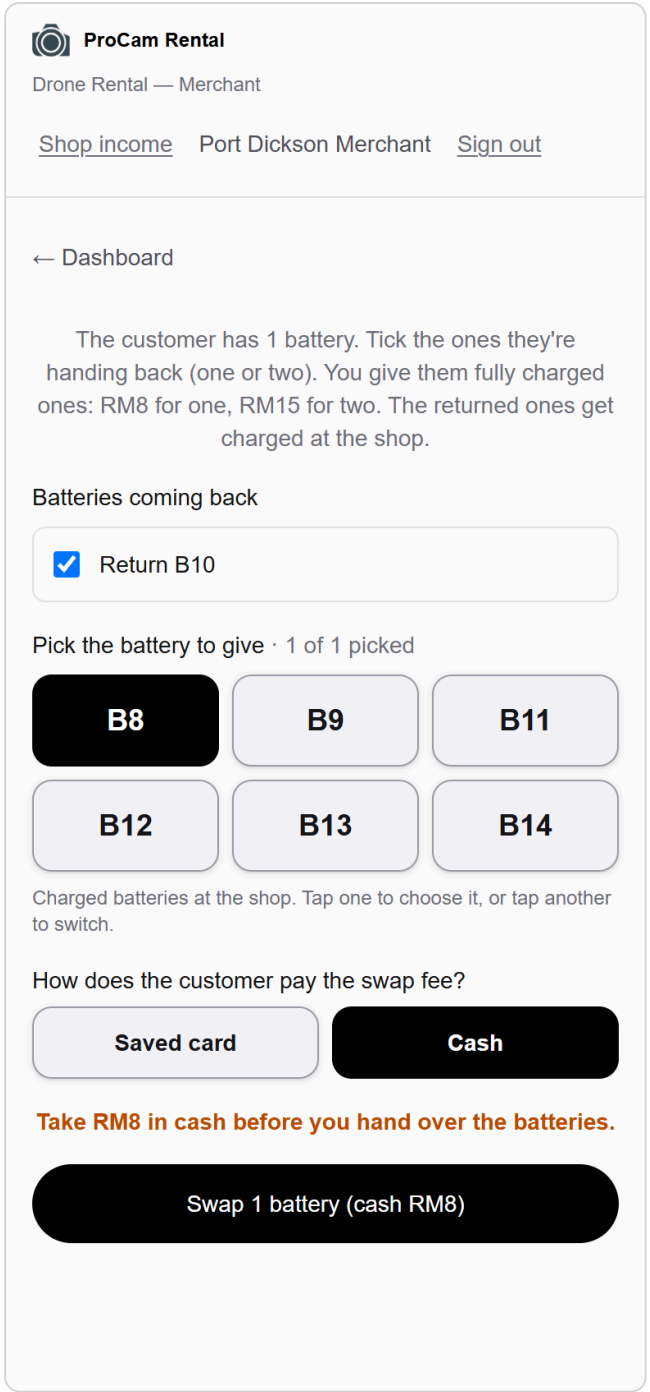

24

MISCELLANEOUS

Check Shop income

Tap Shop income at the top of any page. Your earnings this month are at the top, with how they are worked out. Tap the i next to a cost to see what it is. Below is the sales analysis. On that page the same link turns into Home.

