


MultiMount Weigh Module » Installation Guide

METTLER TOLEDO




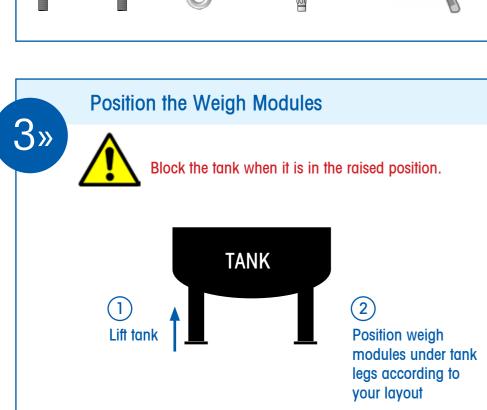

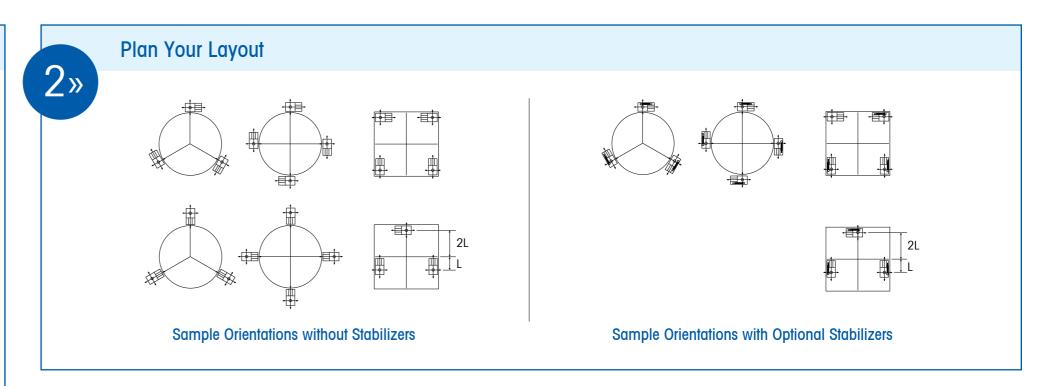


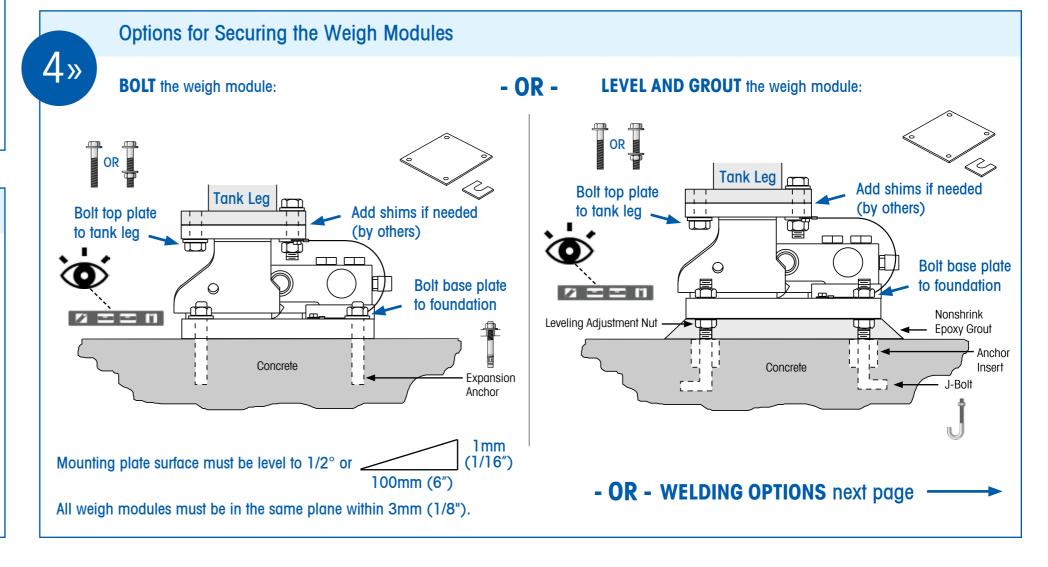


MultiMount Weigh Module » Installation Guide

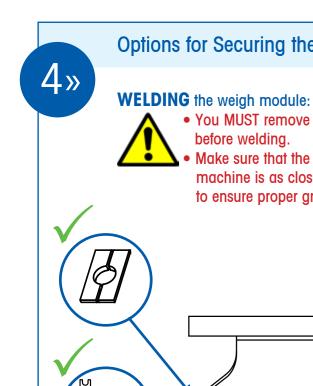

Options for Securing the Weigh Modules




 Make sure that the ground wire of the welding machine is as close to the weld seam as possible to ensure proper grounding.

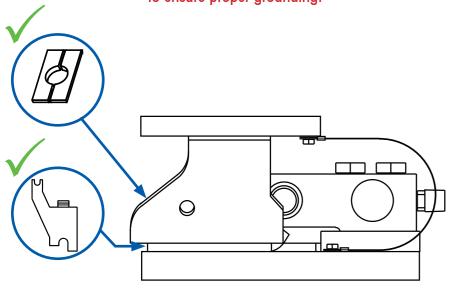



LOAD CELL REMOVAL: Contact an authorized METTLER TOLEDO service technician for information about proper removal and re-installation of load cells.

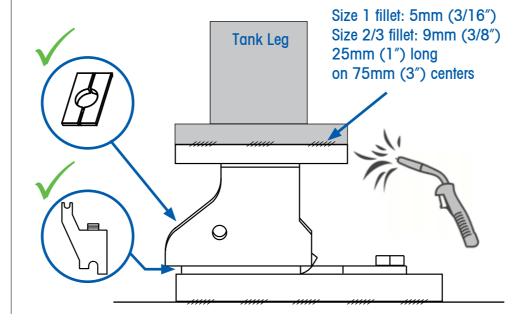



Contact an authorized METTLER TOLEDO service technician to activate the weigh modules for startup and calibration.

Installation Tips and Precautions:

- Never extend or cut the load cell's cable length.
- Avoid moisture and dust.
- Ensure voltage stability (use regulated power supply).
- Avoid overload and shock.
- Ensure good grounding.
- For hazardous area installations in Europe, refer to the enclosed instructions (175389R).

Contact Information:

www.mt.com/contact

