
Spare Parts List



LKH-25 Centrifugal Pump

Alfa Laval

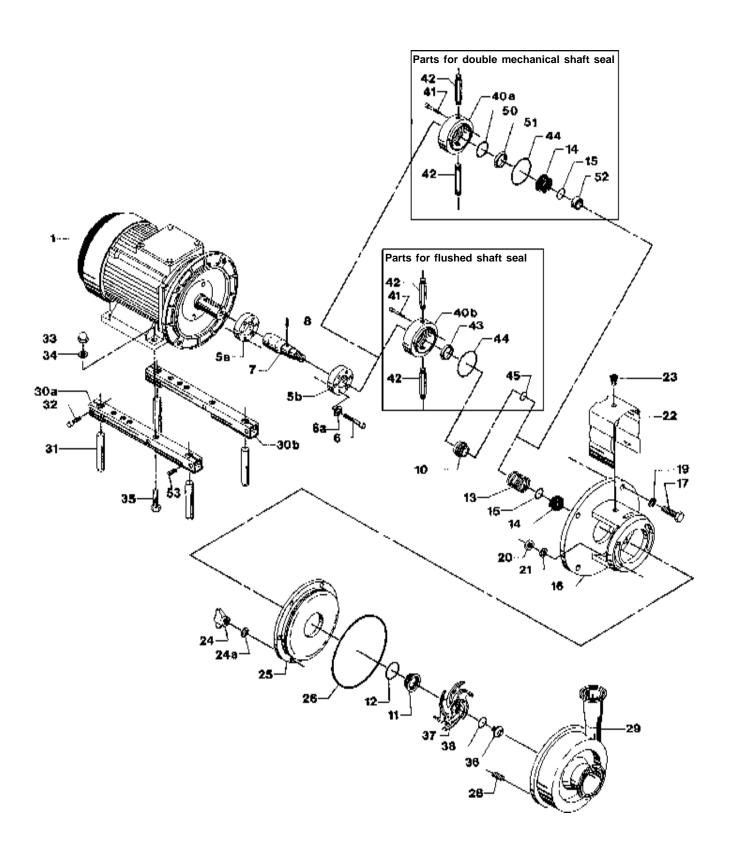

Page 2 of 4	0300
Version 1	_

Centrifugal Pump LKH-25

Pos.	Qty.	Description	3-5 Hp Part No.	7.5-10 Hp Part No.	15-20 Hp Part No.
1	1	Motor			
5a	1	Compression ring with thread	9612-13-3602	9612-13-3606	9612-13-3603
5b	1	Compression ring without thread		9612-13-3706	9612-13-3703
6	6	Screw	9611-99-3196	9611-99-2338	9611-99-2338
6a	6	Washer	9611-99-3199	9611-99-3199	9611-99-3199
7	1	Stub shaft		9612-13-3202	9612-13-3302
8	1	Connex pin		9611-99-0622	9611-99-0622
10	1	Drive ring - single shaft seal		9612-13-7701	9612-13-7701
	1	Drive ring - flush shaft seal		9612-13-9701	9612-13-9701
11àø♦□○	1	Stationary seal ring, SC	9612-13-7901	9612-13-7901	9612-13-7901
12àø♦□○ ♦	1	Stationary O-ring, EPDM (standard)		9611-99-2149	9611-99-2149
	1	Stationary O-ring, FPM	9611-99-2150	9611-99-2150	9611-99-2150
	1	Stationary O-ring, NBR	9611-99-2151	9611-99-2151	9611-99-2151
40 4	1	Stationary O-ring, PTFE	9611-99-2152	9611-99-2152	9611-99-2152
13àø♦□○	1	Spring	9612-13-7601	9612-13-7601	9612-13-7601
14àø□ O	1	Rotating seal ring, Carbon		9612-13-6401	9612-13-6401
♦ \$	1 2	Rotating seal ring, SCRotating seal ring, Carbon	0612 12 6404	9612-13-6402	9612-13-6402
▼❖	2			9612-13-6401	9612-13-6401
15àø□ ○	1	Rotating seal ring, SCRotating O-ring, EPDM (standard)		9612-13-6402 9611-99-2145	9612-13-6402 9611-99-2145
13aøu O	1	Rotating O-ring, EPDM (standard)		9611-99-2146	9611-99-2146
	1	Rotating O-ring, NBR	0611-00-2147	9611-99-2147	9611-99-2147
	1	Rotating O-ring, PTFE		9611-99-2148	9611-99-2148
♦ ♦	2	Rotating O-ring, EPDM (standard)		9611-99-2145	9611-99-2145
▼	2	Rotating O-ring, FPM		9611-99-2146	9611-99-2146
	2	Rotating O-ring, NBR		9611-99-2147	9611-99-2147
	2	Rotating O-ring, PTFE		9611-99-2148	9611-99-2148
16	1	Adaptor		9612-13-5912	9612-13-5913
17	4	Adaptor screw		881-30173	881-30173
19	4	Adaptor spring washer		881-29835	881-29835
20	2	Adaptor nut		9611-99-0353	9611-99-0353
21	2	Washer	9611-99-2559	9611-99-2559	961199-2559
22	1	Safety guard	9612-13-1106	9612-13-1107	9612-1-31108
23	1	Safety guard screw		31460-1309-1	31460-1309-1
24	6	Wingnuts		9611-41-6892	9611-41-6892
24a	6	Spring washer		9611-99-1888	9611-99-1888
25	1	Back plate polished		9612-13-8426	9612-13-8426
26□ ○ ∻	1	Joint ring, EPDM (standard)	9611-99-2983	9611-99-2983	9611-99-2983
	1	Joint ring, FPM		9611-99-2985	9611-99-2985
	1	Joint ring, NBR		9611-99-2984	9611-99-2984
00	1 6	Joint ring, PTFE Stud bolt		9611-99-2986	9611-99-2986
28 29	1			9611-99-2169	9611-99-2169 883-39448
29 30a-35	1	Pump casingLeg assembly	663-39446	883-39448 314-60-13014	31460-1302-3
36 36	1	Impeller screw		9612-13-9603	9612-13-9603
37	1	Impeller polished, full		9612425216	9612425216
38□○ ♦	1	Impeller O-ring, EPDM (standard)		9611-99-2145	9611-99-2145
004 9 4	i	Impeller O-ring, FPM	9611-99-2146	9611-99-2146	9611-99-2146
	i	Impeller O-ring, NBR	9611-99-2147	9611-99-2147	9611-99-2147
	1	Impeller O-ring, PTFE		9611-99-2148	9611-99-2148
40a	i	Seal housing - double mechanical		9612-13-3902	9612-13-3902
40b	1	Seal housing - flushed		9612-13-3901	9612-13-3901
41	2	Screw for seal housing		9611-99-0203	9611-99-0203
42	2	Water flush pipe		31457-0056-1	31457-0056-1
43ø0	1	Lip seal	31446-0088-2	31446-0088-2	31446-0088-2
44ø♦○ ♦	1	Seal housing O-ring		9611-99-2153	9611-99-2153
45ø0	1	Drive ring O-ring		9611-99-2145	9611-99-2145
50♦ ♦	1	O-ring	9611-99-5156	9611-99-2156	9611-99-2156
51♦ ∻	1	Sec. stationary seal ring, SC	9612-13-8302	9612-13-8302	9612-13-8302
52♦ ∻	1	Spacer	0010 00 0001	9612-30-8901	9612-30-8901

Parts marked with a, o, \blacklozenge are included in the seal kits.

Parts marked with $~a,~\phi,~ \blacklozenge,~ \Box,~ \circlearrowleft,~ \diamondsuit$ are included in the service kits.

Recommended Spare Parts: Service kits

Alfa Laval

Page 3 of 4	0300
Version 1	

Alfa Laval

	04	Proportion	1-40 Hp
os.	Qty.	Description	Part No.
Seal F	_	ingle Shaft Seal	0040 4000 00
ì	1	C/SC seal kit, EPDM	
i	1	C/SC seal kit, NBR	
ı	1	C/SC seal kit, FPM	9612-1296-11
1	1	SC/SC seal kit, EPDM	9612-1296-05
à	1	SC/SC seal kit, NBR	9612-1296-06
ı	1	SC/SC seal kit, FPM	9612-1296-07
	E		
		ushed Shaft Seal	0040 4000 00
ð	1	C/SC seal kit, EPDM	
i	1	C/SC seal kit, NBR	
5	1	C/SC seal kit, FPM	9612-1296-11
5	1	SC/SC seal kit, EPDM	9612-1296-05
5	1	SC/SC seal kit, NBR	9612-1296-06
, 5	1	SC/SC seal kit, FPM	
_		·	
Seal F		ouble Mechanical Shaft Seal	0040 4000 40
•	1	C/SC seal kit, EPDM	
•	1	C/SC seal kit, NBR	
•	1	C/SC seal kit, FPM	9612-1296-15
•	1	SC/SC seal kit, EPDM	9612-1296-17
•	1	SC/SC seal kit, NBR	9612-1296-18
•	1	SC/SC seal kit, FPM	9612-1296-19
		with \hat{a} , \emptyset , \blacklozenge are included in the seal kits.	
		or Single Shaft Seal	0044 00 0400
ב	1	Service kit, EPDM	
<u> </u>	1 1	Service kit, EPDMService kit, NBR	9611-92-2183
)))	1 1 1	Service kit, EPDM	9611-92-2183 9611-92-2184
)))	1 1	Service kit, EPDMService kit, NBR	9611-92-2183 9611-92-2184
)))	1 1 1 1	Service kit, EPDMService kit, NBRService kit, FPMService kit, PTFE	9611-92-2183 9611-92-2184
e e e Servic	1 1 1 1 ce <i>Kit fo</i>	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185
o o o Servic	1 1 1 1 ce <i>Kit fo</i>	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190
]]] Servic O	1 1 1 1 ce <i>Kit fo</i> 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191
o o o o o o o o	1 1 1 1 ce <i>Kit fo</i> 1 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192
Servic	1 1 1 1 ce <i>Kit fo</i> 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192
i i i Servio	1 1 1 1 ce <i>Kit fo</i> 1 1 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192
Service Service Service Service Service	1 1 1 1 ce <i>Kit fo</i> 1 1 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193
Service Service Service Service	1 1 1 1 ce <i>Kit fo</i> 1 1 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193
Servio	1 1 1 1 1 1 1 1 1 1 ce Kit fo	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193
Service Service Service Service Service Service	1 1 1 1 1 1 1 1 1 ce Kit fo	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193 9911-92-2226 9611-92-2227
Service Service Service Service Service Service Service	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193 9911-92-2226 9611-92-2227
Service Service So Service Service A A A A A A A A A A A A A A A A A A A	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, PTFE	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193 9911-92-2226 9611-92-2227
Service Ser	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 marked	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, NBR Service kit, NBR Service kit, NBR Service kit, PTFE with à, Ø, ♦, □, ○, ♦ are included in the service kits.	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193 9911-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Service Ser	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, NBR Service kit, NBR Service kit, PTFE with à, Ø, ♦, □, ○, ♦ are included in the service kits. Kits Single to flushed shaft seal	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-2193 9911-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Service Service So Service Ser	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, FPM Service kit, FPM Service kit, NBR Service kit, PTFE with à, Ø, ♠, □, ○, ❖ are included in the service kits. Kits Single to flushed shaft seal (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45)	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2193 9611-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Service Service So Service Ser	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 marked	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, NBR Service kit, PTFE With à, Ø, ◆, □, ○, ♦ are included in the service kits. Kits Single to flushed shaft seal (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) Single to double mechanical shaft seal	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2193 9611-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Service Service So Service Service A A A A A A A A A A A A A A A A A A A	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, PTFE with à, Ø, ♠, □, ○, ♦ are included in the service kits. Kits Single to flushed shaft seal (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) Single to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52)	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2193 9911-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Service Ser	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, PTFE with à, Ø, ♠, □, ○, ♦ are included in the service kits. (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) Single to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Flushed to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Flushed to double mechanical shaft seal	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2193 9911-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Gervio	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, PTFE with à, Ø, ♠, □, ○, ♦ are included in the service kits. Kits Single to flushed shaft seal (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) Single to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52)	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2193 9911-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Gervio	1 1 1 1 1 1 1 1 1 1 marked ersion F 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, PTFE with à, Ø, ♠, □, ○, ♦ are included in the service kits. (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) Single to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Flushed to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Flushed to double mechanical shaft seal	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2193 9911-92-2226 9611-92-2227 9611-92-2228 9611-92-2229
Service Service Service Service A A A A A A A A A A A A A A A A A A A	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Service kit, EPDM Service kit, NBR Service kit, FPM Service kit, PTFE Or Flushed Shaft Seal Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, PTFE Or Double Mechanical Shaft Seal Service kit, EPDM Service kit, EPDM Service kit, FPM Service kit, FPM Service kit, FPM Service kit, PTFE with à, Ø, ♠, □, ○, ♦ are included in the service kits. (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) Single to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Flushed to double mechanical shaft seal (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Flushed to double mechanical shaft seal	9611-92-2183 9611-92-2184 9611-92-2185 9611-92-2190 9611-92-2191 9611-92-2192 9611-92-226 9611-92-2227 9611-92-2228 9611-92-2229 9611-92-2175 9611-92-2176

Recommended Spare Parts: Service kits

Alfa Laval

Alfa Laval 8201 104th Street Pleasant Prairie, WI 53158-0909 Telephone: 800-558-2060 Fax: 262-947-4724

www.us.flow.alfalaval.com



Page 4 of4	0300
Version 1	