Production Supporting Systems in Factories

ระบบสนับสนุนการผลิตในโรงงานอุตสาหกรรม


Context

Scope


The scope of a particular context value.

- Node only visible to the node that set the value
- Flow visible to all nodes on the same flow (or tab in the editor)
- Global visible to all nodes

Use flow context to pass values

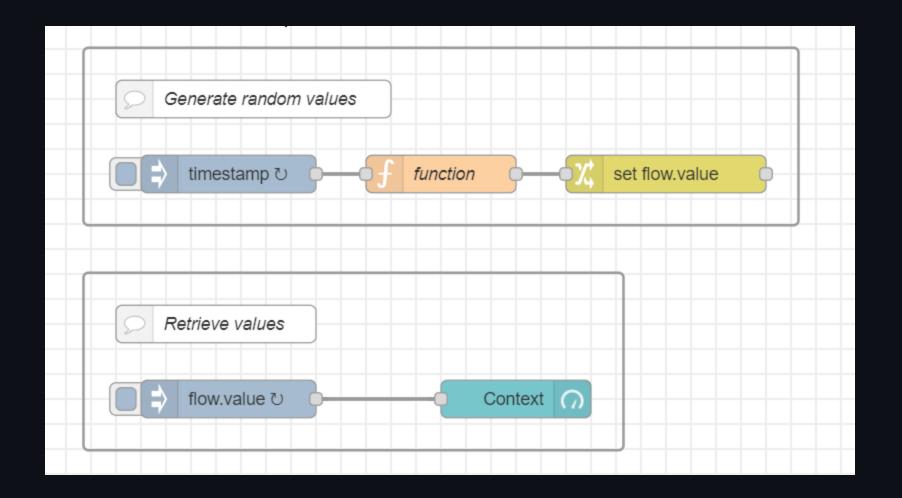


Upper inject node

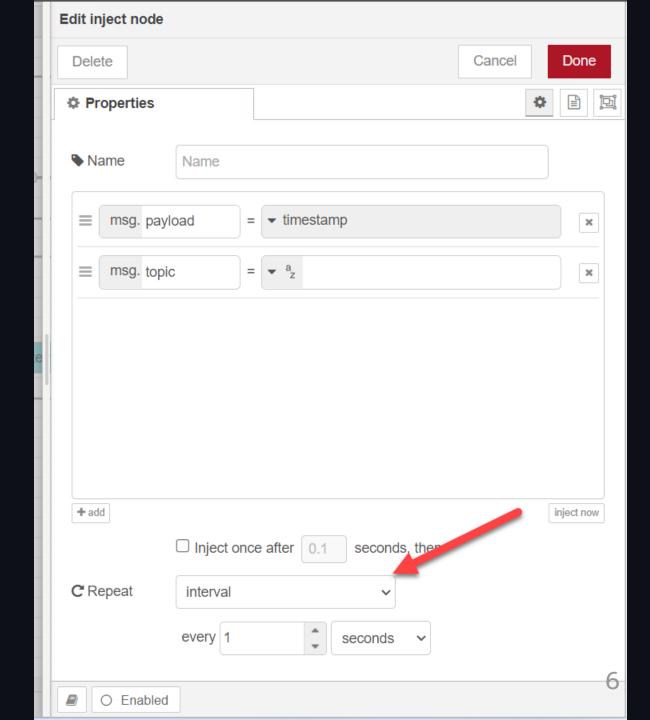


function node

```
msg.payload = Math.random();
return msg;
```

change node

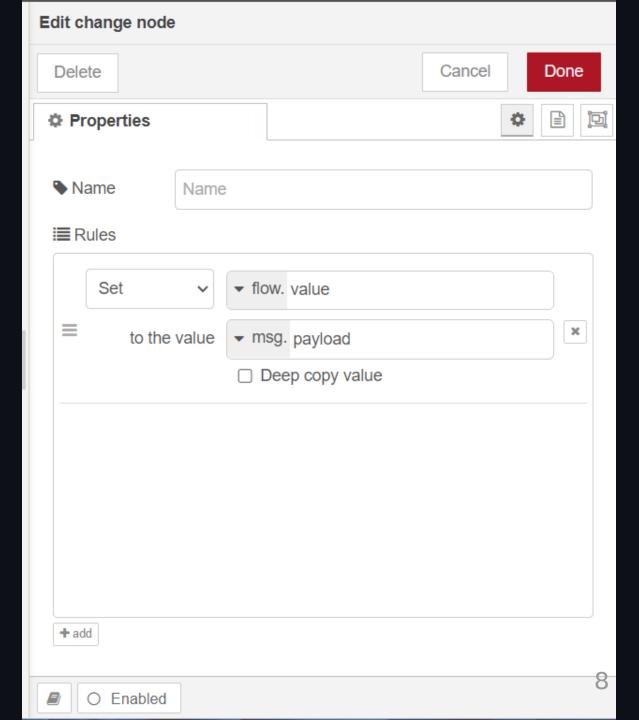


Lower inject node

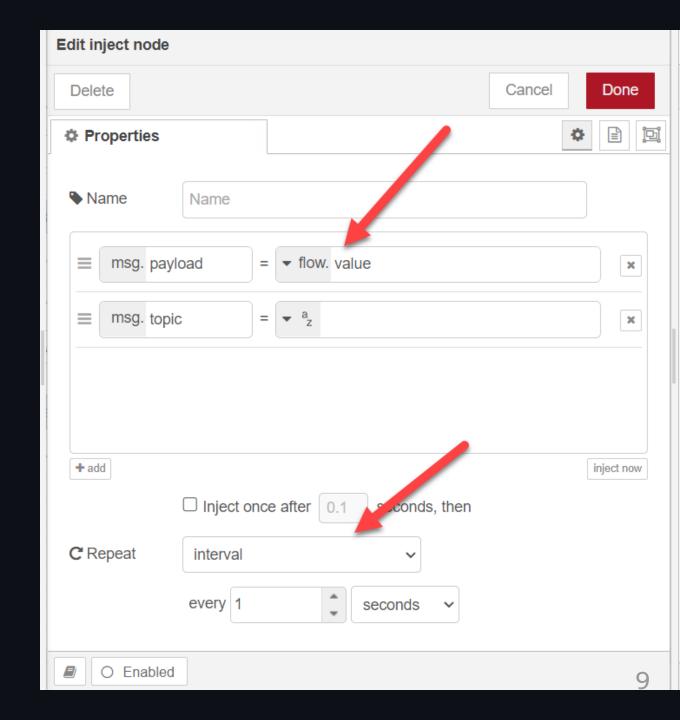


Side note

- You can use MQTT protocol to pass "context" information.
 - This is actually a better way.

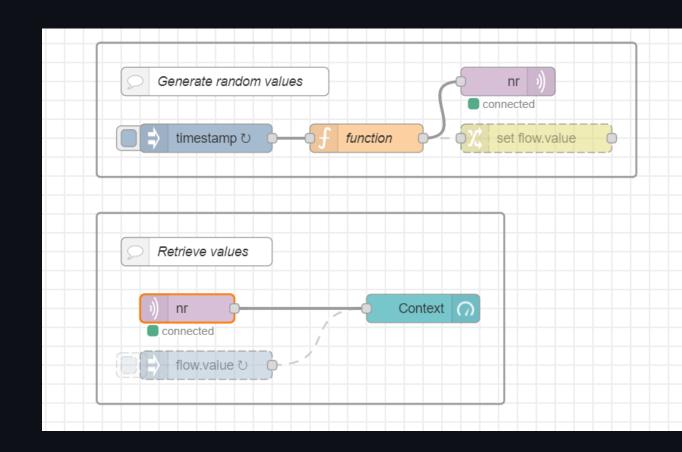

Counter


Flow

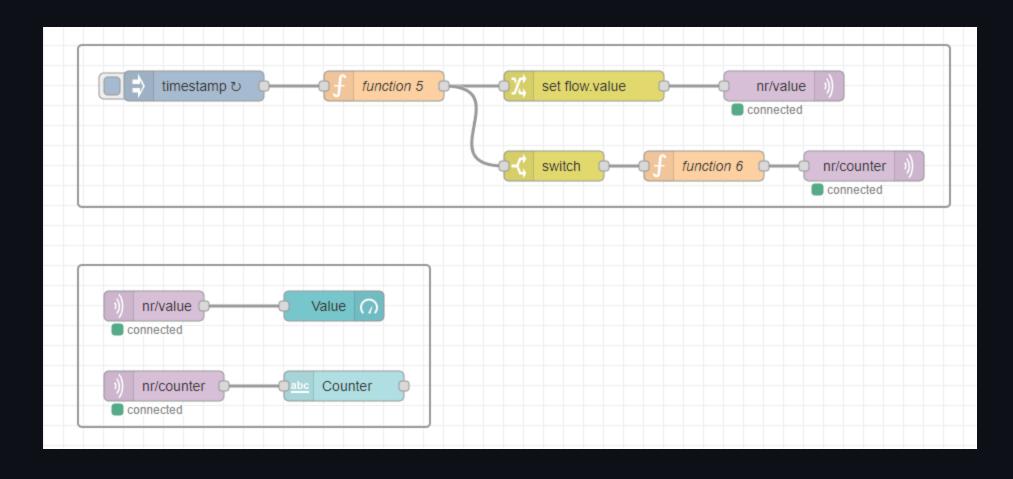

function 6 node

```
const curCounter = flow.get("counter") || 0;
flow.set("counter", curCounter + 1);
msg.payload = curCounter + 1;
return msg;
```

Switch node

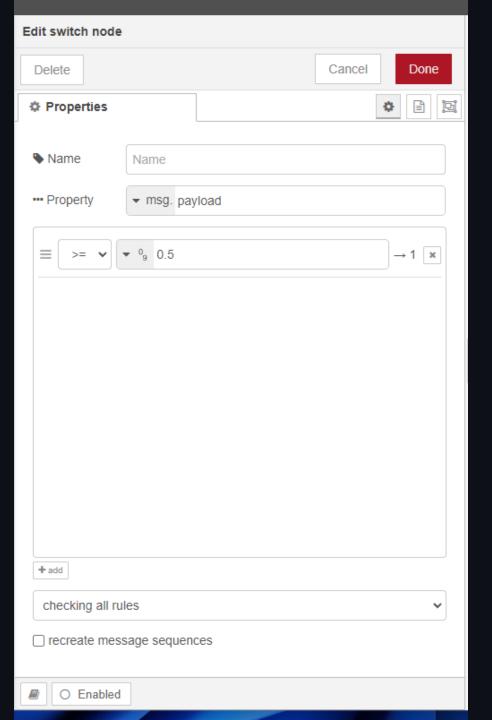

Try it yourself

• Can you can a reset button that reset the counter?