

Production Supporting Systems in Factories

ระบบสนับสนุนการผลิตในโรงงานอุตสาหกรรม

Context (Basics)


Scope

The `scope` of a particular context value.

- `Node` - only visible to the node that set the value
- `Flow` - visible to all nodes on the same flow (or tab in the editor)
- `Global` - visible to all nodes

Use `flow` Context to Pass Values

Set flow Context

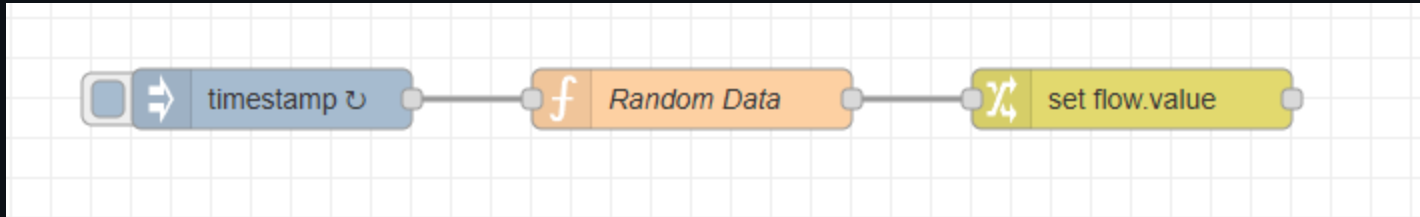

Inject Node

Edit inject node

Delete Cancel Done

Properties

Name

msg. payload = milliseconds since epoch

msg. topic = a_z

+ add inject now

☐ Inject once after 0.1 seconds, then

Repeat interval

every 1 seconds

Random Data Function Node

```
msg.payload = Math.random();  
return msg;
```

Change Node

Edit change node

Delete Cancel Done

⚙ Properties

📌 Name Name


☰ Rules

Set ▼ ▼ flow. value


☰ to the value ▼ msg. payload ✕

☐ Deep copy value


Get Context Data

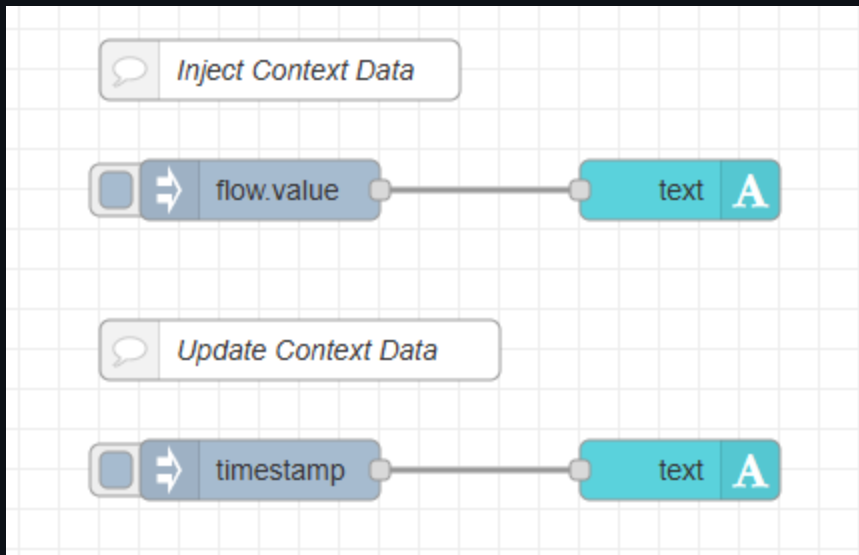


Inject Context Data Flow

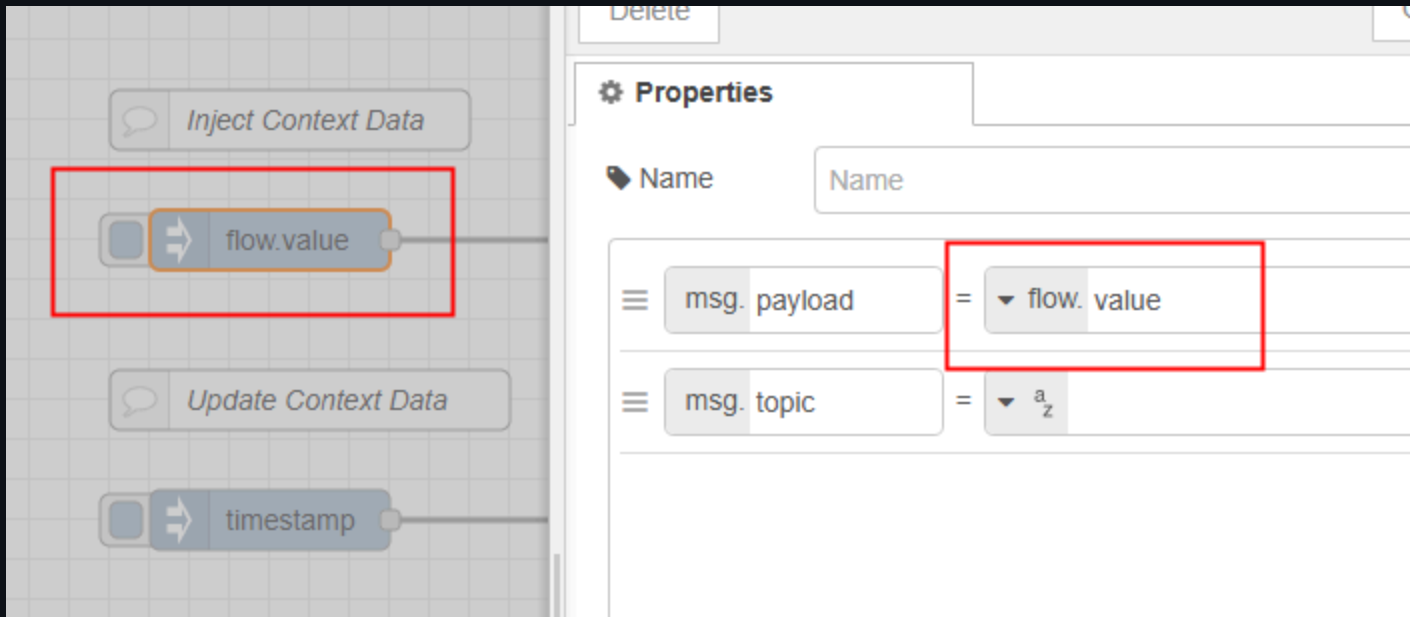


Inject Context Data Flow

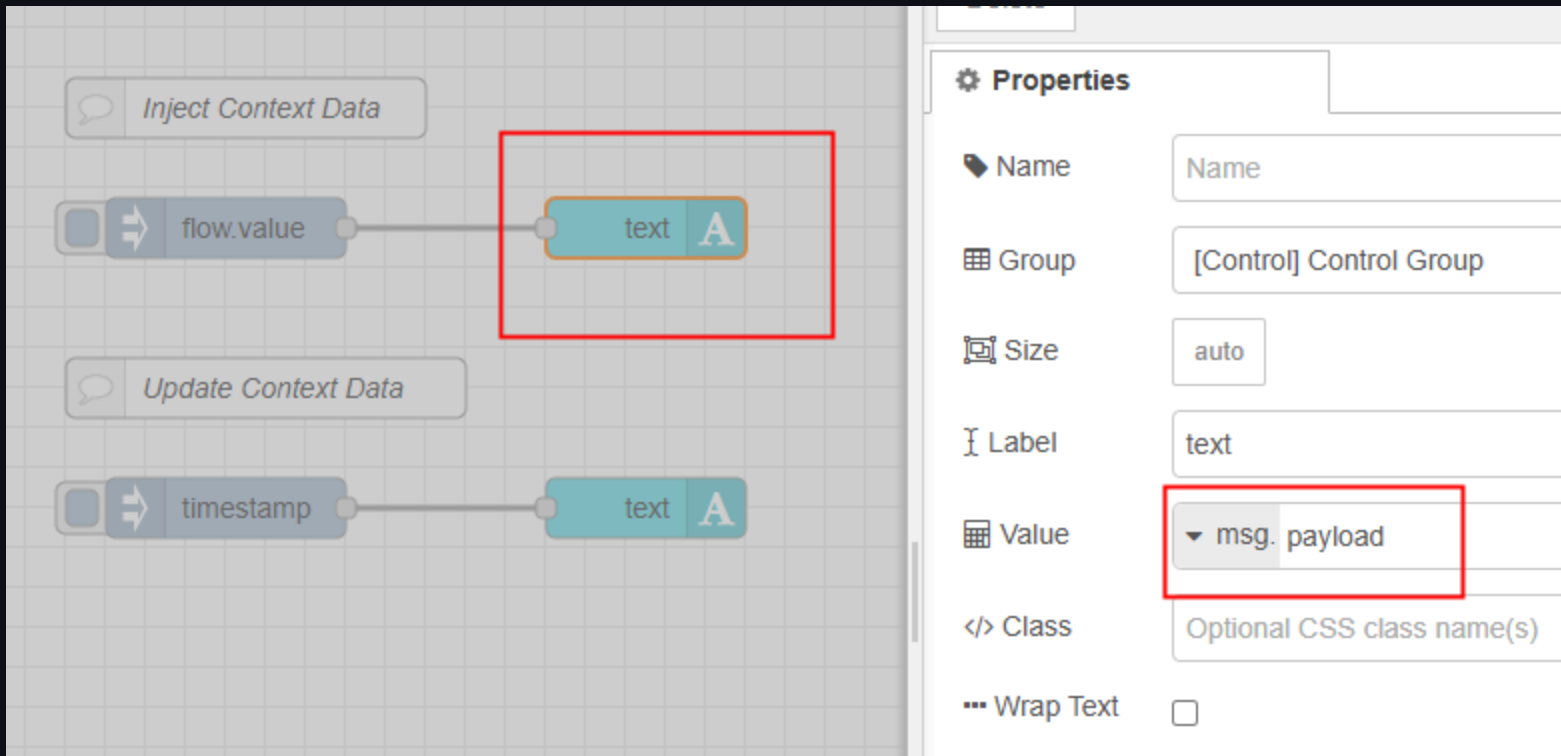


Update Context Data Flow

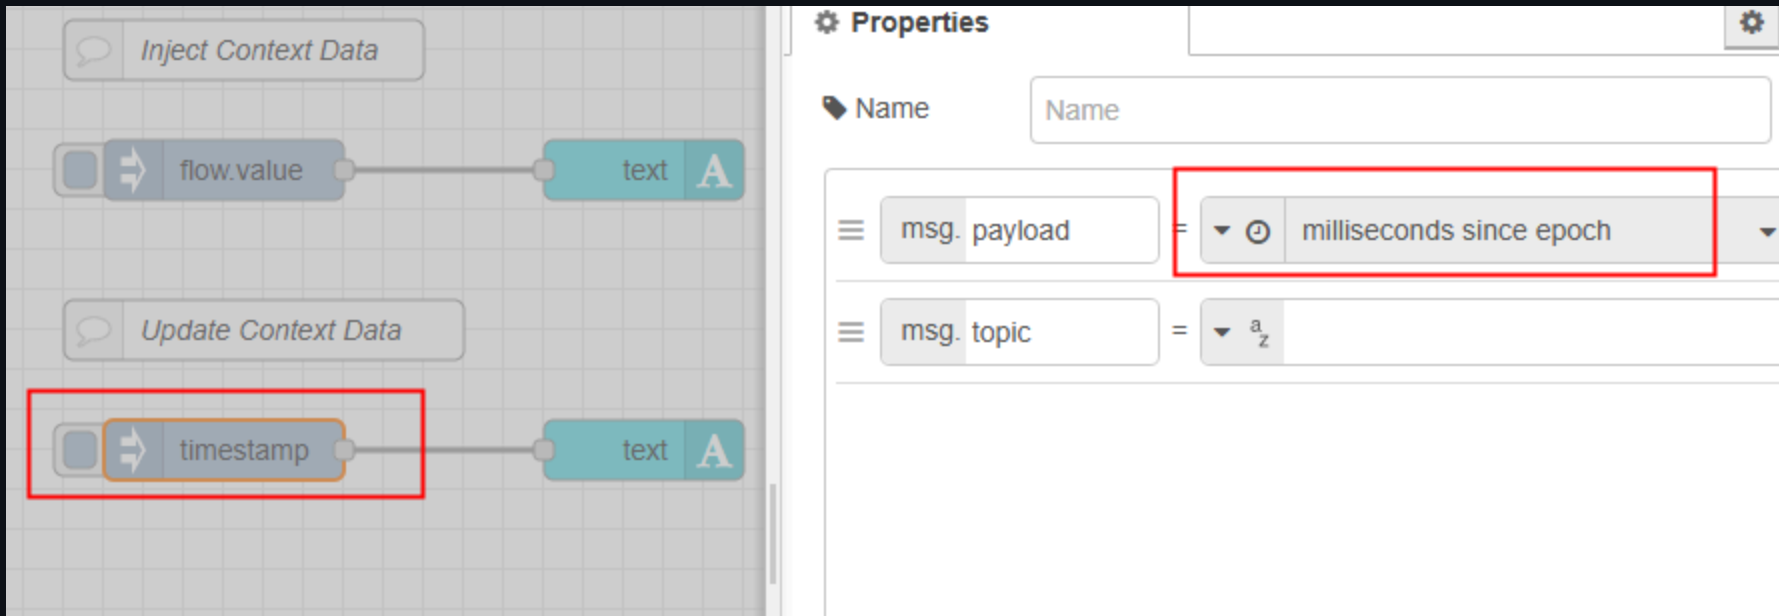

Update Context Data Flow

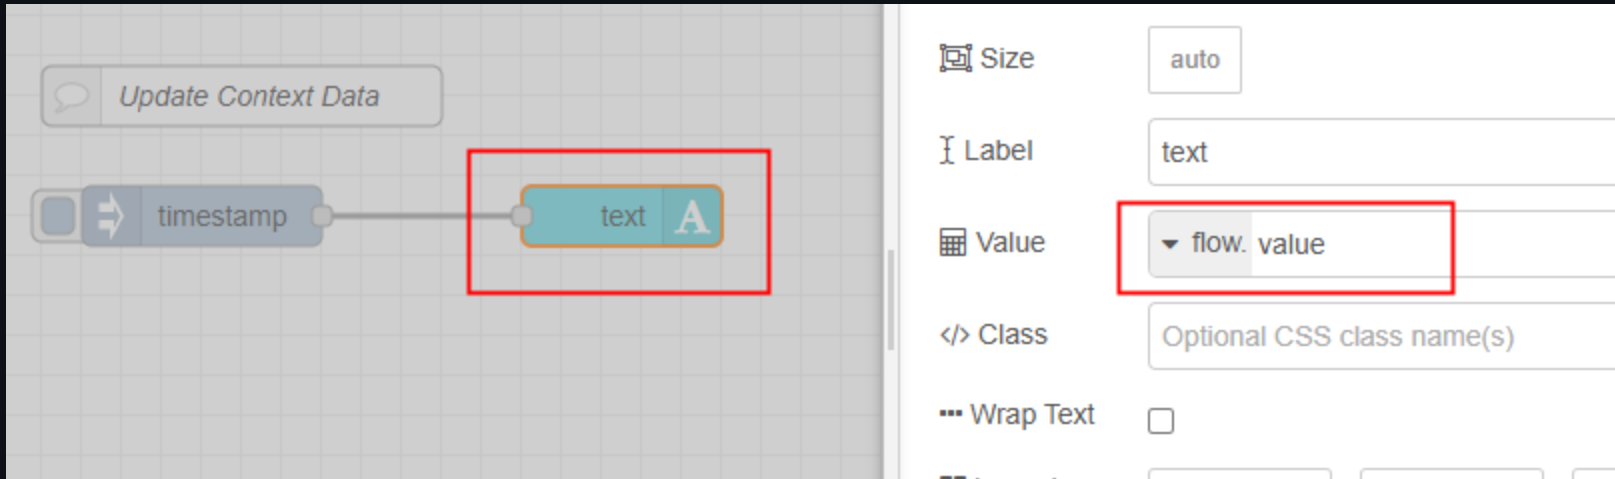


Using **Function** Node to Set Context Value

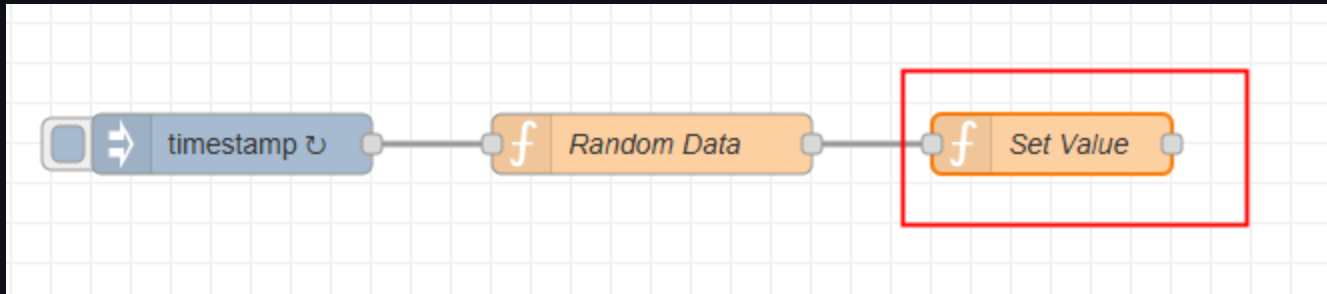


```
flow.set("value", msg.payload);
```

Using Function Node to Get Context Value

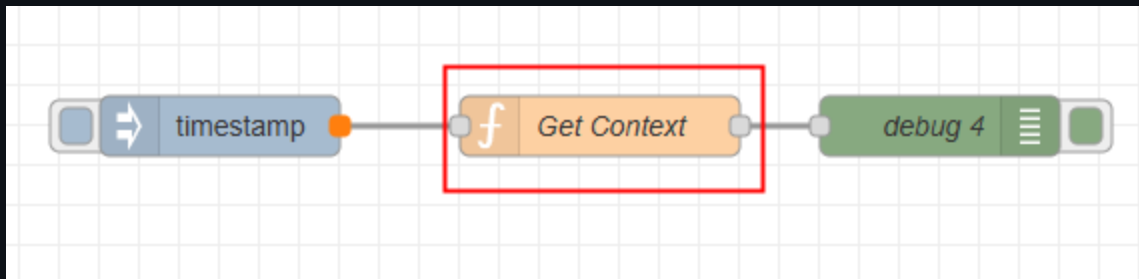


```
const value = flow.get("value") ?? 0;  
msg.payload = value;  
return msg;
```

Initialize Context Value

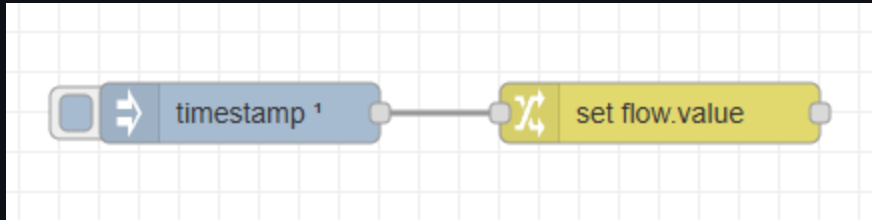

Inject Node

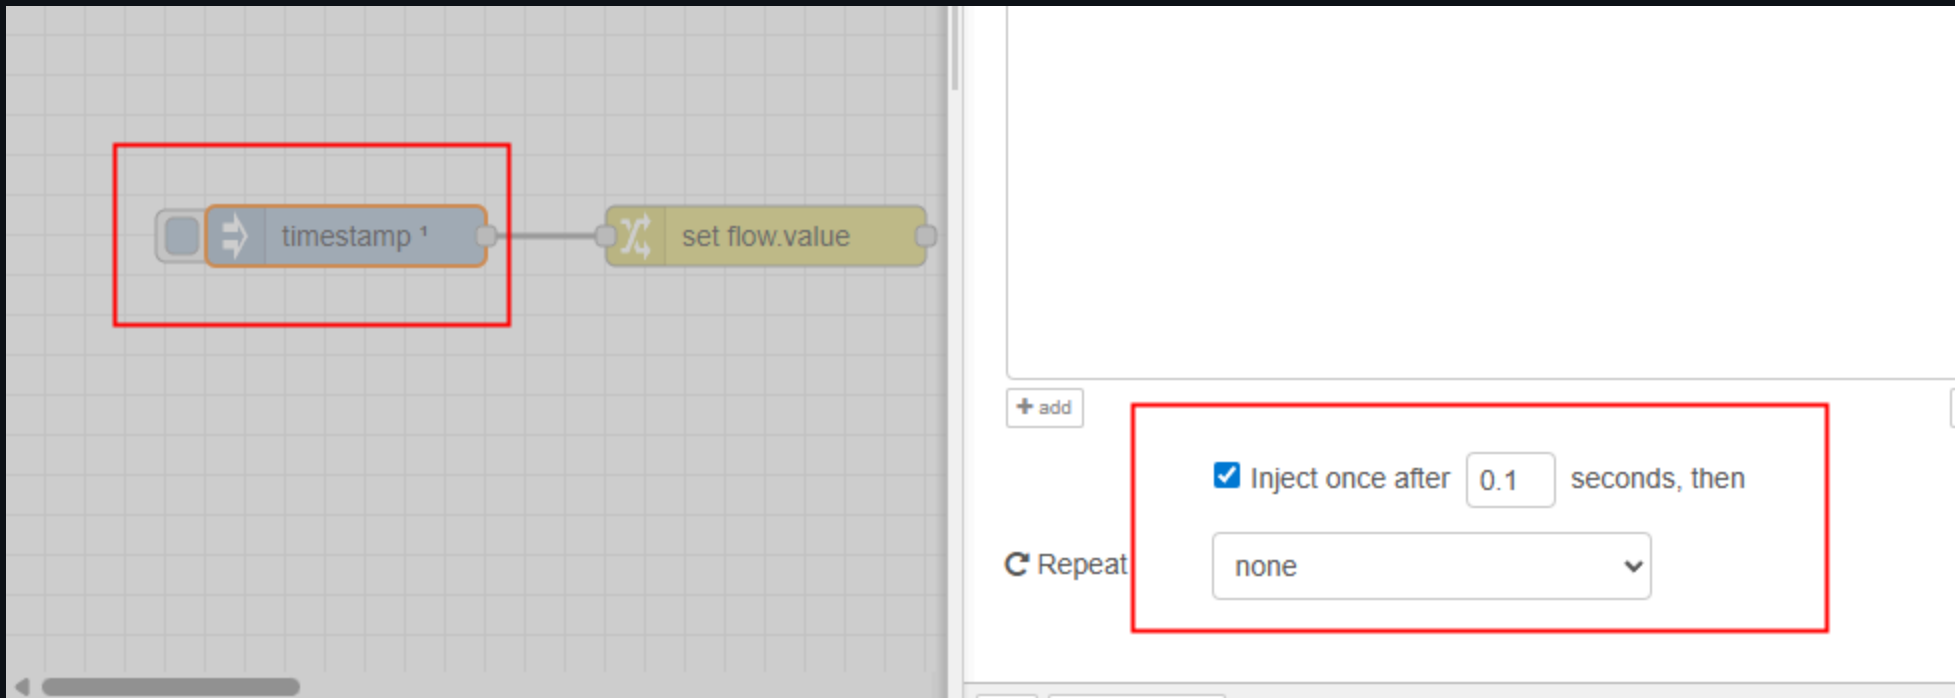

Change Node

