


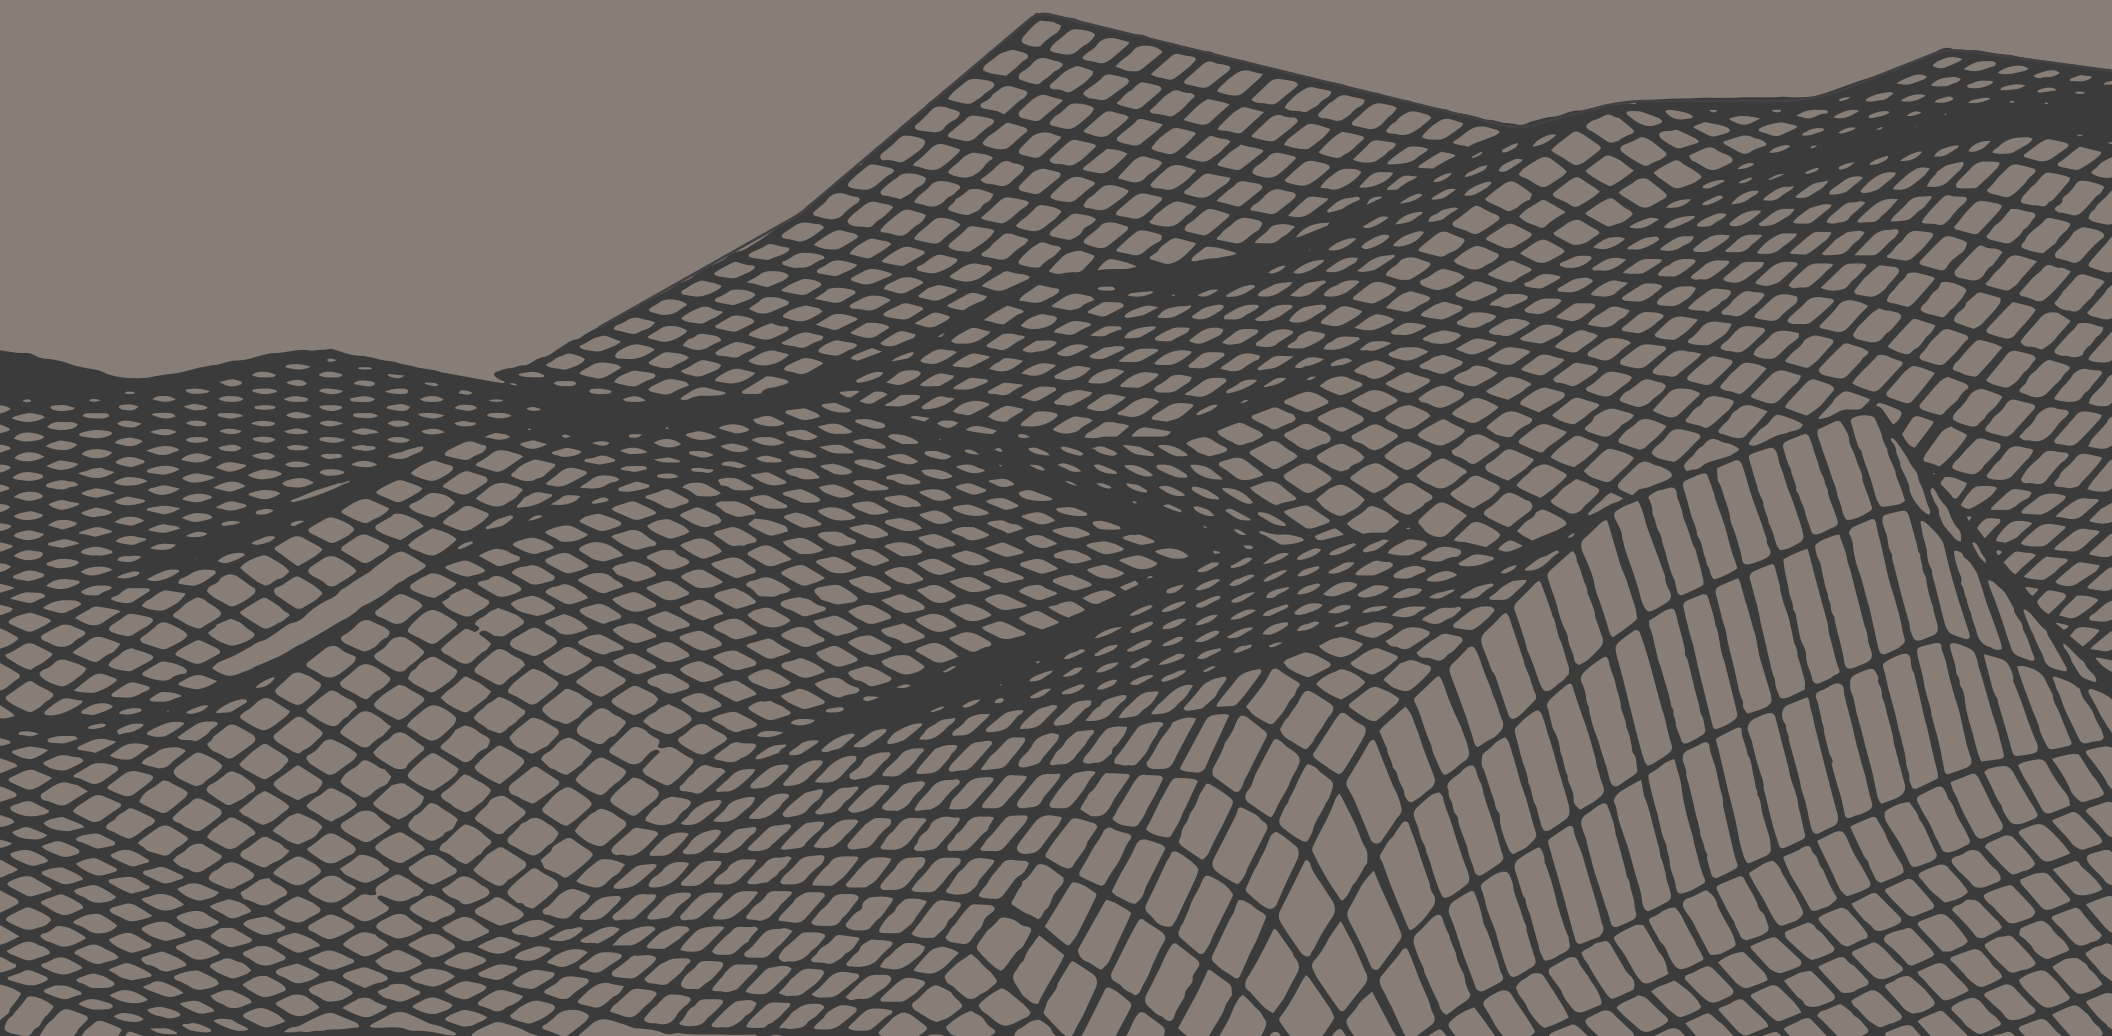



You can use MIDI with **Onward** to control any of its parameters, sync to external clock, and save and recall up to 122 presets.

1. **Onward** receives MIDI through a standard ¼" TRS patch cable. If your controller has a 5-pin output, the Chase Bliss MIDIBox is a simple way to convert 5-pin MIDI to TRS (the MIDIBox is not included with **Onward**).

2. **Onward** is set to MIDI channel 2 by default, but it's easy to change. Simply hold down both foot switches when you power up the pedal. The pedal is now looking for the first Program Change (PC) or Continuous Control (CC) message it sees, and it will then set itself to that channel.

SAVING A PRESET VIA MIDI

Presets are both saved and recalled using Program Change (PC) messages.

To save a preset, send a Program Change message while holding down both foot switches. Sending a Program Change message of 45, for example, will save your current settings to preset 45.

There are 122 total slots.

Slots 1 and 2 correspond to the preset toggle on the pedal. Slot 1 is the right slot. Slot 2 is the left slot.

RECALLING A PRESET VIA MIDI


To recall a preset, simply send **Onward** a Program Change message.

If the target slot is empty, nothing will be recalled. There are no factory presets besides the two that come loaded in slots 1 and 2.

Sending a Program Change message of 0 puts the pedal in "Live" mode, matching the pedal's current settings.

Onward Control Change Channels

What	MIDI CC	Value
KNOBS		
SIZE	14	0 - 127
MIX	15	0 - 127
OCTAVE	16	0 - 127
ERROR	17	0 - 127
SUSTAIN	18	0 - 127
TEXTURE	19	0 - 127
RAMP SPEED	20	0 - 127

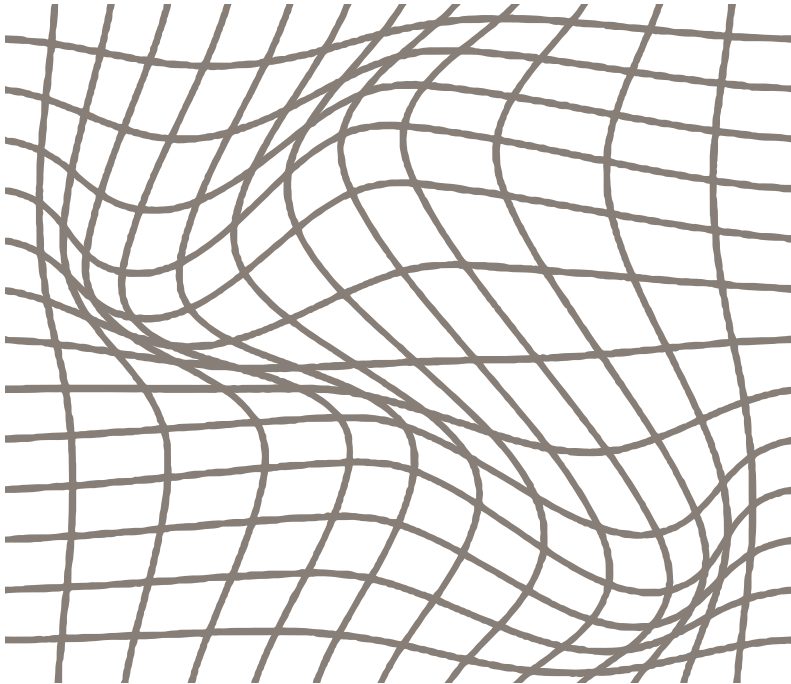

What	MIDI CC	Value
FOOT SWITCHES		
FREEZE BYPASS	102	off = 0 on = 1 or >
GLITCH BYPASS	103	off = 0 on = 1 or >
ALT MENU (HOLD BOTH SWITCHES)	104	ALT exit = 0 ALT enter = 1 or >
GLITCH HOLD (HOLD LEFT SWITCH)	105	off = 0 on = 1 or >
FREEZE HOLD (HOLD RIGHT SWITCH)	106	off = 0 on = 1 or >
RETRIGGER GLITCH	108	Send any value
RETRIGGER FREEZE	109	Send any value


TOGGLES		
ERROR TYPE	21	TIMING = 0, 1 CONDITION = 2 PLAYBACK = 3 OR >
FADE	22	LONG = 0, 1 USER = 2 SHORT = 3 OR >
ANIMATE	23	VIBRATO = 0, 1 OFF = 2 CHORUS = 3 OR >

Onward Control Change Channels

What	MIDI CC	Value
DIP SWITCHES		
LEFT BANK		
SIZE	61	off = 0, on = 1 or >
ERROR	62	off = 0, on = 1 or >
SUSTAIN	63	off = 0, on = 1 or >
TEXTURE	64	off = 0, on = 1 or >
OCTAVE	65	off = 0, on = 1 or >
BOUNCE	66	off = 0, on = 1 or >
SWEEP	67	B = 0, T = 1 or >
POLARITY	68	F = 0, R = 1 or >
RIGHT BANK		
MISO	71	off = 0, on = 1 or >
SPREAD	72	off = 0, on = 1 or >
LATCH	73	off = 0, on = 1 or >
SIDCHAIN	74	off = 0, on = 1 or >
DUCK	75	off = 0, on = 1 or >
REVERSE	76	off = 0, on = 1 or >
1/2 SPEED	77	off = 0, on = 1 or >
MANUAL	78	off = 0, on = 1 or >

What	MIDI CC	Value
OTHER		
EOM (EXPRESSION OVER MIDI)	100	0 - 127
PRESET SAVE	111	0 - 122
MIDI CLOCK IGNORE	51	0 = ignore, >0 = follow
RAMP/BOUNCE (ON/OFF)	52	off = 0, on = 1 or >
MIDI SYNC SUBDIVISION	53	SEE PAGE 08
FACTORY RESET	56	0 - 127
DRY KILL	57	off = 0, on = 1 or >
TRAILS	58	off = 0, on = 1 or >
TAP TEMPO	93 or 107	Send any value


CC numbers are left to right as you look down over the top of the pedal. The left bank is labeled 61-68 and the right bank is 71-78.

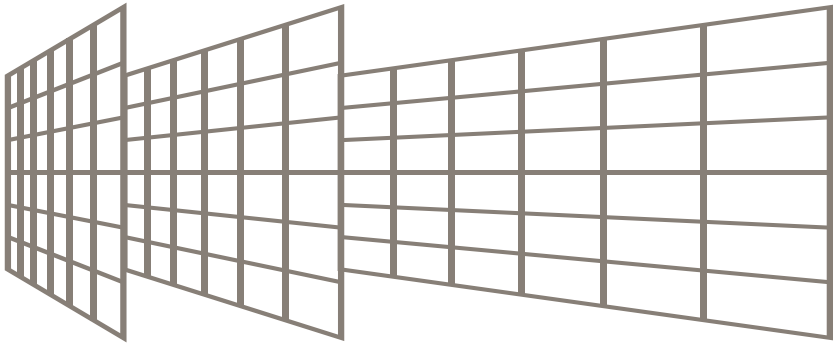


Onward Control Change Channels

What	MIDI CC	Value
HIDDEN OPTIONS		
SENSITIVITY	24	0 - 127
BALANCE	25	0 - 127
DUCK DEPTH	26	0 - 127
ERROR BLEND	27	0 - 127
USER FADE	28	0 - 127
FILTER	29	0 - 127
ERROR ROUTING	31	GLITCH = 0, 1 BOTH = 2 FREEZE = 3 OR >
SUSTAIN ROUTING	32	GLITCH = 0, 1 BOTH = 2 FREEZE = 3 OR >
EFFECTS ROUTING	33	GLITCH = 0, 1 BOTH = 2 FREEZE = 3 OR >

What	MIDI CC	Value
SYNC SUBDIVISIONS		
WHOLE	53	0
DOTTED HALF	53	1
HALF	53	2
DOTTED QUARTER	53	3
QUARTER	53	4
DOTTED 8TH	53	5
8TH	53	6
8TH NOTE TRIPLET	53	7
SIXTEENTH	53	8

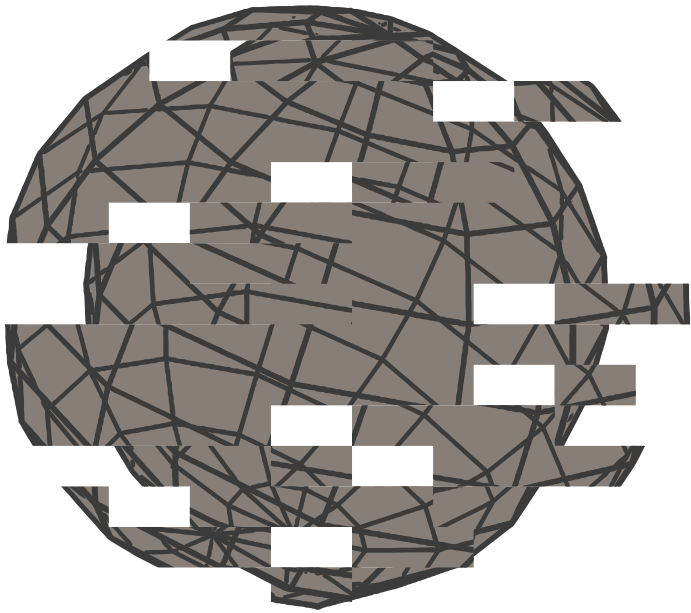

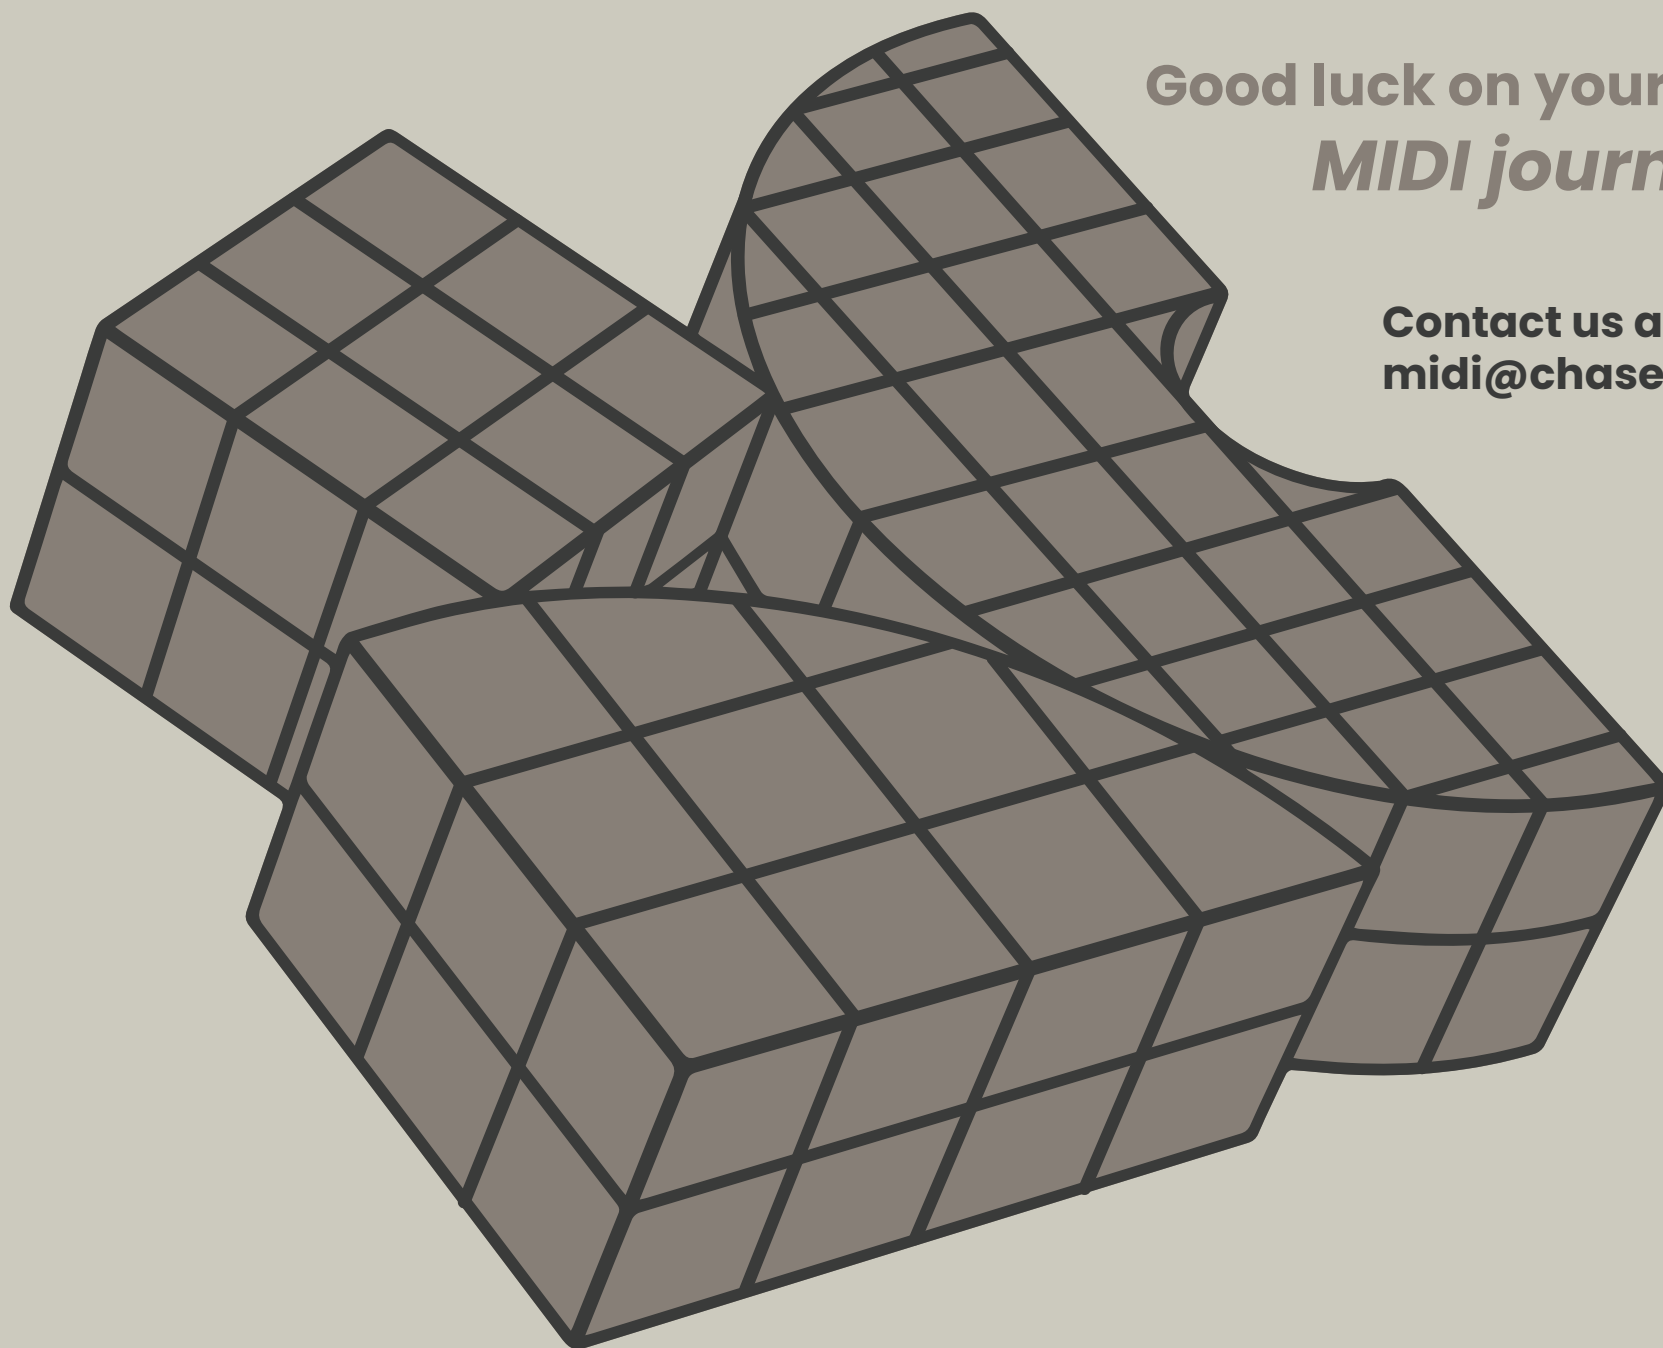

Good luck on your
MIDI journey.

Contact us any time:
midi@chasebliss.com