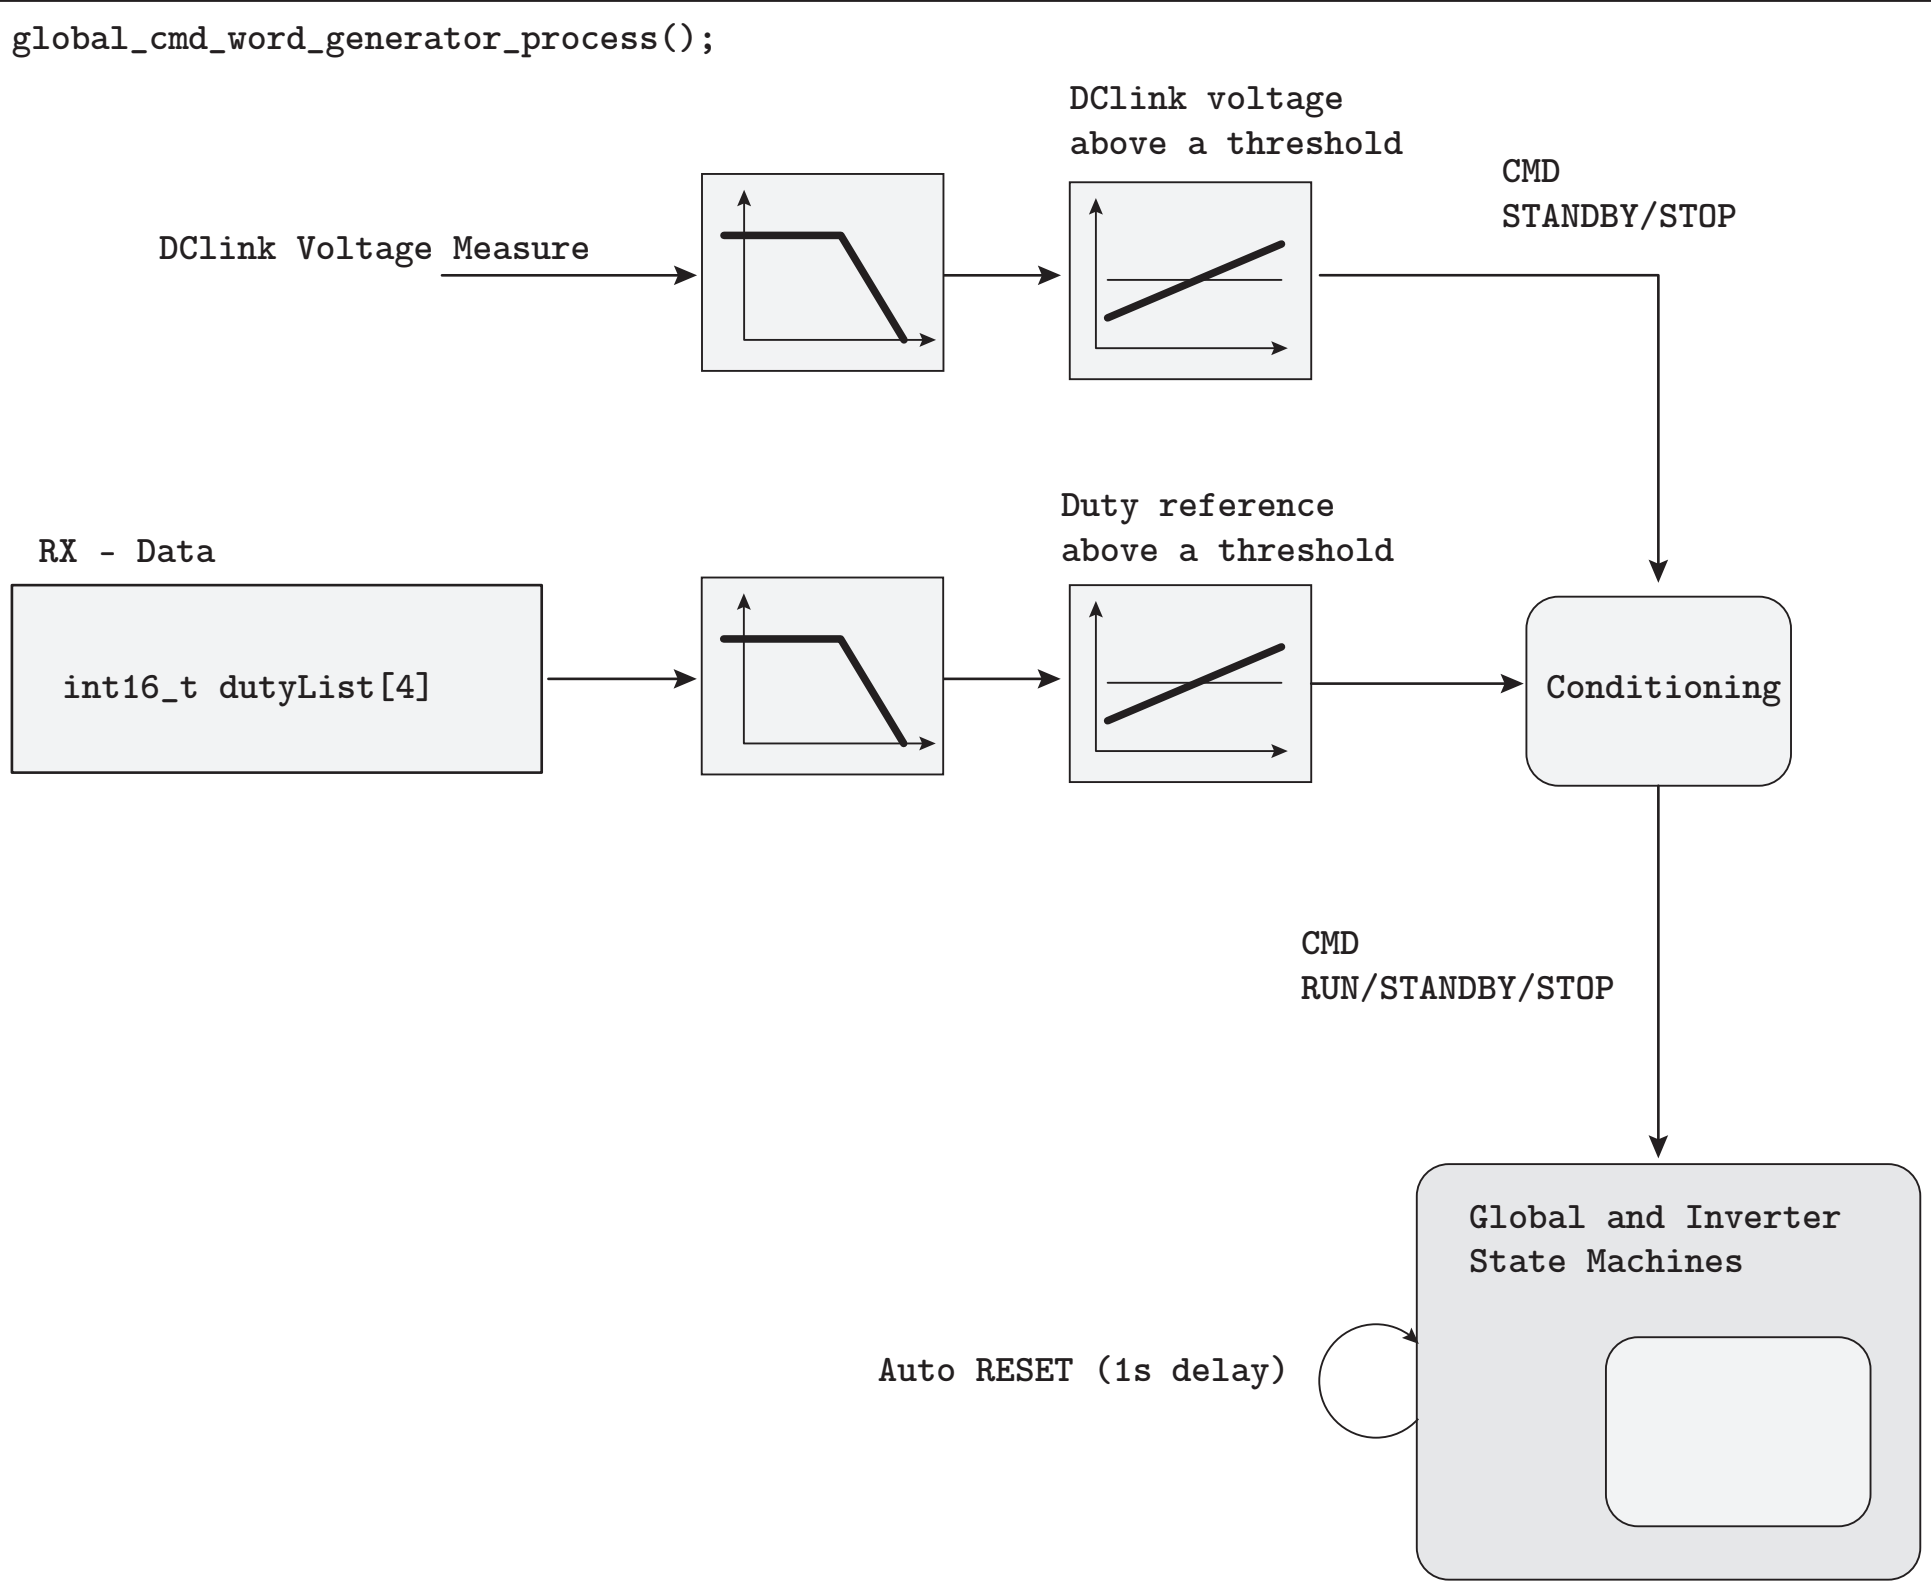
global_cmd_word_generator_process();
DClink voltage
above a threshold
CMD
STANDBY/STOP
DClink Voltage Measure
Duty reference
above a threshold
RX - Data
int16_t dutyList[4]
Conditioning
CMD
RUN/STANDBY/STOP
Global and Inverter
State Machines
Auto RESET (1s delay)