


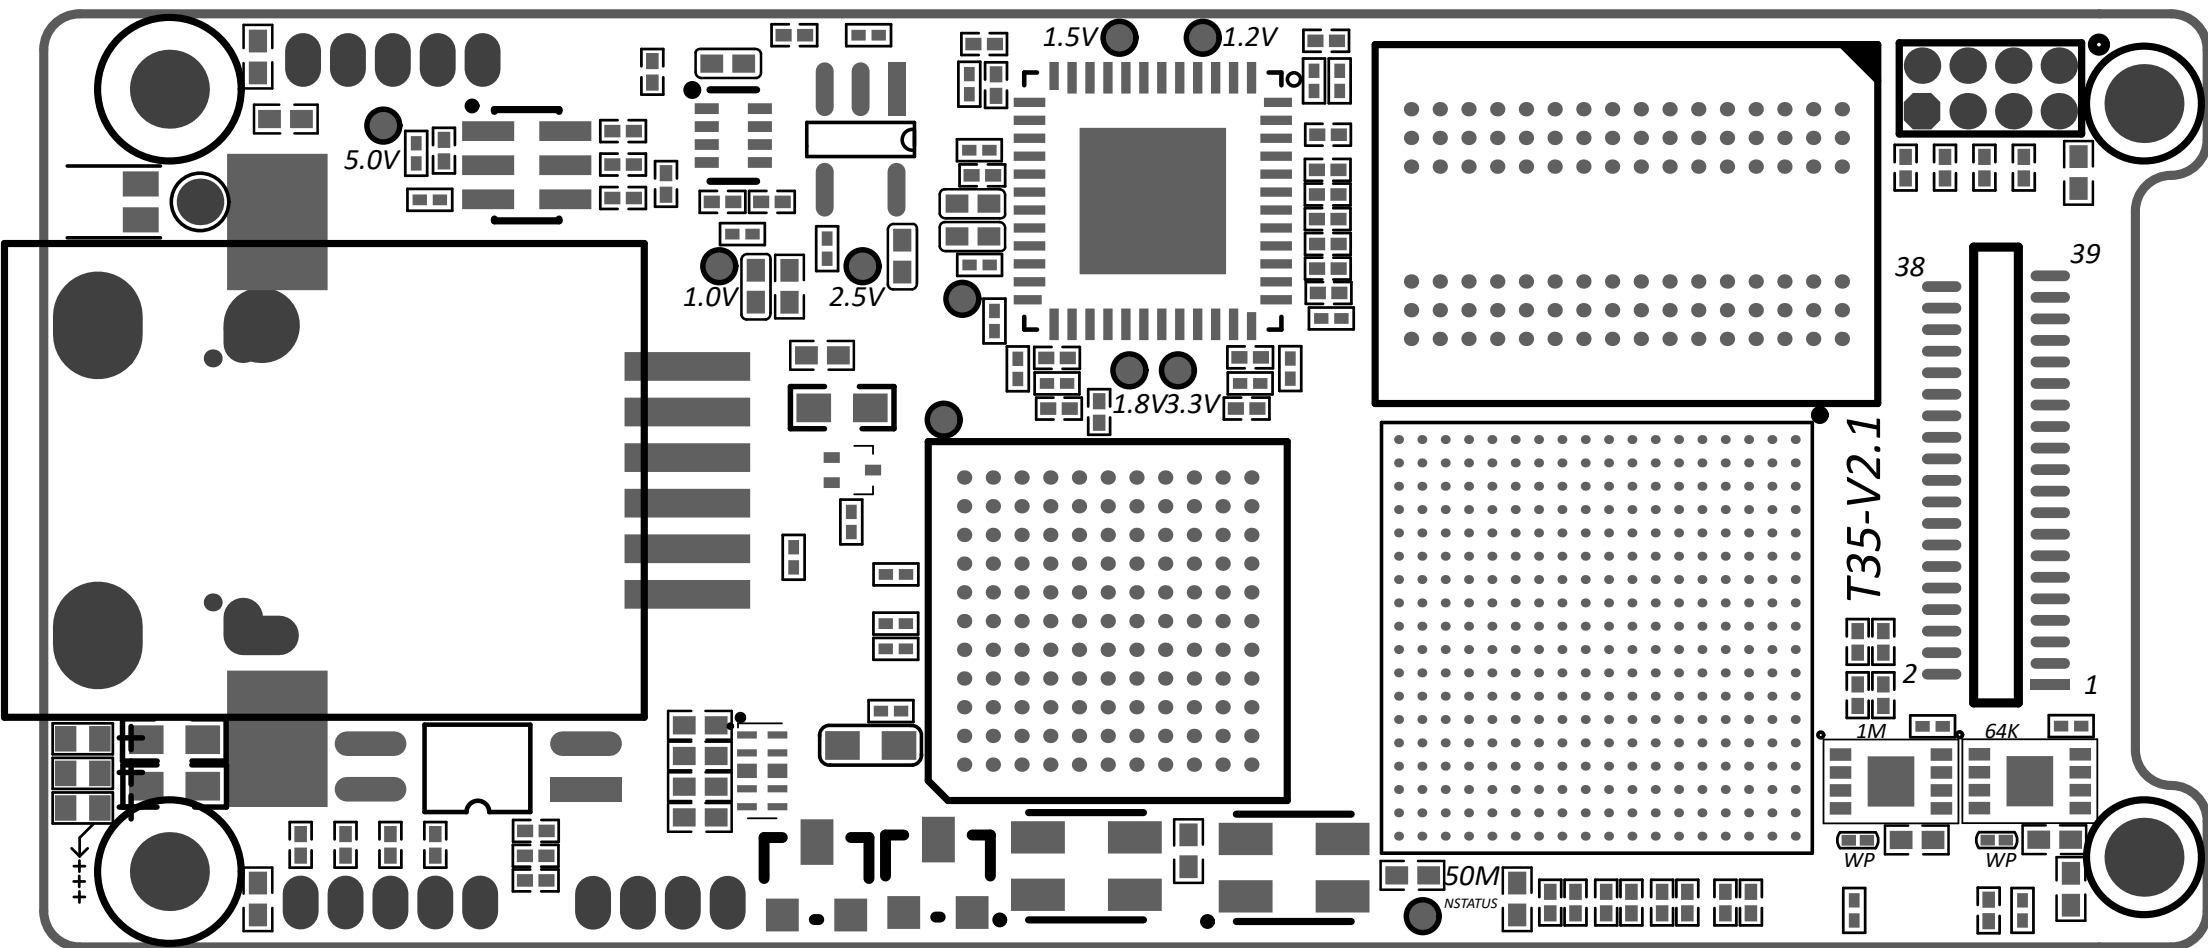

SDA AMPV
XHS CTL4
XVS CTL5
XTRIG INCK
CTL2

TEC_EN SCL
XCLR XMAS
CTL3 CTL1

GPIO5-8

GND-GND-TGND-TOUT-TIN

RX

RTS

TX

CTS

TX-GND-RX-RESET

GND-GPIO4-3-2-1