

TAP — Ruckus SmartZone syslog to Coralogix

Device configuration only. SmartZone and its APs must send traditional syslog (RFC3164) over UDP to the TAP collector. The controller can do TCP; this template does not. Use UDP.

1. Where this device must send

The collector is already a separate Compose service. This guide only covers the device. Point the device at the Compose host IP, never 127.0.0.1.

Setting	Value
Transport	UDP (not TCP)
Port	5515
Format	RFC3164 / BSD syslog (controller default)
Coralogix application	ruckus
Coralogix subsystem	access-point

Replace <COMPOSE_HOST_IP> with the address this device can route to. If the host port in .env was changed, use that port, not the default below.

2. Two places, same destination

SmartZone has a controller syslog and a per-zone AP external syslog. Point both at the same host, port 5515, UDP. Controller-only syslog misses AP client events.

What	Where	Sends
Controller syslog	System → General Settings → Syslog	Controller events
AP external syslog	Zone edit → Syslog, or Services → AP External Syslog	AP client join / auth / disconnect

3. Controller syslog

- SmartZone web UI → System → General Settings → Syslog.
- Enable logging to remote syslog server.
- Primary server address = <COMPOSE_HOST_IP>.
- Port = 5515. Protocol = UDP. Do not leave this on TCP.
- Click Ping Syslog Server. Expect Success before you save.
- Facility: leave default, or 0–7 if your site standard requires a facility.
- Filter severity: Informational is enough for client join/auth. Debug floods the link.
- Event filter: All events for a first integration. Later you can drop client association/disassociation if volume is too high.
- OK / Apply.

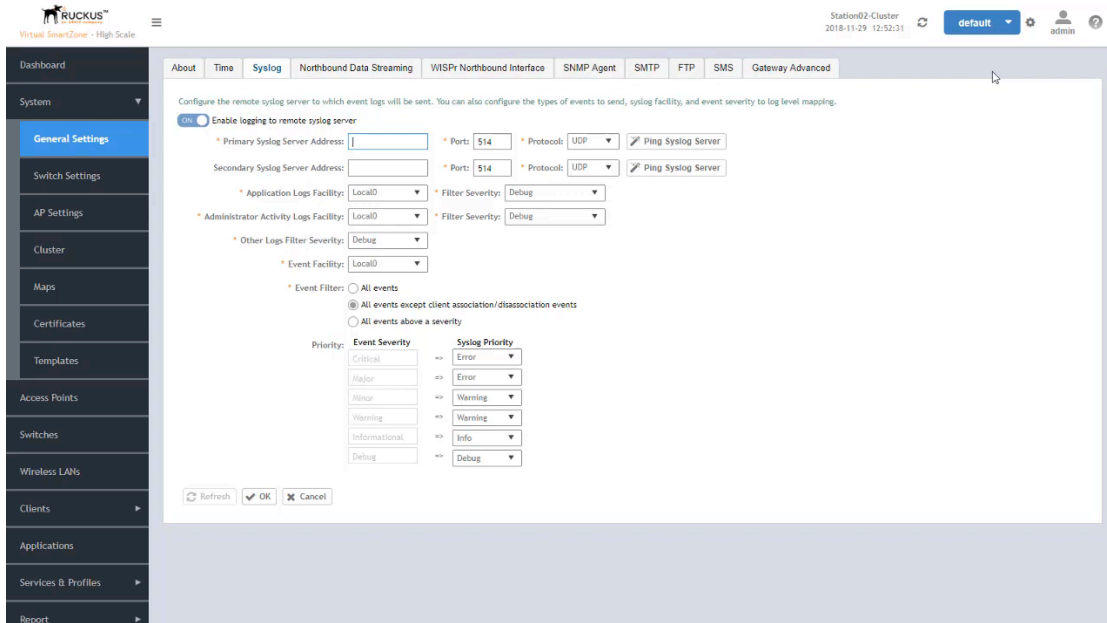


Figure 1: System > General Settings > Syslog — enable checkbox, primary server, port, protocol UDP, facilities and event filter. Example values shown; for TAP use <COMPOSE_HOST_IP> and port 5515.

Menu names drift by SmartZone version (SZ100 / vSZ / SZ300). If General Settings → Syslog is not there, search the UI for Syslog. The fields that matter are address, port 5515, and protocol UDP.

4. AP external syslog (required for client events)

- Services → AP External Syslog Server (wording may be AP External Syslog).
- Create or edit a profile: same <COMPOSE_HOST_IP>, port 5515, UDP. Send Logs = All Logs for the first test.
- Access Points → select the AP zone → Edit → Syslog.
- Enable external syslog server for APs. Select that profile. OK.

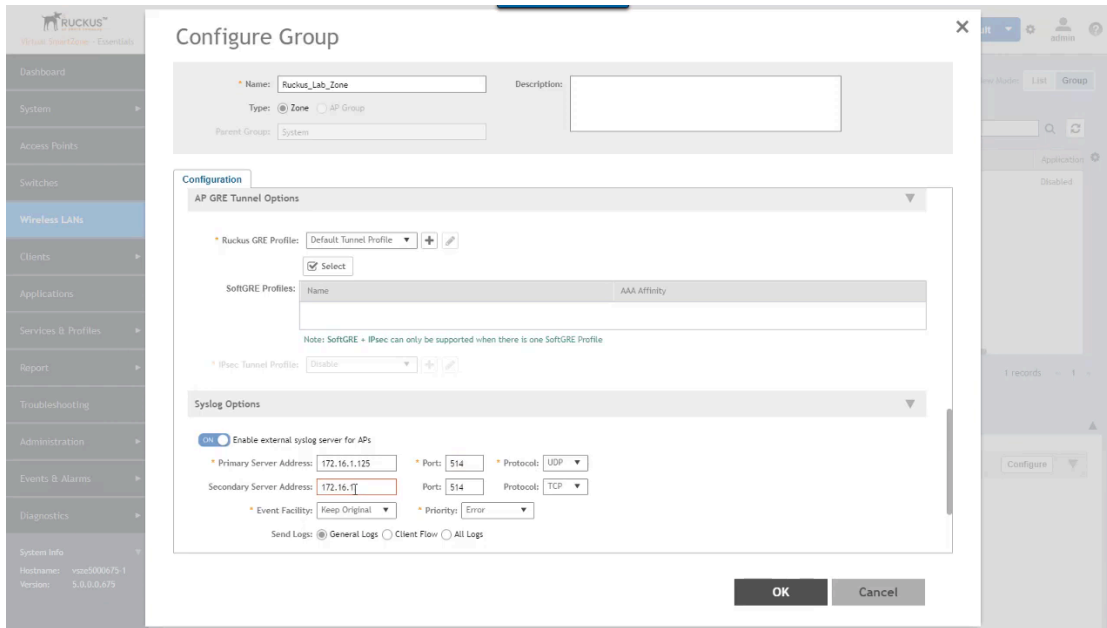


Figure 2: Zone (Configure Group) > Configuration > Syslog Options — enable toggle, primary server, port, protocol, Send Logs. This is the zone-level panel that forwards AP client events.

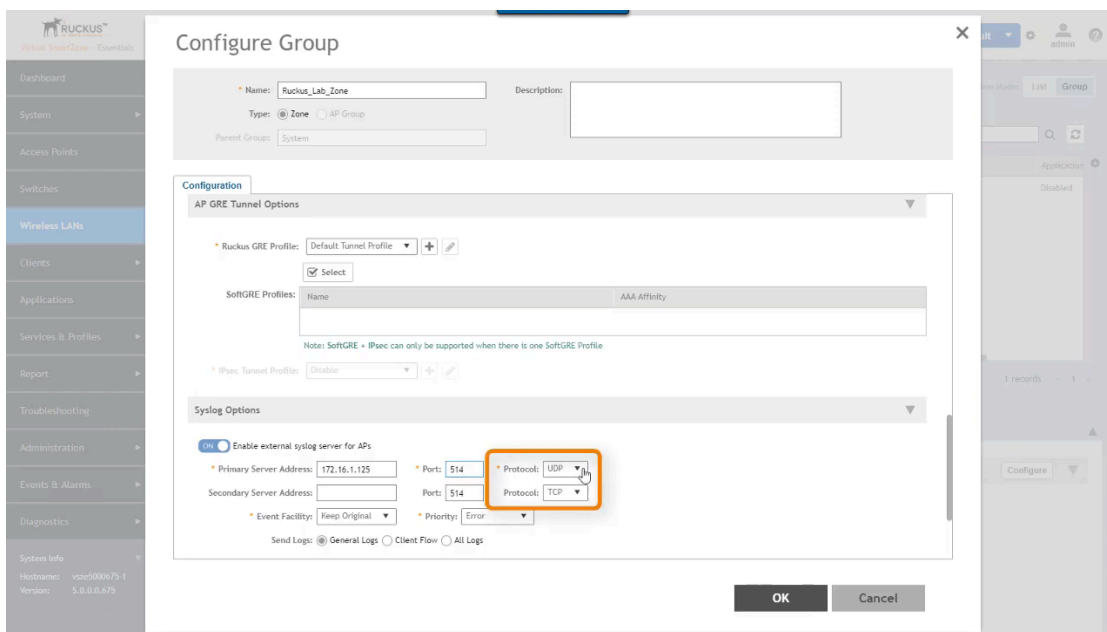


Figure 3: Same panel with the Protocol fields (boxed) — set primary to UDP for this template.

A zone that does not have this toggle on will not forward AP client syslog, even if the controller syslog ping succeeded.

5. What a good line looks like

You do not type these. They are the shapes the controller actually emits, so you can recognise a successful send:

```
User[<mac>] fails authentication in WLAN[<wlan>] from AP[<ap>]
User[<mac>] joins WLAN[<wlan>] at AP[<ap>]
Client [<user>@<ip>@<mac>] joined WLAN [<wlan>] from AP [<ap>@<mac>]
```

6. Check from SmartZone

- Ping Syslog Server in the syslog page returns Success.
- Join a test client to a WLAN in the zone you edited. A join or auth-fail line should appear under application ruckus / subsystem access-point.
- If only controller alarms arrive and client lines do not, section 4 is not applied on that zone.

7. If nothing arrives

What you see	Fix on SmartZone
Ping Syslog Server fails	Wrong IP, or UDP 5515 blocked between the controller and the Compose host.
Protocol is TCP	Switch the primary server to UDP. This collector listens on UDP only.
Ping succeeds, no client logs	AP external syslog is not enabled on the zone.
Logs appear, then stop	Event filter excludes association, or severity is above Informational.
Collector parse error	Do not change the collector to RFC5424. SmartZone remote syslog is BSD/RFC3164.

Source: Ruckus SmartZone administrator guide (System → General Settings → Syslog; protocol TCP or UDP) and SmartZone AP external syslog (zone → Syslog). TAP collector listens on UDP 5515, RFC3164.