

TAP — FortiGate 400F syslog to Coralogix

Device configuration only. FortiGate 400F sends its default FortiOS syslog format over TCP (mode reliable) to the TAP collector. GUI turns syslog on and sets the server IP. CLI is required for the port and the transport mode.

1. Where this device must send

The collector is already a separate Compose service. This guide only covers the device. Point the device at the Compose host IP, never 127.0.0.1.

Setting	Value
Transport	TCP (mode reliable)
Port	514
Format	FortiOS default (key=value) — keep it
Coralogix application	fortigate
Coralogix subsystem	firewall

Replace <COMPOSE_HOST_IP> with the address this device can route to. If the host port in .env was changed, use that port, not the default below.

2. Before you touch the firewall

- Collector is up and TCP 514 is open on the host firewall / NSG.
- You can reach the FortiGate CLI (SSH or console). Multi-VDOM: use the global VDOM.
- If syslogd is already used by another server, use syslogd2 instead of syslogd. Same keywords.
- Match keywords to your FortiOS version. 400F runs FortiOS; the syslogd block below is the 7.x form.

3. GUI — enable syslog and set the server

- Log & Report → Log Settings. On FortiOS 7.4+ this may be Global Settings → Syslog Logging.
- Enable Send Logs to Syslog.
- IP address / FQDN = <COMPOSE_HOST_IP>. Apply.

The GUI does not set the transport mode, the port, or the format. Do not stop after Apply. The screenshots are from the official Fortinet knowledge base technical tip; they show enable + server IP only. The CLI block below is what actually makes the collector accept the logs.

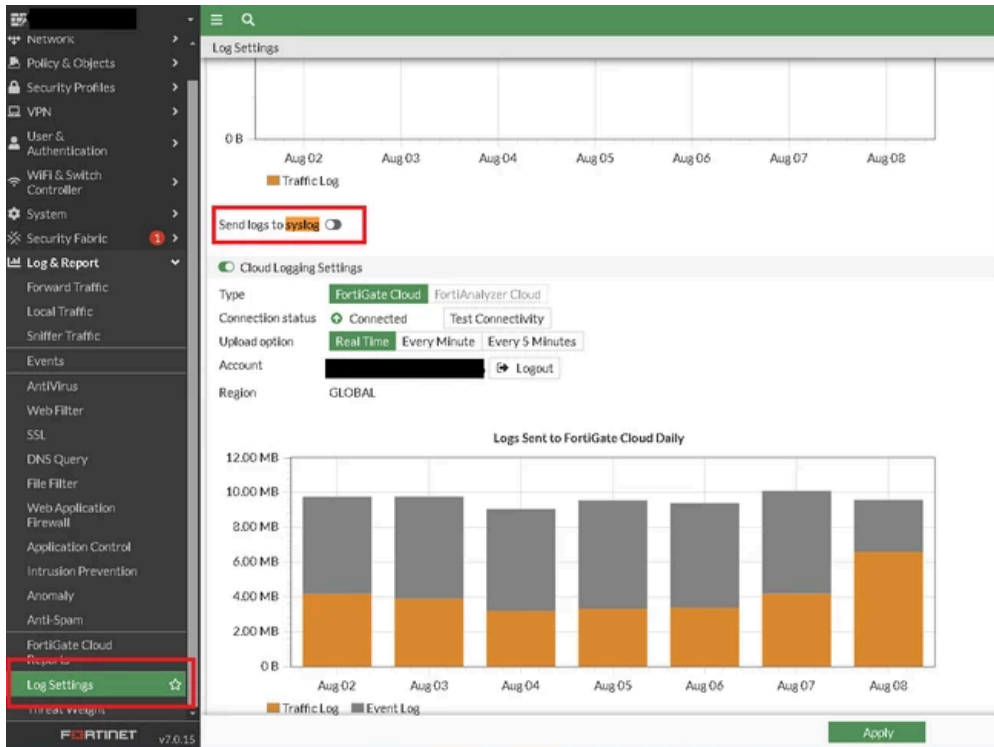


Figure 1: Log & Report > Log Settings. The Syslog toggle (boxed) is off by default.

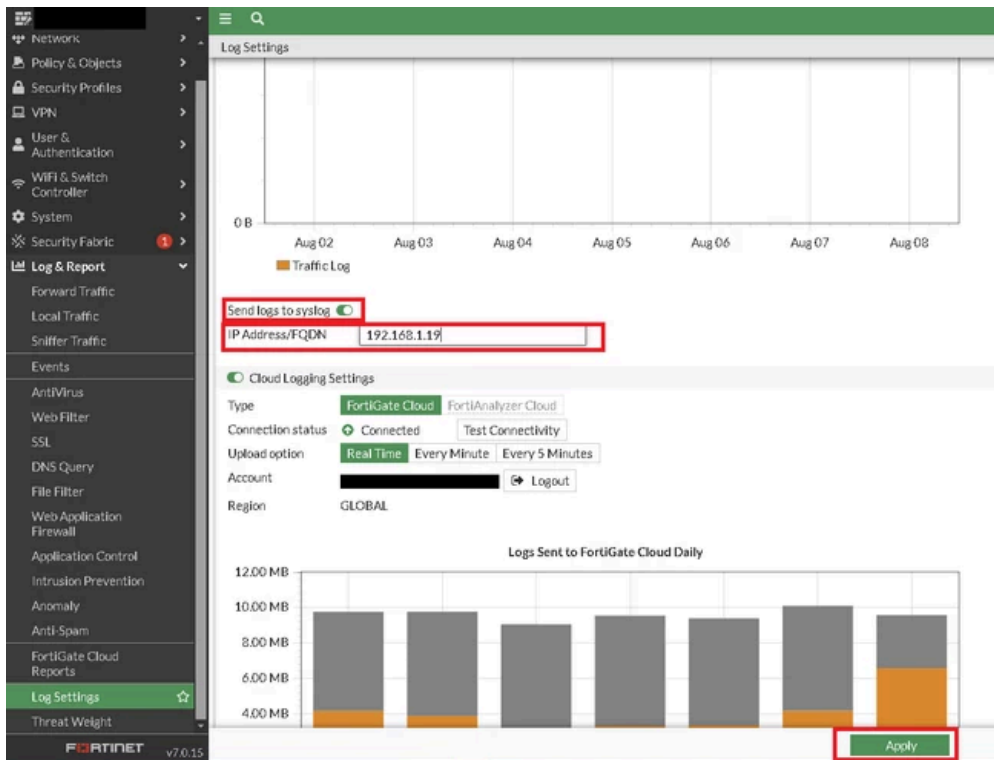


Figure 2: Send logs to syslog toggled on, IP Address / FQDN set to the collector, then Apply.

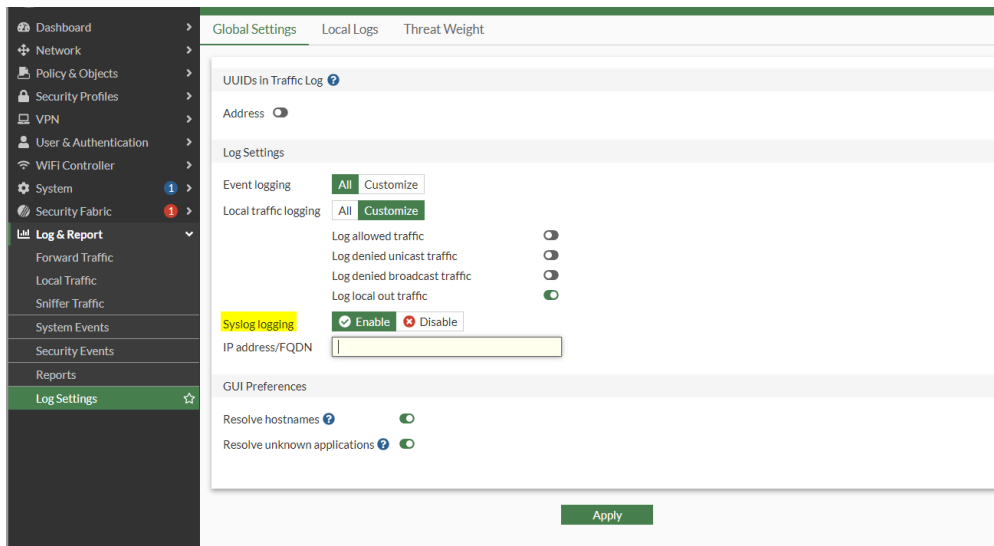


Figure 3: FortiOS 7.4+ path — Log Settings > Global Settings > Syslog logging: Enable, then IP address / FQDN.

4. CLI — transport, port and format (required)

Paste in the global VDOM. This is the setting the collector accepts.

```
config log syslogd setting
    set status enable
    set server "<COMPOSE_HOST_IP>"
    set mode reliable
    set port 514
    set format default
end
```

If syslogd is already taken:

```
config log syslogd2 setting
    set status enable
    set server "<COMPOSE_HOST_IP>"
    set mode reliable
    set port 514
    set format default
end
```

4.1 Confirm what is actually set

```
show log syslogd setting
execute ping <COMPOSE_HOST_IP>
diagnose log test
```

show must print mode reliable, port 514, and format default. The collector is configured with protocol: none, so it passes the FortiOS key=value line through untouched and Coralogix parses it. Do not switch FortiGate to rfc5424 unless you also change the receiver.

```
~ (setting) # sh f
config log syslogd setting
    set status enable
    set server "192.168.1.19"
    set mode udp
    set port 514
    set facility local7
    set source-ip ''
    set format default
    set priority default
    set max-log-rate 0
    set interface-select-method auto
end
```

Figure 4: The same config log syslogd setting block on the FortiGate CLI. Official KB screenshot of the same block. Note it shows mode udp; TAP uses mode reliable (TCP). What matters for the collector is port 514 and format default.

5. Which logs to send

- Keep traffic, event, and UTM (virus, IPS, web filter) enabled if those policies already log.
- Do not enable a debug-level filter. At full traffic volume the collector already sees ~1,000 records/s; a debug filter will make it shed records.
- Store-and-forward is off in this template. If the collector is down, FortiGate drops the record.

6. Check from the firewall

- execute ping <COMPOSE_HOST_IP> succeeds.
- diagnose log test generates a test event. It should appear under application fortigate / subsystem firewall.
- A real session (policy with logtraffic all) is the better check than the test event alone.

7. If nothing arrives

What you see	Fix on the FortiGate
show still says mode udp or port 5514	Re-enter section 4 — GUI Apply does not set these. The collector listens on TCP 514.
Ping fails	Wrong IP, or no route from the FortiGate to the Compose host.
Ping works, no logs	TCP 514 blocked on the collector host / NSG. Confirm with tcpdump on the host.
Collector says "expecting a priority value within angle brackets"	Sender format and receiver protocol disagree. Keep format default with protocol: none, or switch both sides to rfc5424.
Logs land in another Coralogix app	Wrong server IP, or another syslogd# is the one that is enabled.

Source: Fortinet Technical Tip — How to configure syslog on FortiGate. TAP collector accepts the FortiOS default format on TCP 514 (receiver: protocol none + RFC 6587 octet counting).