
Arcade cabinet: how a coin starts the game

AN-002

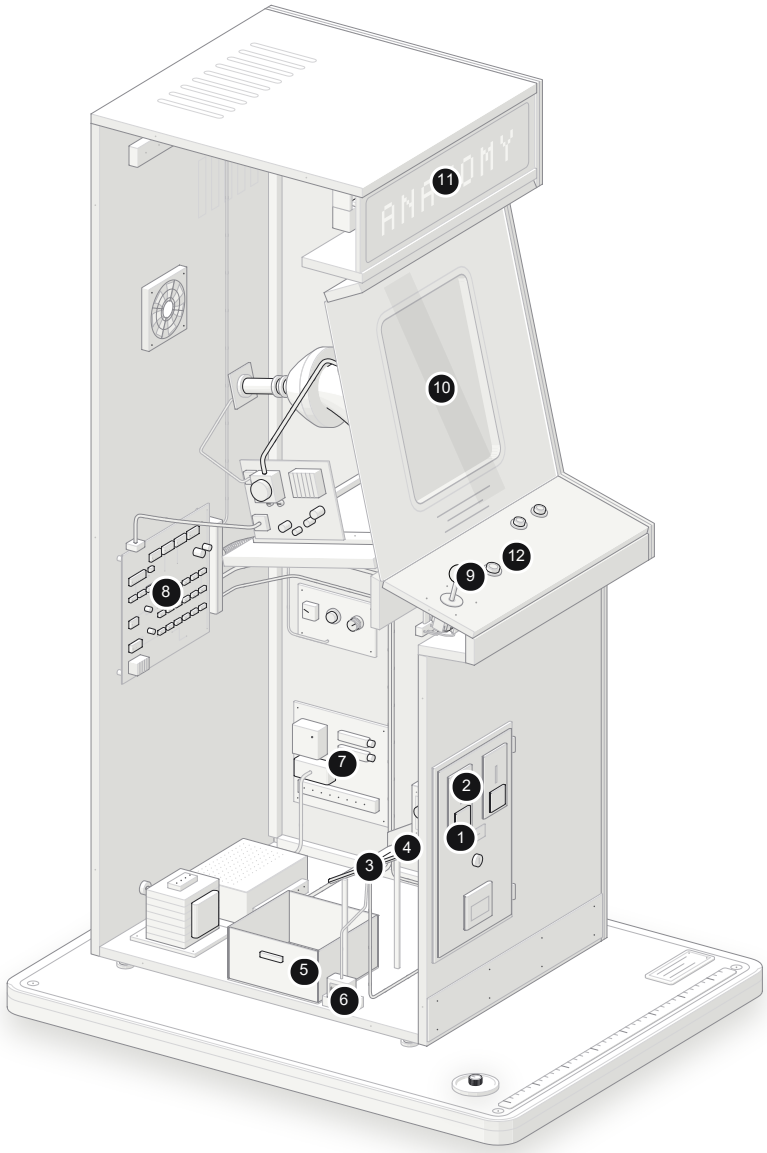


PARTS


01 Coin door and slot
02 Coin mech
03 Coin switch
04 Coin chute
05 Cash box
06 Coin meter
07 Power relay, transformer and supply
08 Game board
09 Harness and edge connector
10 Monitor: CRT and chassis
11 Marquee lamp
12 Control panel

SPECIFICATION


Style	Upright, 1981
Height	178 cm
Coin	US quarter, 24.26 mm
Drop	27 cm into the cash box
Picture	224 × 288, on its side
Line rate	15.734 kHz
Warm-up	About 2 s

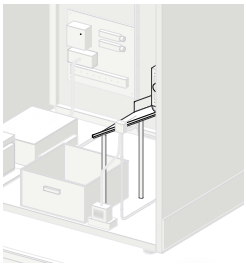


01
The mech checks the coin

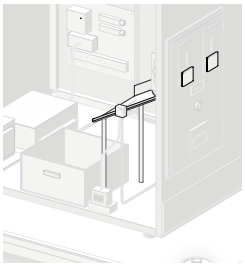


02
It brushes the switch wire

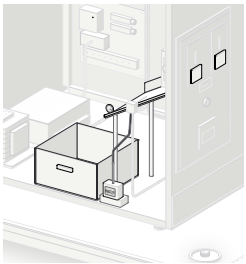

03
It drops into the cash box

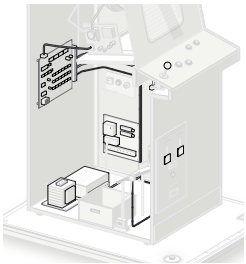

04
The relay wakes the cabinet

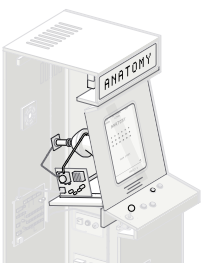

05
Attract mode