Arcade cabinet

AN-002
HOW IT WORKS
UPRIGHT, 1981 STYLE

What happens when you drop in a coin?

The quarter rolls through a mech that checks it, then falls past a thin switch wire into the cash box. That one pulse counts the coin, latches the power on, warms the picture tube, tests the game board and starts the attract mode.


178 cm
CABINET HEIGHT

24.26 mm
A US QUARTER

27 cm
DROP INTO THE CASH BOX

224 × 288 px
PICTURE, ON ITS SIDE

15.734 kHz
LINE RATE

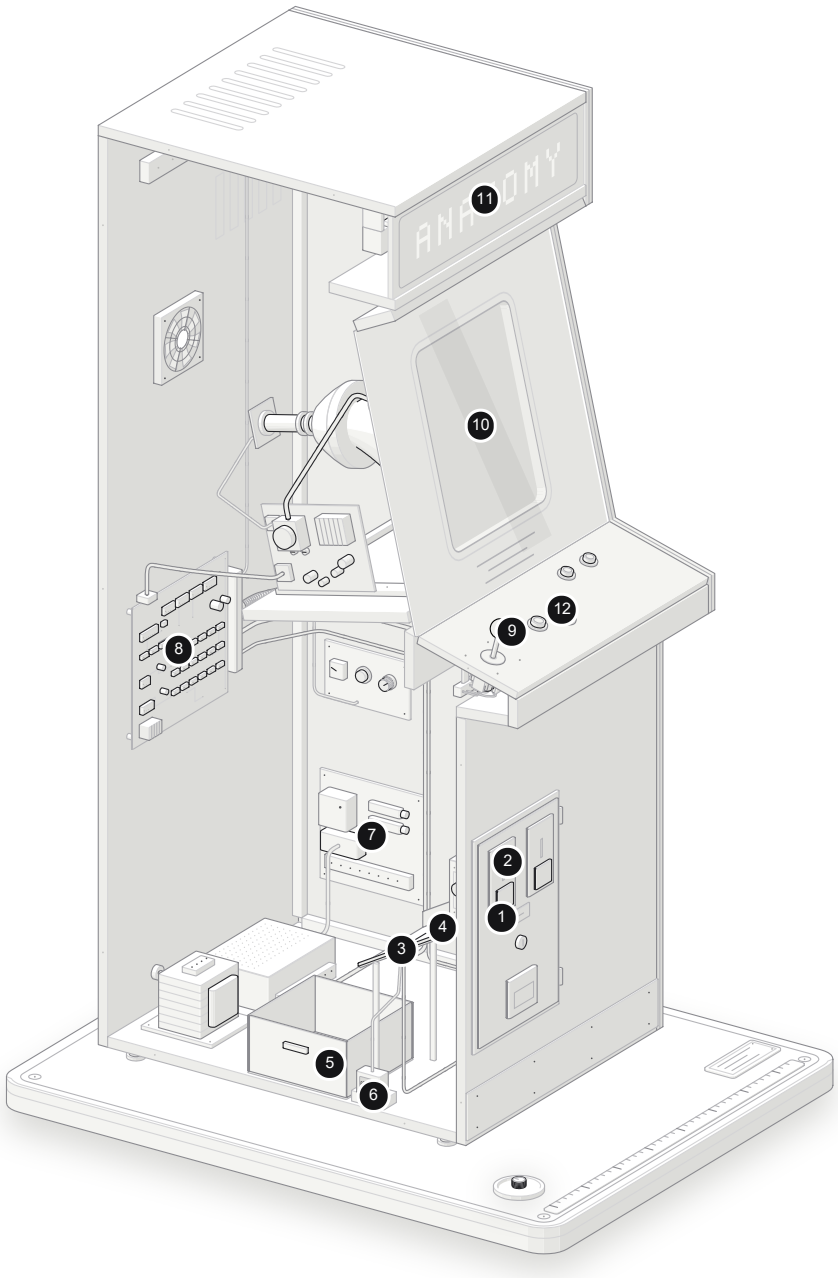

01 **Coin door and slot**
The quarter goes in here; a reject comes back out of the return.

02 **Coin mech**
Checks the coin's size and metal before it lets it through.

03 **Coin switch**
A thin wire the falling coin brushes past: one pulse per coin.

04 **Coin chute**
A 30° slope the coin rolls down before it drops.

05 **Cash box**
An open box the coin lands in, 27 cm below the chute.

06 **Coin meter**
Counts every coin, pulsed by the switch.

07 **Power relay, transformer and supply**
The first coin latches the relay and wakes the whole cabinet.

08 **Game board**
CPU, RAM and ROMs: tests itself, then runs the game.

09 **Harness and edge connector**
Carries the coin line, the controls and the video to the board.

10 **Monitor: CRT and chassis**
Lies on its side for a vertical game; warms up in about 2 s.

11 **Marquee lamp**
A fluorescent tube that strikes when the power comes on.

12 **Control panel**
The stick closes a microswitch underneath; buttons fire and start.