Power Specifications	compliance voltage：AC165V～265V
	compliance supply frequency：50～60Hz
Functional unit interface	Audio Input、Audio output、Net input
	Constant pressure audio (100V) Input、8 zones
	Short circuit output、Controlled Power output、AC220V Power Input
Support network protocol	TCP/IP、UDP、ARP、ICMP、IGMP protocol
Network chip rate	10bps
audio coding	MP2、MP3、PCM、ADPCM
audio sampling	22.050kHz～44.1kHz, 16bit
Transmission bit rate	16kbps～192kbps
SNR	>90dB
frequency response	20Hz～16KHz
Supply control output port	1600W [1]
8 zone control output port	8*200W
8 road strong cutting control	8*DC24V/1A

Fault Exclude

Fault phenomenon	Failure Cause and Trouble Removal
Why it appears "terminal network services (UDP) start fail" warning within the process of start server software?	Appearing this warning information, it's usually the local network connection has been disconnected, please connect the local network cable well and exit the software, then restart it.
Why scanning tools can't scan the terminal?	1. Please check the computer opened firewall or other software with data interception function or not; 2. The computer network card is incompatible; 3. Please use another computer to scan it;

Packing lists


Installation manual 1pc


Removable terminal blocks (3.81-4P) 4pcs


Audio cable-(4-RCA) 1pc


Power line1pc (3*1.0㎜²/1.5m)

V1.1B151204

IP NETWORK AUDIO TERMINAL

Installation Instructions




2015 Edition

IP NETWORK PUBLIC ADDRESS SYSTEM


Interface Instruction

Front

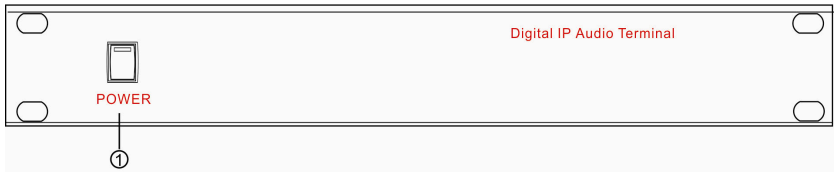

①POWER: The power switch and power indicator

Back

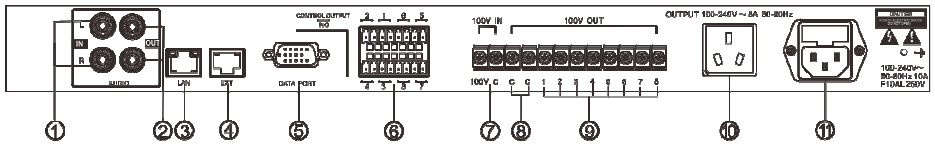

①Audio input port：Connect the external sound sources to this port, the terminal initiated the broadcasting, it can play the external audio sources out.

②Audio output port：This port output the restored audio signal, it can be used as audio source, access to the audio pre-amplifier, audio power amplifier and mixer, etc.

③ Network input port：Insert the server relevant cable to make the terminal login normally.

④ Control panel：Connect the control panel can realize the volume plus/ minus and channels selection etc.

⑤ Upgrade port：Used for product upgrade and download.

⑥ Short circuit output port： There are total eight road short circuit output. Short circuit output port with 2 pins, this two pins usually in open circuit state, when the terminal received an short circuit output signal from server, two pins will automatically short circuited together to make the short circuit function . The maximum load current of short circuit output is 1A, and the highest voltage is AC50V (or DC24V);

⑦ Constant voltage (100V) audio input：Accessed the constant voltage (100V) audio signal, it's convenient for remote device make real-time monitoring to the audio terminal and the constant voltage amplifier work condition, and it`s convenient to debugging and troubleshooting.

⑧Constant voltage power output interface: A cold port respectively corresponding to the four hot port.


⑨Zone control output interface: with 8 zone control output interface; Cooperate with service software , can control Constant pressure audio（100V）'s signal out from which zone.

⑩Power control output port: Under default situation, the power supply control output without voltage output. And the power control output will output AC220V voltage only when the audio terminal received the audio, the audio terminal start to free AOD or the


audio terminal received the signal of enable power supply control output. The maximum output capacity of power supply control output is 1600W.

⑪ AC220V power input port. Audio terminal power input

Connection Diagram

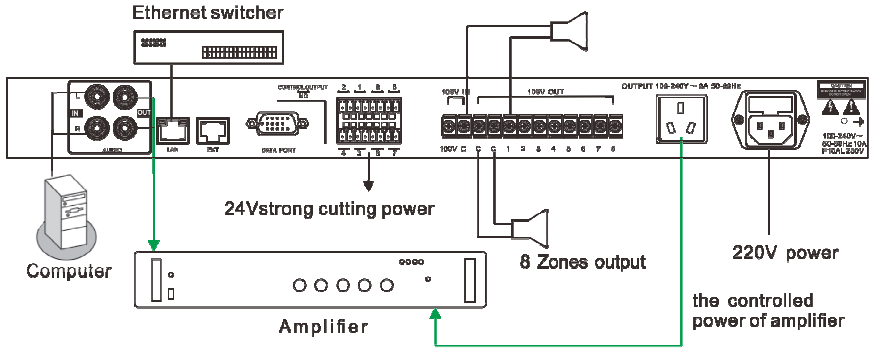

Schematic Diagram of Installation

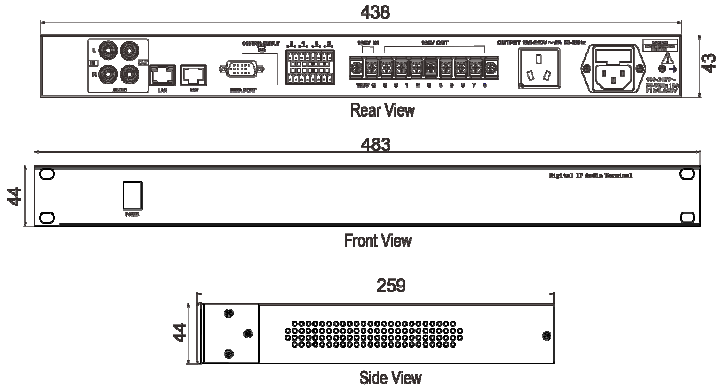

IP Network Terminal Setting

1. Using couplet cable to connect to computer and terminal. From [CD: \ tools \] directory to find and run "IP configuration tool" audio terminal, after start it , please enter the default password "123456".

2. From the right menu choose【Mandatory config】, then fill the correct parameters in the【terminal parameters】, click "send parameters" button to complete the IP parameters Settings.

Specifications, Functional Unit and Parameters

Remark: please refer to the user manual for more detailed information.