IP NETWORK AUDIO TERMINAL

User Manual



2015 Edition

IP NETWORK PUBLIC ADDRESS SYSTEM

Contents

Summarize 1
Safety Precaution 1
Product Introduction 2
Hardware Interface Introduction 2
Introduction 3
Packing Lists 3
Wiring 4
Basic Network Setting 5
Basic Function 6
Receiving Ringing/ Program/ Broadcast/ Alarm 6
Zone Control 6
Fault Exclude 8
Copyright Statement 9

Summarize

Safety precaution

Please abide by the warning and the relevant safety tips.

Please take this manual in convenient place after you reading the guide for future reference.

Warning

 **The sign means there is potential safety hazard, when operate wrong may result in death or serious injury.**

 **The sign is used to remind the user that attached is the important operation and maintenance data.**

Setting and Installation

（1）Avoid being wet with the water.

Don’t make the machine or exposed to rain water or other liquid contamination of the environment, or lead to fire or get an electric shock.

（2）Don’t use unspecified voltage.

Using the marked voltage on the machine.

Using more than the logo of voltage could lead to fire or shock.

（3）Don’t scratch the power cord.

Don’t scratch the power cord or cut it.

Simultaneous, keep the power line far way from heated objects, put heavy things on it will lead to fires or electric shock.

Using machine

（1）In case of the anomalies

Please turn off the power supply immediately when finding the abnormal phenomena, please connect with the agency.if you continue to use, it will likely fires or shock.

·The smoke or odor of the machine.

·The inside of the machine is flooded by water or foreign bodies intrusion.

·Machine falling or machine shell damage.

·The power cord damage(wire core is exposed of broken, etc)

·Fault(eg: it can’t network, no sound ..etc)

（2）Don’t open the machine internal or modify the machine

Do not let foreign matters invade the machines internal.

Don’t let the metal items or inflammable objects inserting machine such as foreign inserting machines or throw into the vents machines internal, otherwise will likely cause fires or electric shock.

（3）Please do not touch it when thundering

To avoid electric shock, please do not touch the machine and the plug when lightning, etc.

（4）Please do not place containers with liquid or small metal objects on machine above

If gets upset containers, and let the fluid inflow to the machine that will likely fires or cause shock.

（5）Do not open the machine internal or modify the machine

The machine internal contains high voltage parts, once open the cover or modify the machine, it will likely fires or cause shock.

All the maintenance and other machine modification should be operated by professional personnel.

（6）Maintenance and the precautions for not using in a long time

While maintenance, if the machine is not using for 10 days or more, please shut off power supply switch for safety. If do not

comply with this provision, it will likely cause electric shock or fires.

Product Introduction


IP network audio terminal is embedded with independent intellectual property rights IP Audio digital network audio technology, it`s equipped with external audio line input port. a stereo line output port, a controlled power supply output port, an short-circuit input port ,eight short-circuit output port and a constant voltage(100V)audio input ports etc. it can be used as audio decoding.



- Rack-mount design (1U).
- Adopting high-speed industrial-grade chips (ARM+DSP), start-up time ≤ 1s.
- Comes with one audio line output to connect the external power amplifier to realize the audio playing (it with loop testing, it can remote monitor).
- With unique 8 zones function， it`s suitable for multi-zones and same audio source environment.
- Built-in power supply control, it will auto- turn on/off the external device(power amplifiers) to avoid the external device power supply at free time according to there have voice or not.
- With 8 short circuit output, it can control 24V force cutting power devices.
- It can receive broadcasting from the server and output from the local line.
- Works everywhere as long as Ethernet available, support across network segment and across route.


Hardware Interface Introduction

Front

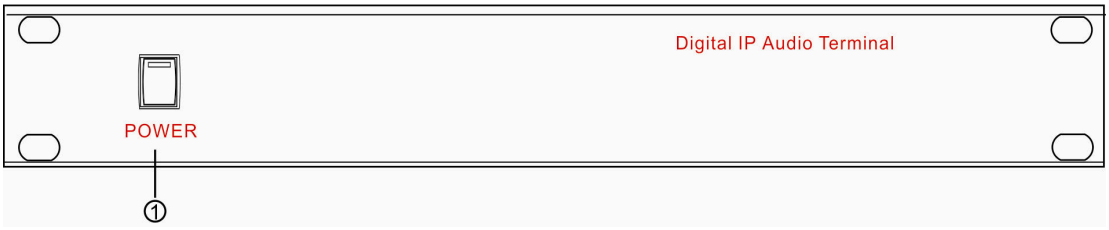

①POWER: The power switch and power indicator, press down to turn on and the indicator light on; Press up to turn off and the indicator light off.

Back

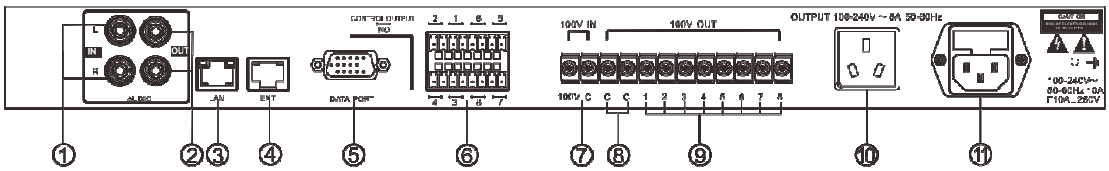

①Audio input port：Connect the external sound sources (eg: computer, DVD..etc) to this port, the terminal initiated the broadcasting, it can play the external audio sources out.

②Audio output port：This port output the restored audio signal, it can be used as audio source, access to the audio pre-amplifier, audio power amplifier and mixer, etc.

③Network input port：Connect the server and terminal by cable.

④Debug backup interface: It can used as debugging, extension...etc.

⑤Upgrade port：Used for product upgrade and download.

⑥Short circuit output port： There are total eight road short circuit output. Short circuit output port with 2 pins, this two pins usually in open circuit state, when the terminal received an short circuit output signal from server, two pins will automatically short circuited together to make the short circuit function . The maximum load current of short circuit output is DC24V/1A.

⑦Constant voltage (100V) audio input: Access the constant voltage (100V) audio signal, it's convenient for remote device make real-time monitoring to the audio terminal and the constant voltage amplifier work condition, and it`s convenient to debugging and troubleshooting. It`s used to connect constant voltage power amplifier constant voltage output interface, "C" connect negative-end, "100V"connect positive-end.

⑧Constant voltage power output interface: A cold port is corresponding to 4 hot port

⑨Zone control output interface: It`s totally 8 zones to control output interface; Cooperate with server software to control constant pressure audio（100V）connected audio signal and output from any one zone.

⑩Power control output port: Under default situation, the power supply control output without voltage output. And the power control output will output AC220V voltage only when the audio terminal received the audio, the audio terminal start to free AOD or the audio terminal received the signal of enable power supply control output. The maximum output capacity of power supply control output is 1600W.

⑪AC220V power input port: Audio terminal power input

Introduction

Packing Lists

IP network audio terminal contains the following accessories. Please check the accessories before installation, if you find any missing, please contact your supplier.


（1）IP Network audio Terminal 1pc



（2）Power line (3*1.0mm^2/1.5m) 1pc



（3）Amphenol connector (3.81-4P) 4pcs

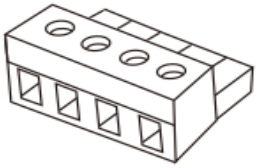


（4）Audio line (4-ARC) 1pc



（5）Installation manual 1pc



Wiring

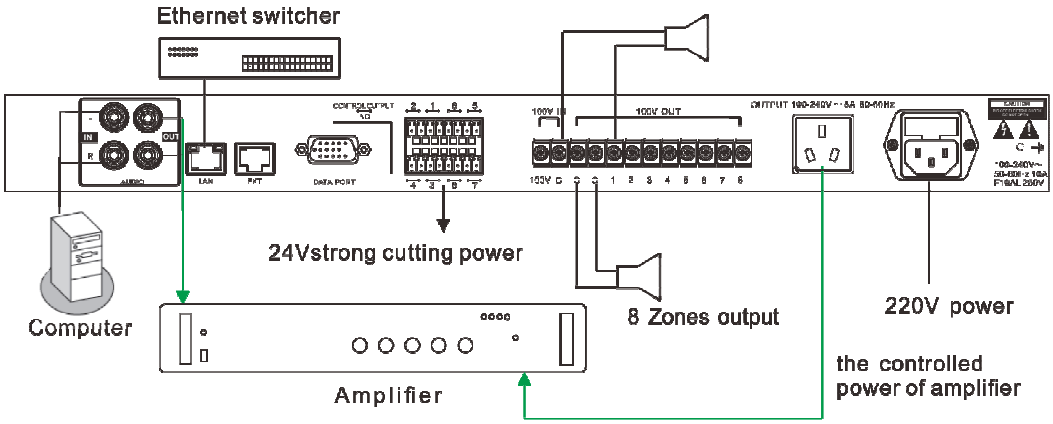


（1）Audio input interface, it can connect PC ,DVD , and other external analog audio source.

（2）Audio output interface, it can connect to power amplifier.

（3）Terminal “LAN” port can connect to switcher network output interface.

（4）Short circuit output interface

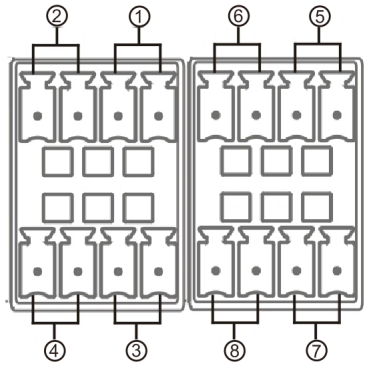

①Force switch short circuit output control 1

② Force switch short circuit output control 2

③ Force switch short circuit output control 3

④ Force switch short circuit output control 4

⑤ Force switch short circuit output control 5

⑥Force switch short circuit output control 6

⑦ Force switch short circuit output control 7


⑧ Force switch short circuit output control 8

Force switch power supply

In real- time broadcasting, timing ringing, fire alarm ...etc these server software tasks, choose the force off synchronizing signal can control the force switch power supply. According to the chosen zones , the terminal will close corresponding short circuit output interface

（5）Constant voltage (100 v) audio input interface: It can connect with audio amplifier (Access to the power amplifier output audio signal)

（6）Zone control output interface

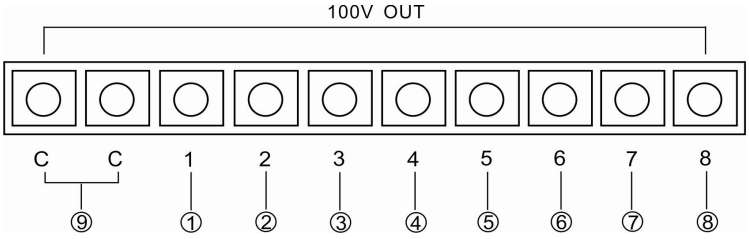

①zone 1 power output positive interface

②zone 2 power output positive interface

③zone 3 power output positive interface

④zone 4 power output positive interface

⑤zone 5 power output positive interface

⑥zone 6 power output positive interface

⑦zone 7 power output positive interface

⑧zone8 power output positive interface

⑨Constant voltage output interface,1 “C”(negative)is corresponding to 4 positive end(eg:①、②、③、④).

（7）Power supply control output interface: connect with amplifier ‘s power supply .

（8）The double-end triangle power end connect to IP audio terminal, the other end connect to the power socket.


Basic Network Setting

Connect the cable and power on as per the installation manual, then revise the terminal network parameters according to the live environment.


There have below two methods:

Terminal Equipment Scanning Tools

（1）From [CD: \ tools \] directory to find and run "IP configuration tool" audio terminal, after start it , please enter the default password "123456".

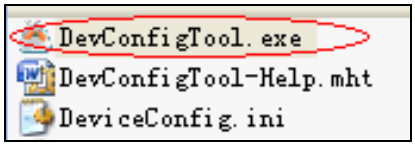

（2）From the right menu choose【Mandatory config】, then fill the correct parameters in the【terminal parameters】, click "send parameters" button to complete the IP parameters Settings.

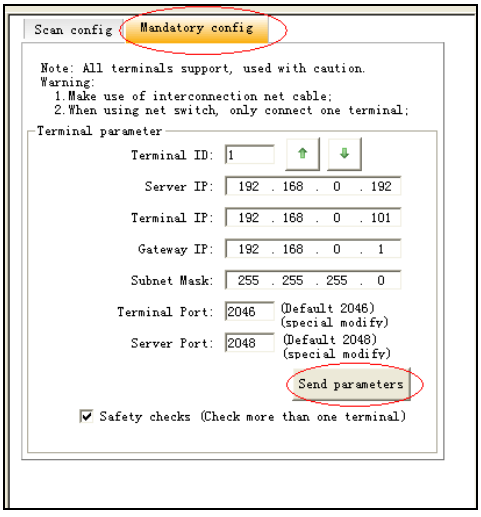

Note:

1、Please use the administrator mode to run and close the firewall or other related software when using the Windo ws7 operating system;


2、Terminal equipment scanning tools can only configure one terminal at one time. Please make sure that a comp uter only connect one target terminal when using this method.

Basic Function

Receiving ringing/ program/ broadcast/ alarm

The target area selection box of real-time broadcasting, timing ringing ,the fire alarm...etc all added one partition choose level that can control any one zone switch;


According to the server software command to run automatically, without pressing buttons.The amplifier control the power auto-open when receiving the network broadcasting task, it will auto-off when the task is finished.

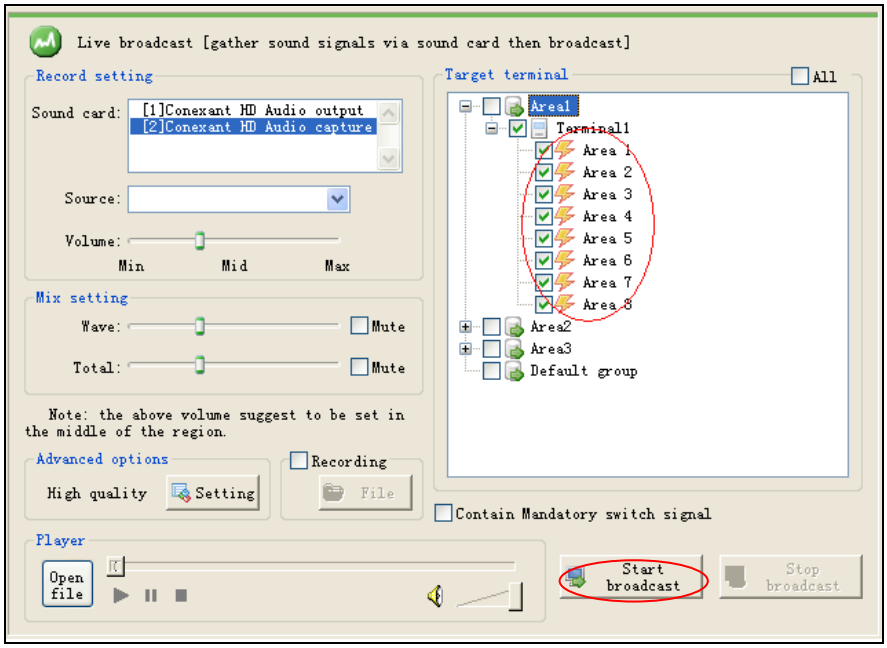


zone control

Choose the target area or select box and choose the corresponding zones from it, then it can control the corresponding zones.

eg: under the timing ringing task, select the target area “ zone 3 (the playground) “in the "edit ringing task" dialog box: then choose the “zone control 3” in the next level of zone control; Set the "audio files " and "execution time of ringing " , then choose the "synchronous control the force switch signal" option box, and finally click "ok" button to save the current Settings.

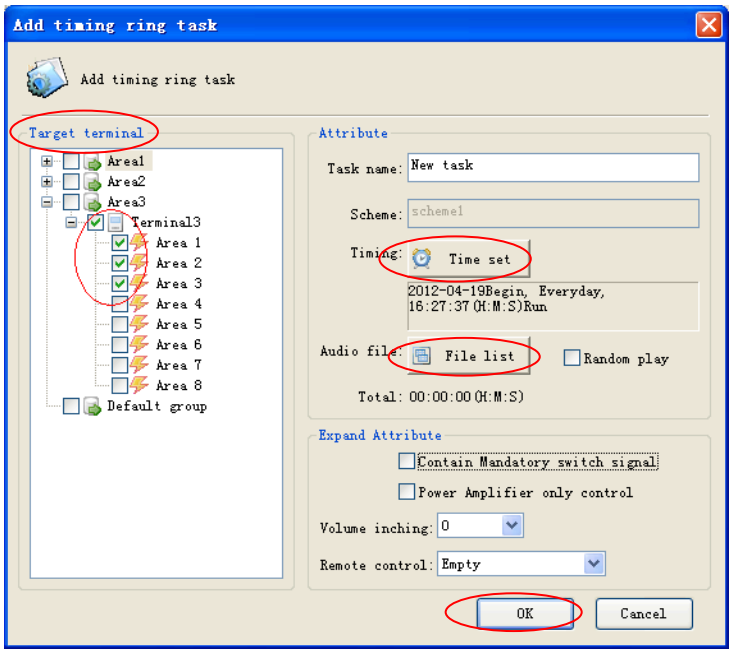
Add timing ring task
Add timing ring task
Target terminal
Area1
Area2
Area3
Terminal3
Area 1
Area 2
Area 3
Area 4
Area 5
Area 6
Area 7
Area 8
Default group
Attribute
Task name: New task
Scheme: scheme1
Timing: Time set
2012-04-19Begin, Everyday,
16:27:37(H:M:S)Run
Audio file: File list
Random play
Total: 00:00:00(H:M:S)
Expand Attribute
Contain Mandatory switch signal
Power Amplifier only control
Volume inching: 0
Remote control: Empty
OK
Cancel

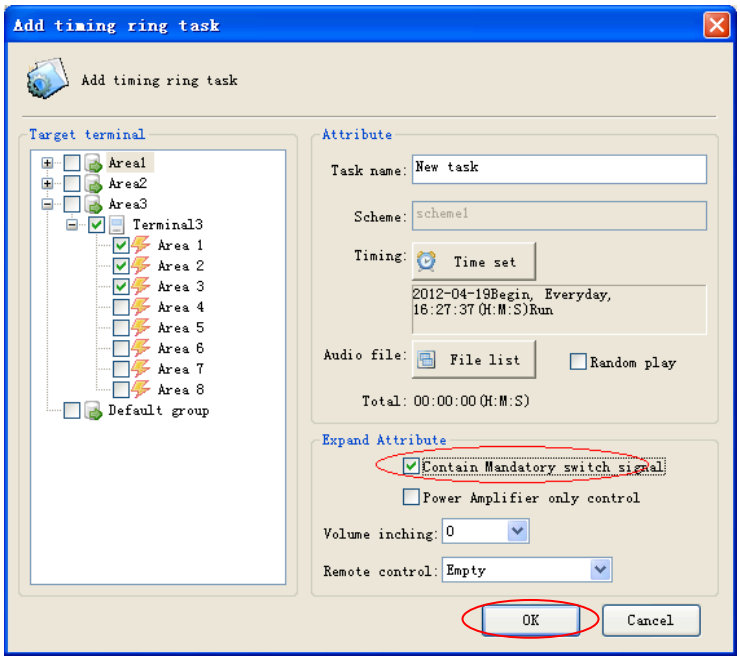
Add timing ring task
Add timing ring task
Target terminal
Area1
Area2
Area3
Terminal3
Area 1
Area 2
Area 3
Area 4
Area 5
Area 6
Area 7
Area 8
Default group
Attribute
Task name: New task
Scheme: scheme1
Timing: Time set
2012-04-19Begin, Everyday,
16:27:37(H:M:S)Run
Audio file: File list
Random play
Total: 00:00:00(H:M:S)
Expand Attribute
Contain Mandatory switch signal
Power Amplifier only control
Volume inching: 0
Remote control: Empty
OK
Cancel

Fault Exclude

Why it appears "terminal network services (UDP) start fail" warning within the process of start server software?

Appearing this warning information, it's usually the local network connection has been disconnected, please connect the local network cable well and exit the software, then restart it.

Why the terminal is still "offline"?

1).Check the software server and the main controller is normal opened or not. It`s required to close all firewall before open the software server (including system built-in firewall and other antivirus software firewall) .

2).Check the network connection is normal or not. After the terminal powered on, the network port green light is norm on, meantime the orange light will be short and fast flash, it means the network cable hard-connected normal. If the network port green light is not on, it means the network hard-connected problem, please check the terminal network cable and switcher whether they work normal, damaged and disconnect or not etc.

3).Check the terminal IP setting. Please check the terminal ID, sever IP, local IP, gateway IP ...etc parameters.

Copyright statement

Copyright

This manual`s copyright is belonged to our company , it`s prohibited to excerpt or copy it and it can`t spread in any form if without our permission.

According to law, copying is including translate into other languages or convert to other formats.

When this manual is spreading in the network media, our company allow to download or print it for personal use.

It`s prohibited to modify any parts of this manual or use for commercial purposes, our company won`t take any responsibility for the damage or loss caused by the illegal modification or converting documents.

Warranty

About this manual information, it`s subject to change without any notice. This manual try to provide the most accurate statement, information and suggestion, it`s not guarantee for any express or hint. The user should take full responsibility for the product application.

Our company won`t make any guarantee for this manual, it`s including but not limited to the marketability and specific purpose guarantee. We won`t undertake any responsibility for any indirect or incidental losses which is caused by improper use of this manual.

V1. 1B151204