Power Voltage	DC9V/2.5A
Consumption	≤5W
Interface	audio input; audio output
	power input
	口 network input
	Mic input
Network Protocol	TCP/IP、UDP、ARP、ICMP、IGMP protocol
Network Chip Rate	10/100Mbps
Audio Coding	MP2/MP3/PCM/ADPCM
Audio Sampling	8kHz～22.050kHz, 16bit
Transmit Rate	16kbps-192kbps
SNR	>90dB
Frequency Range	20Hz-16KHz
LCD	TFT 1.8'LCD 128x160

Malfunction Test

Fault phenomenon	Cause and ways
Why the terminal always shows "offline"?	1. It`s required to close all firewall or with data interception function software before open the software server 2. Network card not compatible with terminal. 3. Using other computer to scan the machine.
Why it appear "terminal network services (UDP) start fail" warning in the process of start services software?	Appearing this warning information, it's usually the local server network connection has been disconnected, please connect the local network cable well and exit the software, then restart it.

Packing Lists



AC adapter 1pc
（DC9V/2.5A）



Installation
Instructions 1pc



spong suit
1pc




Microphone rod
1PC（DC-300B）

V1. 1B150921

IP NETWORK PAGING MICROPHONE

Installation Instructions

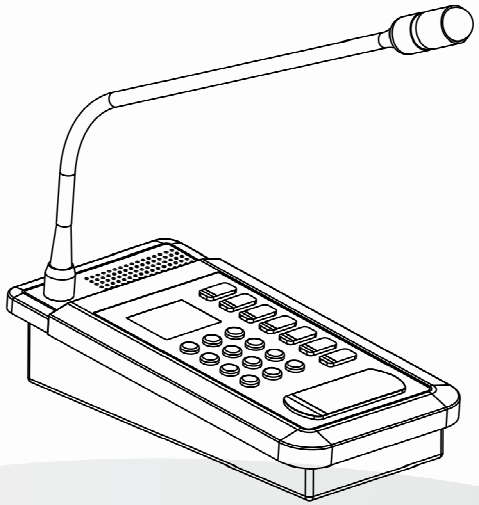


2015 Version

IP NETWORK PUBLIC ADDRESS SYSTEM


Interface Introduction

Front

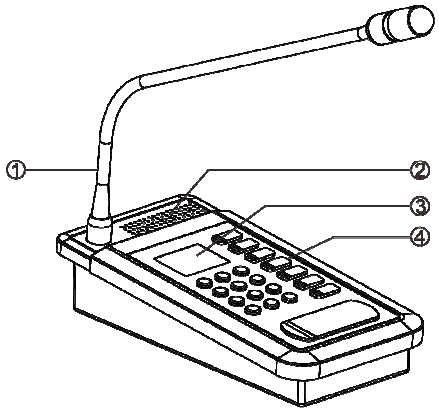

①Mic stand: collect the live voice
②speaker: restore the remote and local voice
③LCD screen: display the device login status, time, date, volume and terminal IP parameters...etc
④Keyboard:input channel and accept the input command


Back

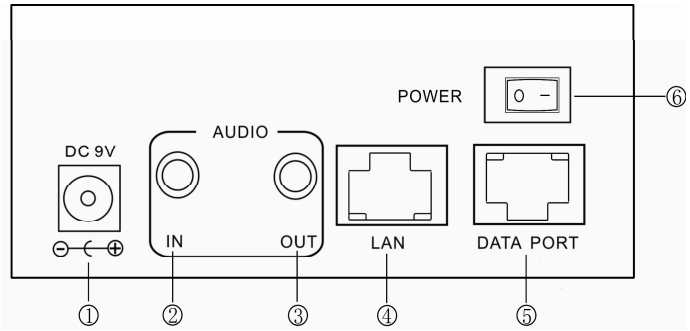


①Power input: connect to DC 9V/2.5A power supply.
②Line input port: the default is without line input function, but it has broadcast prompt tone.
③Line output port: output terminal audio signal.
④Network port: use the Ethernet cable connect server and terminal.
⑤Update port: For device update or download.
⑥Power switch: “O” stand for turn off the power, “—” stand for open the power.

Note: please refer to the user manual for more details.

Connection Diagram

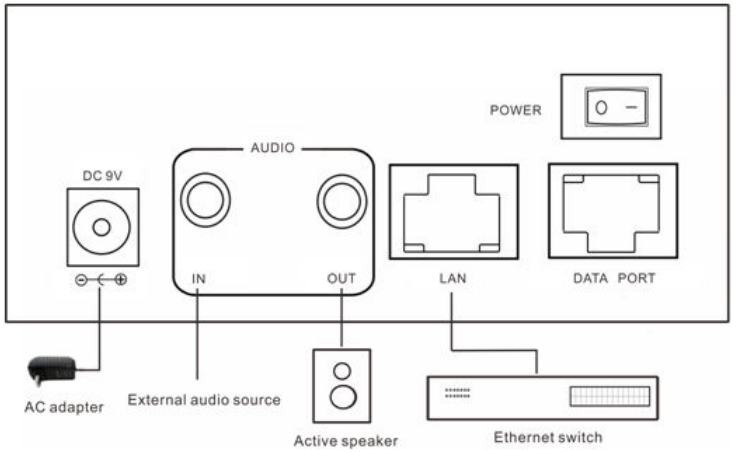

Appearance Installation Diagram

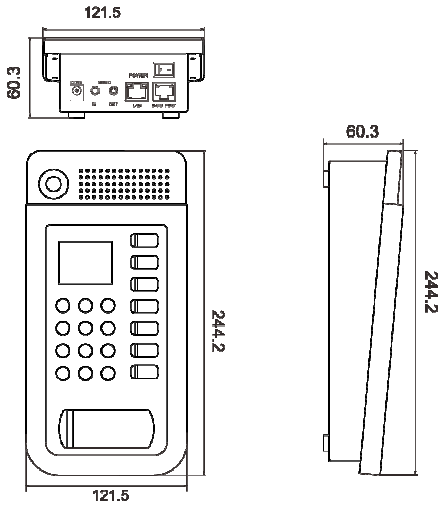

IP Network Paging Microphone Settings

Terminal IP

(1)Under "online-free" state, press set key, input the default password "123456", press 【OK】 to enter the interface.

(2)Press【↑】 or 【↓】 key can move cursor position, press【0】 -【9】 key can revise ID and IP parameters. After finishing setting, press【OK】 key to exit and save it.

Specifications, Functional Unit and Parameters